Electronic Services - Hayward, Ca
M20391X

INSTRUCTION MANUAL

DANA®

PUBLICATION NO. 980439

4800

DANA LABORATORIES, INC.
2401 CAMPUS DRIVE
IRVINE, CALIFORNIA 92715

DANA®

TELEPHONE (714) 833-1234
TELETYPE 910-595-1136
TELEX 678-341

PUBLICATION DATE: MAY 1977

Copyright © 1977 by Dana Laboratories, Inc. Printed in the United States of America. All rights reserved.
This book or parts thereof may not be reproduced in any form without written permission of the publishers.

WARRANTY

Within one year of purchase, Dana Laboratories will repair or replace your instrument, at our option, if in any way it is defective in material or workmanship. All parts and labor charges will be paid by Dana Laboratories. Just call Dana Product Service at (714)833-1234 collect in California, for assistance. We will advise the proper shipping address for your prepaid shipment. Your instrument will be returned to you freight prepaid.

PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Dana Laboratories, Inc., and shall not, without express written permission of Dana Laboratories, Inc., be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Dana Laboratories, Inc. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents which specify procurement of products from Dana Laboratories, Inc.

FOR YOUR SAFETY

Before undertaking any maintenance procedure, whether it be a specific troubleshooting or maintenance procedure described herein or an exploratory procedure aimed at determining whether there has been a malfunction, read the applicable section of this manual and note carefully the WARNING and CAUTION notices contained therein.

The equipment described in this manual contains voltages hazardous to human life and safety and which is capable of inflicting personal injury. The cautionary and warning notes are included in this manual to alert operator and maintenance personnel to the electrical hazards and thus prevent personal injury and damage to equipment.

If this instrument is to be powered from the AC Mains through an autotransformer (such as a Variac or equivalent) ensure that the instrument common connector is connected to the ground (earth) connection of the power mains.

Before operating the unit ensure that the protective conductor (green wire) is connected to the ground (earth) protective conductor of the power outlet. Do not defeat the protective feature of the third protective conductor in the power cord by using a two conductor extension cord or a three-prong/two-prong adapter.

Maintenance and calibration procedures contained in this manual sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures carefully and heed Warnings to avoid "live" circuit points to ensure your personal safety.

Before operating this instrument.

1. Ensure that the instrument is configured to operate on the voltage available at the power source. See Installation section.
2. Ensure that the proper fuse is in place in the instrument for the power source on which the instrument is to be operated.
3. Ensure that all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

FIRST CLASS
PERMIT NO. 5473
IRVINE,
CALIFORNIA

BUSINESS REPLY MAIL
No Postage Stamp Necessary If Mailed In The United States

Postage Will Be Paid By

Dana Laboratories, Inc.
2401 Campus Drive
P.O. Box C-19541
Irvine, California 92713

Attn: Marketing Department

TABLE OF CONTENTS

Section	Title	Page
1	**GENERAL DESCRIPTION**	**1-1**
1.1	Introduction	1-1
1.7	Options	1-1
1.9	Model 12 Preamp	1-2
1.11	Model 50 Preamp/Ohms Converter	1-2
1.13	Model 21 AC Converter	1-2
1.15	Model 31 AC Converter	1-2
1.17	Model 70 Remote Programming	1-2
1.19	Rack-Mounting Flanges	1-3
1.21	High-Voltage Probe (641)	1-3
1.23	Current Shunt Set (651)	1-3
1.25	Electrical Description	1-3
1.34	Mechanical Description	1-3
1.40	Specifications	1-5
2	**INSTALLATION AND OPERATION**	**2-1**
2.1	Unpacking and Inspection	2-1
2.4	Bench Operation	2-1
2.6	Rack Mounting	2-1
2.8	Power Connections	2-1
2.12	Input/Output Cabling	2-2
2.13	Binding Posts	2-2
2.16	Rear Input Connector	2-2
2.18	Printer Output	2-2
2.21	Numerical Data	2-4
2.23	Function Data	2-4
2.25	Range Data	2-4
2.27	PRINT Command	2-4
2.29	"No" Indication	2-4
2.31	DVM (Read) Command	2-4
2.33	Manual Operation	2-4
2.34	Controls	2-4
2.36	Display	2-6
2.39	Remote Programming	2-6
2.41	External Program Control	2-6
2.43	Function Programming	2-6
2.46	Range Programming	2-6
2.48	Remote (Output Flag)	2-6
2.50	+ Five Volts	2-6
2.52	Read Commands	2-8
2.55	Measurement Connections	2-8
2.56	Basic Voltage Measurement	2-8
2.60	Ohms Measurement	2-8
2.74	Ratio Measurements	2-11
2.76	Adding/Removing Accessories	2-12
3	**SPECIFICATION TESTS**	**3-1**
3.1	General	3-1
3.3	Preparation	3-1

TABLE OF CONTENTS continued

Section	Title	Page
3.5	Equipment	3-1
3.7	Procedure	3-1
4	**THEORY OF OPERATION**	**4-1**
4.1	General	4-1
4.5	Program States	4-1
4.7	PGM-0	4-1
4.9	PGM-1	4-1
4.11	PGM-2	4-1
4.13	PGM-3	4-1
4.15	Board Descriptions	4-4
4.17	Interconnection & Logic Board	4-4
4.28	Attenuator & Gain Networks	4-5
4.30	Display Board	4-5
4.32	Switching Bypass Card	4-5
4.34	Switching Card	4-5
4.36	Isolator Assembly	4-7
4.38	Digitizer Assembly	4-7
4.41	Millivolt Preamplifier	4-10
4.44	AC Converters	4-11
4.46	DIAC Scaling Amplifier	4-11
4.48	DIAC Converter	4-13
4.50	RMS AC Converter	4-14
4.55	Ohms/Millivolt Converter Preamp	4-15
4.58	Program Board	4-16
5	**MAINTENANCE**	**5-1**
5.1	General	5-1
5.3	Calibration	5-1
5.5	Required Equipment	5-1
5.7	Disassembly for Calibration	5-1
5.9	DC Calibration	5-2
5.15	mV Accessory Calibration	5-4
5.19	Ohms-mV Accessory Calibration	5-4
5.25	DIAC Calibration (Model 21)	5-6
5.32	Scaling Amplifier Low Frequency Gain Adjustment	5-8
5.34	RMS AC Calibration (Model 31)	5-8
5.35	Troubleshooting	5-10
5.37	Preliminary Checks	5-10
5.38	DC Function Troubleshooting Procedure	5-10
5.39	Range	5-12
5.41	Auto Range	5-12
5.43	Program	5-12
5.45	Analog Troubleshooting	5-20
5.47	Isolator	5-20
5.50	Millivolts	5-20
5.52	Ohms Converter	5-20
5.54	DIAC Scaling Amplifier	5-20
5.56	DIAC Converter	5-20
5.58	RMS AC Converter	5-20
5.60	Board Revision	5-20
6	**SCHEMATICS**	**6-1**
7	**PARTS LIST**	**7-1**

LIST OF ILLUSTRATIONS

Figure	Title	Page
1.1	Model 4800	1-1
1.2	Block Diagram – DC Measurement	1-2
1.3	Simplified Integrator Circuit	1-3
1.4	Printed Circuit Board Locations	1-4
1.5	Rear Panel	1-4
1.6	Dimensions	1-5
1.7	Maximum RMS Input Voltage	1-7
2.1	Rack Mount Installation	2-1
2.2	Line Voltage Jumpers – Export Models Only	2-1
2.3	Cabling Diagram, Binding Posts	2-2
2.4	Cabling Diagram, Rear Input	2-2
2.5	PRINTER OUTPUT Connector J201 (Viking)	2-3
2.6	PRINTER OUTPUT Connector J201 (Cinch)	2-3
2.7	Read Command	2-4
2.8	Front Panel	2-4
2.9	Readout	2-6
2.10	PROGRAM INPUT Connector J202 (Viking)	2-7
2.11	PROGRAM INPUT Connector J202 (Cinch)	2-7
2.12	Basic Voltage Measurement Connections	2-8
2.13	Two Wire Ohms Measurements	2-9
2.14	Four Wire Ohms Measurement	2-10
2.15	Jumper Location	2-12
4.1	Block Diagram 4800 DVM	4-2
4.2	Sequence Timing Diagram	4-3
4.3	Simplified Schematic – Switching Card	4-6
4.4	Simplified Schematic – Isolator	4-7
4.5	Simplified Schematic – Digitizer	4-8
4.6	Simplified Schematic – Millivolts Preamp of Millivolts/Ohms Converter Board	4-9
4.7	Simplified Schematic – DIAC Scaling Amplifier	4-10
4.8	Simplified Schematic – DIAC Converter	4-11
4.9	Simplified Schematic – RMS AC Converter	4-12
4.10	Simplified Schematic – Ohms Converter of Millivolts/Ohms Converter Board	4-13
4.11	Functional Diagram, Ohms Measuring System	4-14
5.1	Test Points – Isolator Voltage Zero	5-2
5.2	Adjustment Locations	5-3
5.3	Test Point – mV Offset	5-5
5.4	Test Points – DIAC Converter	5-7
5.5	Test Points – RMS AC Converter	5-9
5.6	Timing Diagram	5-10
5.7	Auto Range Sequence	5-12
5.8	Signal Flow Diagram	5-16
6.1	Schematic, Interconnection and Logic	6-2
6.2	Layout, Interconnection and Logic	6-6
6.3	Schematic, Power Supply	6-7
6.4	Layout, Switching	6-8
6.5	Schematic, Switching	6-9
6.6	Layout, Preamp (mV)	6-10
6.7	Schematic, Preamp (mV)	6-11
6.8	Layout, Preamp/Ohms Converter	6-12
6.9	Schematic, Preamp/Ohms Converter	6-13

LIST OF ILLUSTRATIONS continued

Figure	Title	Page
6.10	Layout, Scaling Amplifier	6-14
6.11	Schematic, Scaling Amplifier	6-15
6.12	Layout, DIAC Converter	6-16
6.13	Schematic, DIAC Converter	6-17
6.14	Layout, RMS AC Converter	6-18
6.15	Schematic, RMS AC Converter	6-19
6.16	Layout, Isolator	6-20
6.17	Schematic, Isolator	6-21
6.18	Layout, Digitizer	6-22
6.19	Schematic, Digitizer	6-23
6.20	Layout, Display	6-24
6.21	Schematic, Display	6-25
6.22	Layout, Program	6-26
6.23	Schematic, Program	6-27
6.24	Integrated Circuits	6-28

LIST OF TABLES

Table	Title	Page
1.1	Measurement Capability	1-1
1.2	Specifications	1-5
2.1	Range Codes	2-4
2.2	Operating Controls	2-5
2.3	Function Programming	2-6
2.4	Range Programming	2-6
2.5	Timeouts	2-8
2.6	Maximum Input Voltage	2-8
2.7	Accessory Jumpers	2-12
3.1	Required Equipment	3-1
3.2	DC Range Check (Low Ranges)	3-2
3.3	DC Range Check (High Ranges)	3-3
3.4	Ratio Check	3-4
3.5	DC Linearity Check	3-5
3.6	DC Input Resistance	3-6
3.7	DIAC Range Check	3-7
3.8	RMS AC Range Check	3-8
3.9	Ohms-Megohms Range Check	3-9
3.10	Common Mode Rejection (In DC Volts Function)	3-10
3.11	Normal Mode Noise Rejection (In DC Volts Function)	3-11
3.12	Common Mode Rejection (In AC Volts Function)	3-12
4.1	Range Limit Codes	4-4
4.2	Ohm Converter Current Generator	4-15
5.1	Required Calibration Equipment	5-1
5.2	DC Gain	5-2
5.3	DC Range	5-4
5.4	Ohms Range	5-6
5.5	Ohms Low Range	5-6
5.6	AC Zero	5-7
5.7	AC Symmetry	5-7
5.8	Low Freq. Gain	5-8
5.9	High Freq. Gain	5-8
5.10	Troubleshooting the DC Function	5-11
5.11	Timeouts	5-12
5.12	Timing Diagram Signal Description	5-13
5.13	BCD Coding	5-17
5.14	mV Function Coding	5-17
5.15	AC Mode	5-17
5.16	Decimal Point Code	5-17
5.17	DC Mode	5-17
5.18	mV-DC Mode	5-17
5.19	Function Limit Codes	5-18
5.20	Annunciator Coding	5-18
5.21	Ohms Code	5-19
5.22	Program Troubleshooting	5-19
5.23	Isolator Voltage Levels	5-20
5.24	Millivolts Voltage Levels	5-20
5.25	Ohms Converter Voltage Levels	5-20
7.1	Table 7.1	7-1
7.2	List of Suppliers	7-1

1.1 INTRODUCTION.

1.2 The Model 4800 Digital Voltmeter (figure 1.1) is a four-digit instrument with a fifth decade providing 100% overrange. The basic instrument is equipped for dc and dc/dc ratio measurements on five ranges. With the addition of the optional Model 21 or 31 AC Converter, a-c and ac/dc ratio measurements on five ranges are available. The Model 50 Preamp/Ohms Converter, also optional, adds a 10 mV range plus ohms and ohms/dc ratio measurements on nine ranges. Complete measurement capability is tabulated in Table 1.1.

Table 1.1 - Measurement Capability

Range	FUNCTION			
	DC & DC/DC RATIO (Basic 4800)	MV & MV/DC RATIO (Model 12 Preamp)	Ohms & Ohms/DC RATIO (Model 50 Preamp/ Ohms)	AC & AC/DC RATIO (Model 21 or 31 AC Conv.)
10 mV		X	X	
.1V	X	X	X	X
1V	X			X
10V	X			X
100V	X			X
1000V	X			X
1Ω			X	
10Ω			X	
.1 KΩ			X	
1 KΩ			X	
10 KΩ			X	
100 KΩ			X	
1000 KΩ			X	
10 MΩ			X	
100 MΩ			X	

1.3 Range can be selected manually or automatically (autorange). In AUTO range, the proper range for a particular measurement is selected automatically (full scale is defined as "10000" on any range). The instrument "upranges" at 200% of full scale and "downranges" at 10% of full scale. Polarity selection is also automatic and is displayed on the readout.

1.4 Two operating modes are provided. In Single Read mode, a measurement is held (displayed) until a single reading is commanded by a front panel pushbutton switch (or externally, see paragraph 1.17). The new measurement is then held until the switch is again activated. In Periodic mode, measurements are made automatically at the rate of approximately three and one-third per second.

1.5 The basic Model 4800 includes an analog output voltage that is proportional to the parameter being measured. The voltage, at 20 volts maximum, is available at a rear panel connector.

1.6 Also included as standard equipment is a solid-state isolated BCD output. TTL-compatible output levels of the reading, function, range, etc., plus a print command are provided. An additional line enables a new reading to be commanded externally. An optional isolated remote programming unit (Model 70) allows all operating commands to be made externally.

1.7 OPTIONS.

1.8 All optional accessories having model numbers are plug-in circuit boards that may be added at any time. A calibrated accessory board can be installed without affecting the d-c calibration of the basic instrument. An instrument shipped without PCB accessories will not be

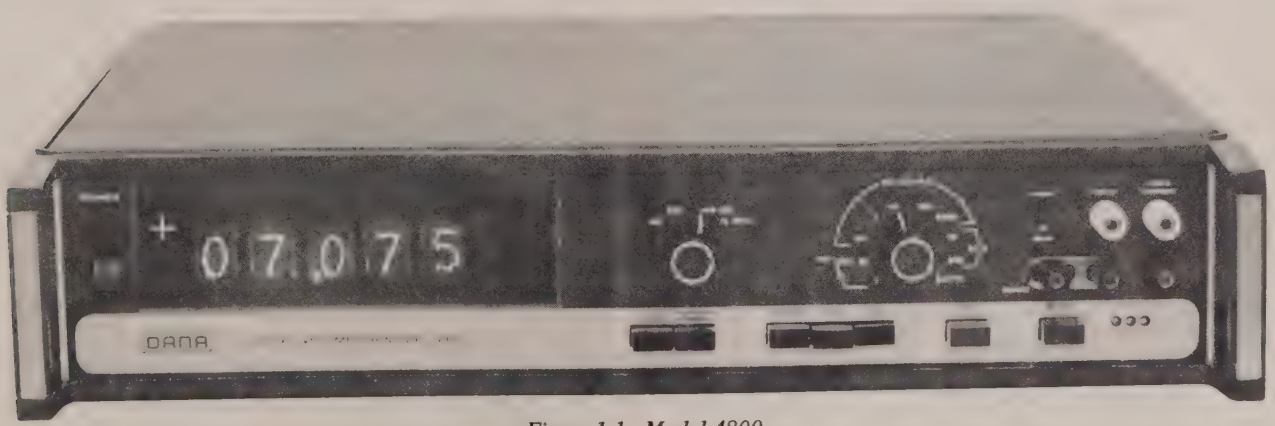

Figure 1.1 - Model 4800

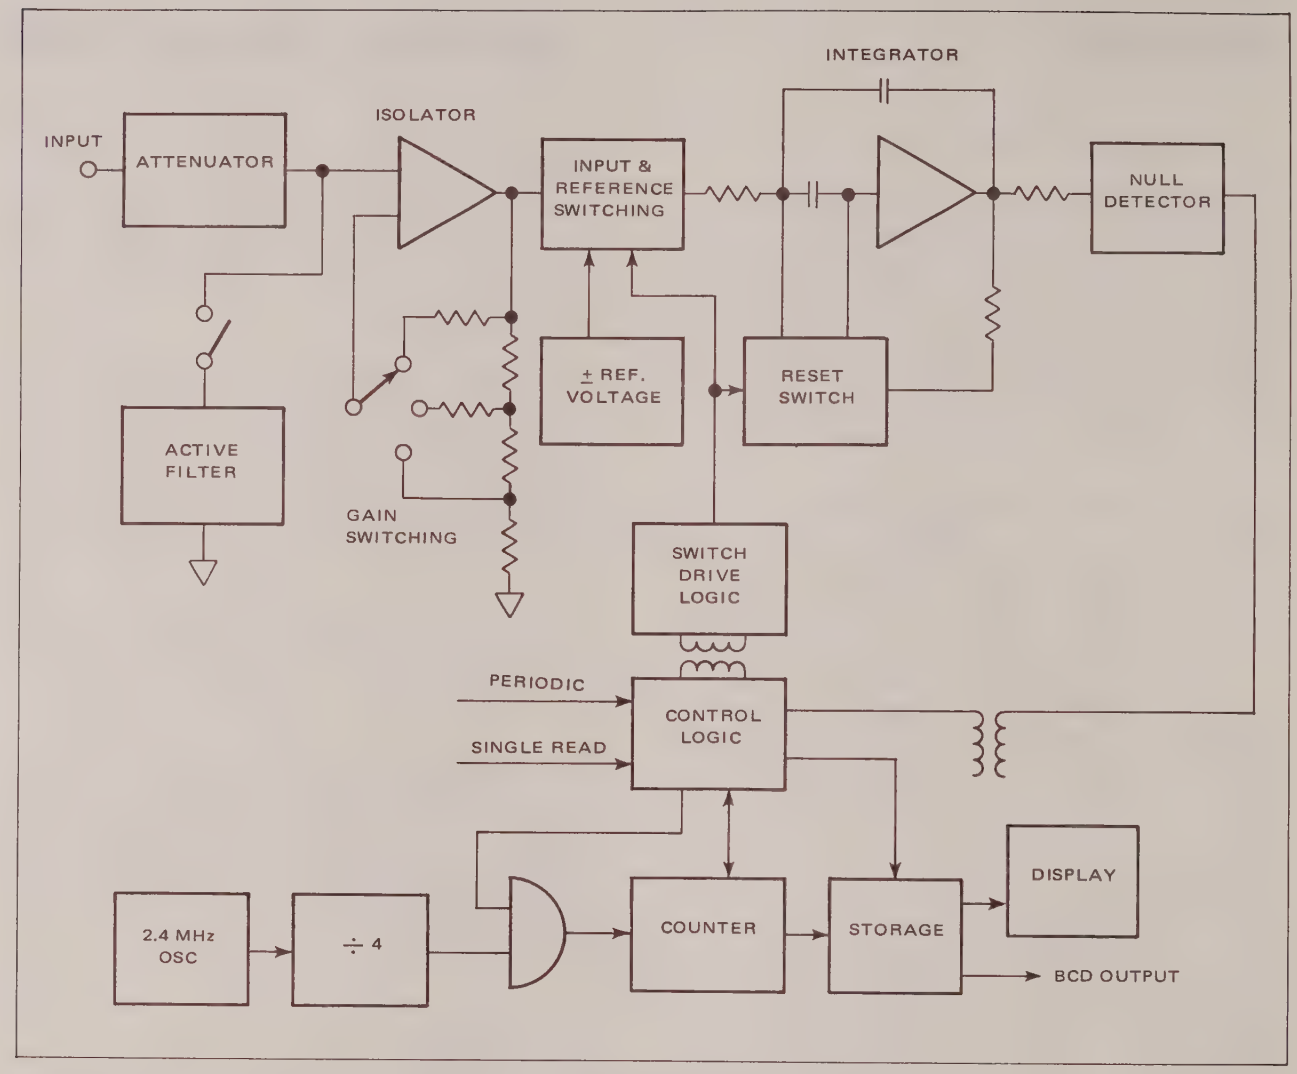

Figure 1.2 - Block Diagram - DC Measurement

equipped with a Function Switching PCB assembly. This board must be added when accessory boards are installed.

1.9 Model 12 Preamp.

1.10 The Model 12 Preamp adds a 10 mV range to the instrument. This enables millivolt measurements having a resolution of 1 μvolt.

1.11 Model 50 Preamp/Ohms Converter.

1.12 The Model 50 Preamp/Ohms Converter combines the Model 12 Preamp with a nine-range ratiometric four-wire Ohms Converter providing maximum resolution of 100 μohms on the 1-ohm range.

1.13 Model 21 AC Converter.

1.14 Model 21 is a Distortion Insensitive AC Converter that makes accurate a-c measurements in the presence of up to 5% total harmonic distortion. It can measure the RMS value of distorted sine waves with little degradation of accuracy.

1.15 Model 31 AC Converter.

1.16 Model 31 is a True RMS Converter that offers dc or ac coupling and makes accurate RMS measurements of sinusoidal and non-sinusoidal inputs. The converter can accept full scale input signals with crest factors up to 7 to 1.

1.17 Model 70 Remote Programming.

1.18 The Model 70 Remote Programming accessory allows the selection of function, range, filter, read command, etc., to be made externally. Auto range selection is also provided and appropriate timeouts are generated internally when ranging takes place. Remote Programming "overrides" all manual control settings to prevent erratic selec-

tions. Complete isolation of the programming unit is achieved by the use of photo-couplers and pulse transformers.

1.19 Rack-Mounting Flanges (403402).

1.20 Rack-Mounting Flanges are used where the instrument is to be installed in a relay-rack or cabinet.

1.21 High-Voltage Probe (641).

1.22 The High-Voltage Probe extends the voltage range of the instrument up to 10,000 volts (or 7500V rms). It is an insulated probe containing a 1000:1 voltage divider.

1.23 Current Shunt Set (651).

1.24 The Current Shunt Set consists of six precision shunt assemblies with values selected to produce a voltage drop that, measured in millivolts, has a numerical value equal to the current flow in milliamps or microamps.

1.25 ELECTRICAL DESCRIPTION.

1.26 A block diagram of the Model 4800 is shown in figure 1.2. A dc input signal is applied through the attenuator (voltage divider) to the Isolator amplifier. Ranging is accomplished by the voltage division of the attenuator combined with the gain of the Isolator. The Isolator output is a ten-volt full scale (20 volts in overrange) analog voltage representing the input.

1.27 For optional AC measurements, the signal is first applied to the Model 21 AC Converter (not shown) where it is scaled, rectified, and filtered. The resulting d-c voltage is then applied to the attenuator and measured as DC.

1.28 To measure resistance, the Model 50 Ohms Converter is used. The Ohms Converter generates a current that is applied to the unknown resistance. A voltage, representing a ratio E_X/E_{FS} of the voltage drop across the unknown resistor (E_X) to the voltage drop across a "full-scale" resistor (E_{FS}) is measured as a dc ratio and displayed in ohms.

1.29 The analog output of the Isolator is converted to its digital equivalent by the Integrator using the dual-slope technique. Figure 1.3 shows a simplified Integrator circuit and the dual slope produced.

1.30 I_S and I_R, shown as current generators, represent current derived from the signal (I_S) and the reference current generated within the instrument (I_R). Both constant currents, they are applied to integrator capacitor C_i as the appropriate switch is closed.

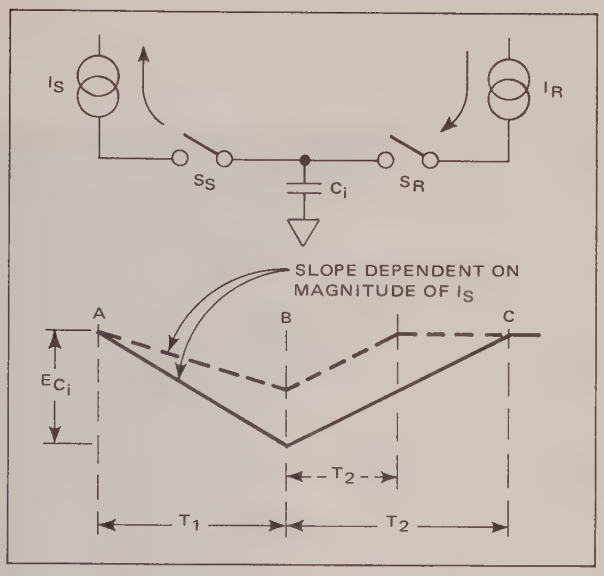

Figure 1.3 - Simplified Integrator Circuit

1.31 Period T1 is the signal integration period. At time A, S_S closes and C_i (initially uncharged) begins to charge. T1 is a fixed period. At time B, S_S opens and S_R closes starting the reference integration period (T2). C_i charges at a constant rate. The time required to charge the capacitor to zero is proportional to the voltage across the capacitor at the end of the signal integration period; therefore, it is proportional to the input.

1.32 A counter operates during the integration period at a rate of 600 kHz. The counter output is stored in Storage IC's. The counter is stopped when the reference integration ramp reaches zero by a pulse from the Null Detector. The contents of the Storage circuits are then displayed and routed to the BCD output circuitry.

1.33 The Control Logic (figure 1.2) generates control signals that operate the Integrator switches, counter, and Storage circuits at the appropriate time.

1.34 MECHANICAL DESCRIPTION.

1.35 A top view of the Model 4800 is shown in figure 1.4. The instrument shown is equipped with optional accessories (PC Boards) for the measurement of Ohms and AC. The AC option consists of two boards: the AC Converter and the Scaling Amplifier. The accessory boards plus the Digitizer, Isolator, and Function Switching board all plug into the "motherboard" called the Logic and Interconnection assembly. This board also carries much of the instrument logic. Connectors on the motherboard are identified in the figure.

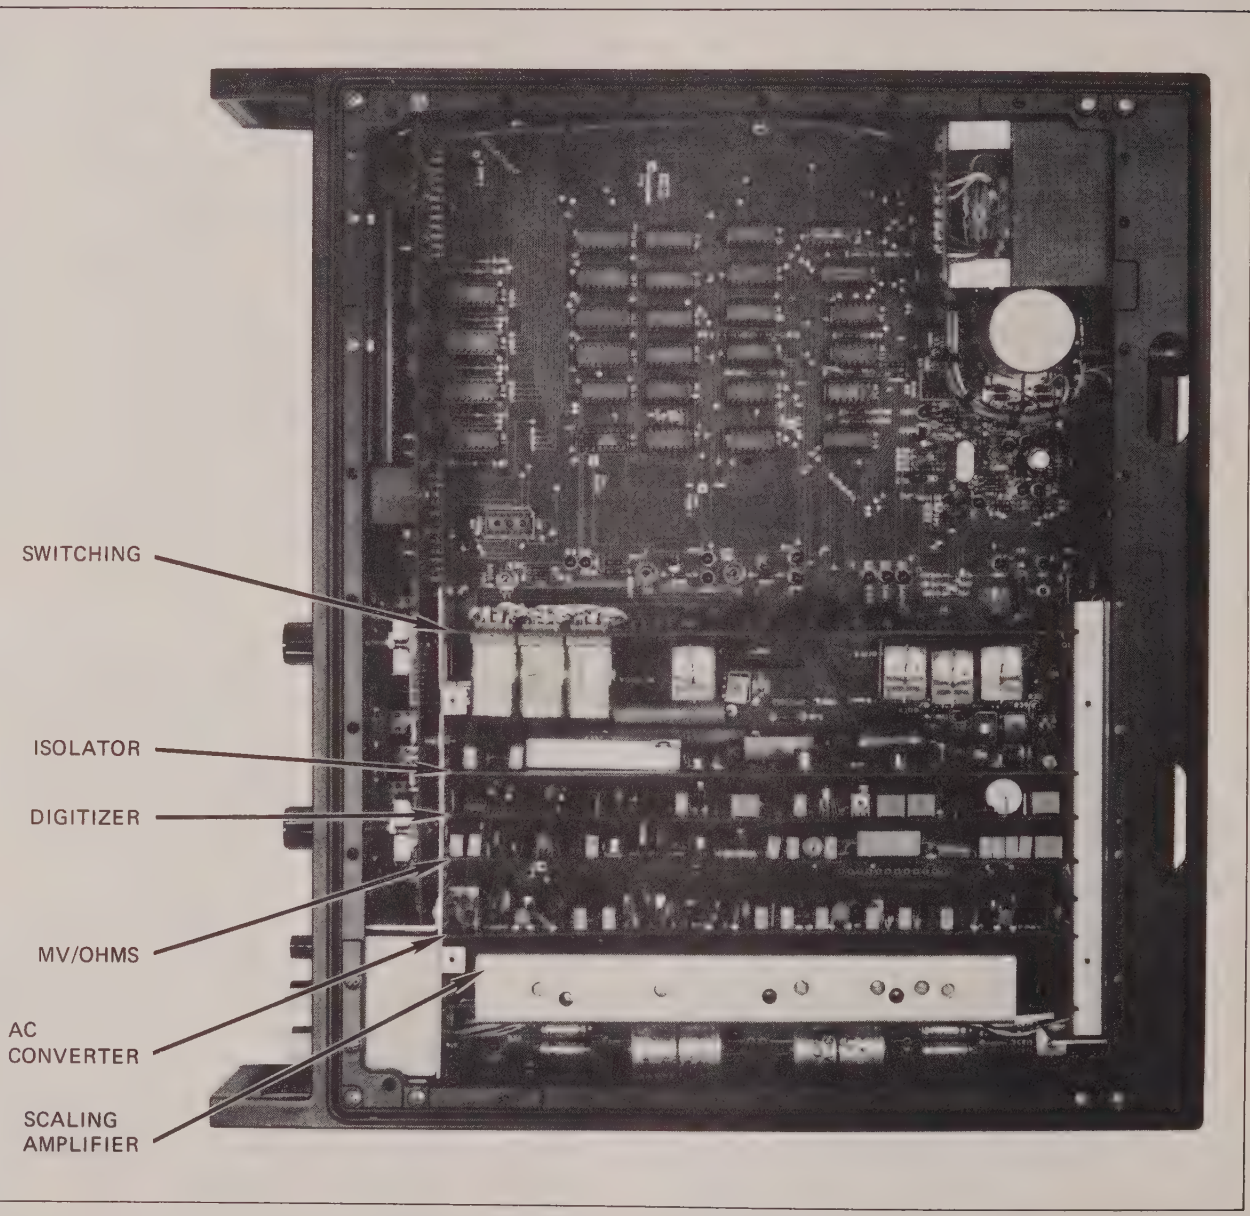

Figure 1.4 - Printed Circuit Board Locations

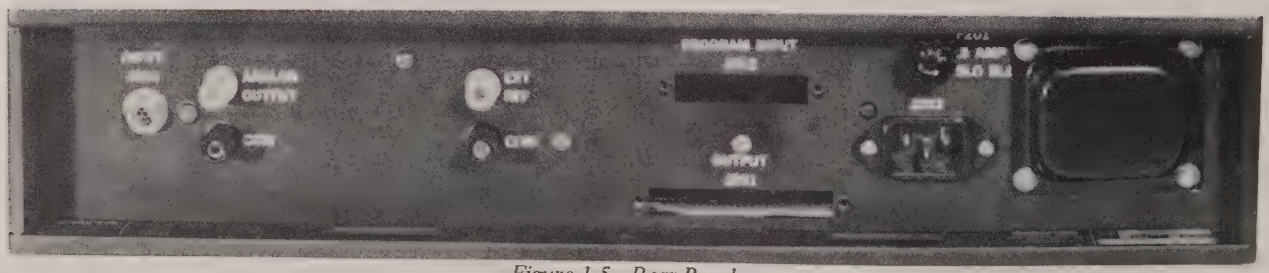

Figure 1.5 - Rear Panel

1.36 The Function Switching board is used only when either or both of the options (AC and Ohms) are installed. With no options installed, the Function Switching board is replaced with the Switching Bypass board. The Switching Bypass merely connects the + Input (from input connector) directly to the Isolator input and the – Input to ground.

1.37 At the rear edge of the Interconnection and Logic Assembly is a PCB connector that extends to the rear panel and serves as the BCD output connector J201 (figure 1.5). If the optional Model 70 Remote Program board is installed, it is mounted on stand-offs above the Interconnection and Logic board with the PROGRAM INPUT connector (J202) available at the rear panel above the BCD OUTPUT connector.

1.38 The POWER input connector J203, the power transformer, and power transistors for the power supply are mounted on the rear panel of the instrument. Other power supply components are mounted on the Interconnection and Logic assembly. Also mounted on the rear panel, in addition to J201 and J202, is the rear INPUT connector J204, the ANALOG OUTPUT connector and common, the EXTernal REFerence connector and common, and the line fuse F201.

1.39 A dimensional outline of the Model 4800 is shown in figure 1.6.

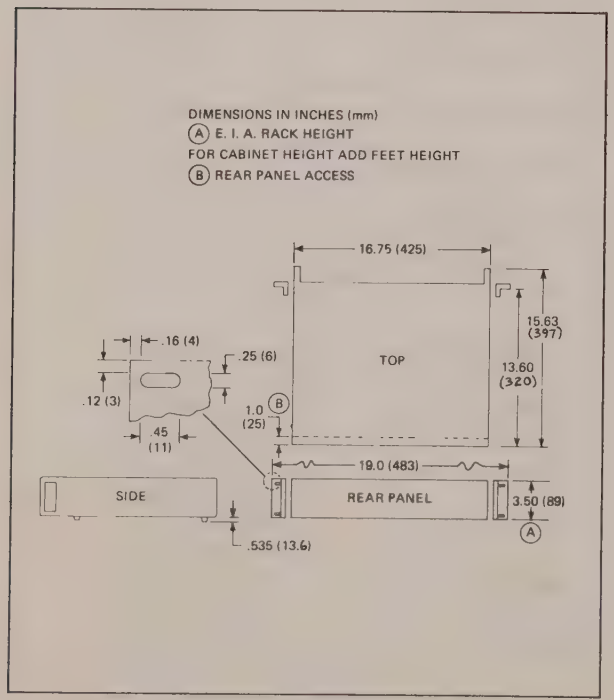

Figure 1.6 - Dimensions

1.40 SPECIFICATIONS.

1.41 Specifications are listed in Table 1.2. Test procedures for verification of specifications are given in Section 3.

Table 1.2 - Specifications

GENERAL	
Maximum Common Mode Voltage:	Guard to Case 500V peak ac or dc
Maximum Power Requirement:	40 watts, 115V ± 10%, 50 to 400 Hz
Operating Temperature:	0° to 50°C
Warmup:	30 minutes to full accuracy
Dimensions:	3-1/2 x 16-3/4 x 15-5/8 inches (88.9 mm x 425 mm x 397 mm)
Weight:	16 pounds (approx.) net, 18 pounds (approx.) shipping
Guarantee:	12 months, faulty workmanship or component failure

mV/DC, DC/DC, AC/DC, Ω/DC RATIO	
Full Scale Display: (ratio x 10)	mV/DC ratio range +10.000:1 DC/DC & AC/DC ratio ranges +.10000:1, +1.0000, +10.000:1, +100.00:1, +1000.0:1 Ω/DC ratio ranges 1.0000:1, 10.000:1, 100.00:1, 1.0000k:1, 10.000k:1, 100.00k:1, 1.0000m:1, 10.000m:1, 100.00m:1
Overrange:	100% on all ranges
Accuracy DC/DC:	90 days, 25°C ± 5°C ±[0.01% of reading +0.01 (10V/ref input) % of full scale]
Reference Input:	Impedance: 100 megohms NMR: 15 dB at 60 Hz frequency Settling time: 250 ms to 0.01%

Table 1.2 - Specifications (Continued)

DC VOLTAGE	
Full Scale Display:	±.10000, ±1.0000, ±10.000, ±100.00, ±1000.0V
Overrange:	100% on all ranges, ±1000V maximum input
Resolution:	10 microvolts on 0.1V range
Accuracy:	24 hours, 23°C ± 1°C ±(0.005% of reading +0.005% of full scale) 90 days, 25°C ± 5°C ±(0.01% of reading +0.01% of full scale)
Temperature Coefficient:	0°C to 50°C 1, 10, 1000 Volt Ranges ±(0.001% of reading +0.001% of full scale)/°C 100 Volt Range ±(.0012% of reading +.001% of full scale)/°C 0.1 Volt Range ±(0.001% of reading +0.002% of full scale)/°C
Input Resistance:	0.1, 1, 10 Volt Ranges 10,000 megohms 100, 1000 Volt Ranges 10 megohms
Normal Mode Noise Rejection:	Filter out: 48 dB at every multiple of 60 Hz Filter in: Same as filter out + 48 dB at 59 Hz and above increasing at 24 dB/Octave to 100 dB max.
Common Mode Noise Rejection: (with 100Ω unbalance in either lead)	Filter out: DC, 140 dB 61 Hz and below, 120 dB + 48 dB at every multiple of 60 Hz
Settling Time:	To 0.01% from full scale step Filter in: 250 ms Filter out: 5 ms
Voltage Coefficient:	±.001% full scale/100V Input Signal

DISTORTION INSENSITIVE AC VOLTAGE, Option 21	
Full Scale Display:	.10000, 1.0000, 10.000, 100.00, 1000.0V
Overrange:	100% (within maximum voltage limit)
Resolution:	.01% of range 10 microvolts on 0.1V range
Accuracy:	90 days, 23°C ± 5°C
	.1V range
30 Hz to 50 Hz	±(.15% of reading +.08% of full scale)
50 Hz to 100 Hz	±(.1% of reading +.08% of full scale)
100 Hz to 5 kHz	±(.05% of reading +.08% of full scale)
5 kHz to 100 kHz	±(.07% of reading +.13% of full scale)
100 kHz to 300 kHz	±(.28% of reading +.28% of full scale)
300 kHz to 1 MHz	±(.53% of reading +.53% of full scale)
	1 – 1 KV range
30 Hz to 50 Hz	±(.13% of reading +.02% of full scale)
50 Hz to 100 Hz	±(.08% of reading +.02% of full scale)
100 Hz to 5 kHz	±(.03% of reading +.02% of full scale)
5 kHz to 100 kHz	±(.05% of reading +.03% of full scale)
100 kHz to 300 kHz	±(.26% of reading +.08% of full scale)
300 kHz to 1 MHz	±(.51% of reading +.11% of full scale)
	6 months, 23°C ± 5°C
	.1V range
30 Hz to 50 Hz	±(.16% of reading +.08% of full scale)
50 Hz to 100 Hz	±(.11% of reading +.08% of full scale)
100 Hz to 5 kHz	±(.06% of reading +.08% of full scale)
5 kHz to 100 kHz	±(.08% of reading +.13% of full scale)
100 kHz to 300 kHz	±(.29% of reading +.28% of full scale)
300 kHz to 1 MHz	±(.54% of reading +.53% of full scale)

Table 1.2 - Specifications (Continued)

DISTORTION INSENSITIVE AC VOLTAGE (continued)	
Accuracy: (cont'd)	1 – 1 KV range
30 Hz to 50 Hz	±(.14% of reading +.02% of full scale)
50 Hz to 100 Hz	±(.09% of reading +.02% of full scale)
100 Hz to 5 kHz	±(.04% of reading +.02% of full scale)
5 kHz to 100 kHz	±(.06% of reading +.03% of full scale)
100 kHz to 300 kHz	±(.27% of reading +.08% of full scale)
300 kHz to 1 MHz	±(.52% of reading +.11% of full scale)
Accuracy (sinewave, .002V ≤ E_{in} ≤ 500V)	
E_{in} > 500V:	
<5 kHz, add ±.1% reading	
≥ 5 kHz, add ±.2% reading	
Input Impedance:	1 megohm minimum in series with .22 μF, shunted by less than 100 pF
Settling Time:	(.1% of final value)
Zero to full scale:	350 mS
Full scale to 10% of scale:	500 mS
Full scale to 20% of scale:	450 mS
Maximum Input Voltage: (See Figure 1.7)	1000V range 750V RMS to 27 kHz, decreasing linearly to 20V at 1 MHz 100V range 200V RMS to 100 kHz decreasing linearly to 20V at 1 MHz

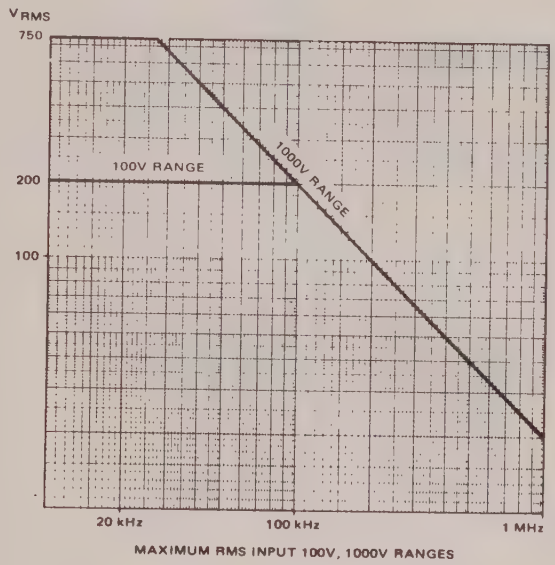

Figure 1.7 - Maximum RMS Input Voltage

SYSTEMS INTERFACE	
Electrical Output:	Included in basic instrument
Information:	5 digits, polarity, range, function filter in/out
Print Command:	Level change from TTL "1" state to a "0" state (1 = +2.4V to +5.0V) (0 = 0.0V to +0.5V)
Output Levels:	Series 7400 TTL output levels; 1-2-4-8 positive true code
Remote Programming:	With addition of Option 70 Programming
Programmability:	Single line command for any function, any range, and filter
Selection:	TTL logic levels applied to appropriate pin

Table 1.2 - Specifications (Continued)

TRUE RMS AC VOLTAGE, Option 31	
Ranges:	.10000V, 1.0000V, 10.000V, 100.00V, 1000.0V RMS
Resolution:	0.01% of range
Overrange:	100%, (within maximum input voltage limit)
Maximum Input Voltage:	1000V DC/RMS or 1500V peak, decreasing to 20V RMS at 1 MHz. $2x10^7$V Hz maximum on any range
Maximum Crest Factor:	7:1 at full-scale $7 \times \sqrt{\frac{F.S.}{V_{in}}}$ for other ranges
Accuracy: AC Mode (Sinewave input, 1 MV $\leq V_{in} \leq$ 500V, $\leq$ 75% R.H.)	90 days, 25°C ± 5°C 20 Hz – 30 Hz ±(.6% of reading +.04% of full-scale) 30 Hz – 50 Hz ±(.3% of reading +.04% of full-scale) 50 Hz – 100 Hz ±(.1% of reading +.04% of full-scale) .1V range 100 Hz – 20 kHz ±(.15% of reading +.05% of full-scale) 20 kHz – 100 kHz ±(1% of reading +.2% of full-scale) 1, 10, 100, 1000V range 100 Hz – 20 kHz ±(.07% of reading +.04% of full-scale) 20 kHz – 50 kHz ±(.1% of reading +.1% of full-scale) 50 kHz – 100 kHz ±(.4% of reading +.2% of full-scale) 1V range 100 kHz – 300 kHz ±(5% of reading +1% of full-scale) 10, 100, 1000V range 100 kHz – 300 kHz ±(3% of reading +.5% of full-scale)

TRUE RMS AC VOLTAGE, Opt.31 (continued)	
Accuracy: (cont)	
AC Mode (cont)	6 months, 25°C ± 5°C 1, 10, 100, 1000V range 20 Hz – 50 kHz Add ±.01% reading ±.01% full-scale to the 90 day spec 50 kHz to 100 kHz Add ±.02% reading ±.02% full-scale to the 90 day spec 100 kHz to 300 kHz Add ±1% reading ±.1% full-scale to the 90 day spec .1V range 100 Hz – 100 kHz Add ±.05% reading ±.02% full-scale to the 90 day spec
AC + DC Mode	1, 10, 100, 1000V range Add .03% of reading +.015% of full-scale to AC Specification .1V range (No spec beyond 100 kHz) Add +.01% of full-scale to AC Specification For V_{in} > 500V, multiply % of reading specification by: $(\frac{1 + V_{in}}{2000})$
Temperature Coefficient:	0°C to 50°C AC coupled (to 20 kHz) 1, 10, 100, 1000V range ±(.004% of reading +.003% of full-scale)/°C .1V range ±(.008% of reading +.003% of full-scale)/°C DC coupled (to 20 kHz) 1, 10, 100, 1000V range ±(.004% of reading +.005% of full-scale)/°C .1V range ±(.01% of reading +.02% of full-scale)/°C

Continued on Page 1-9

Table 1.2 - Specifications (Continued)

TRUE RMS AC VOLTAGE, Opt. 31 (continued)	
Input Impedance: (Front Input)	AC Mode 1M ± .1% in series with .22 μF, shunted by less than 100 pF to common DC Mode 1M ± .1%, shunted by less than 100 pF to common
Common Mode Rejection: With 100Ω unbalance in either lead. DC to 60 Hz	Range — CMR .1V — 140 dB 1V — 120 dB 10V — 100 dB 100V — 80 dB 1000V — 60 dB
Settling Time: (to .1% of range with "Filter" in)	0 to Full Scale Step 300 msec Full Scale Step to 10% FS Step 400 msec

MILLIVOLTS DC	
Full Scale Display:	10.000 mV, .10000V
Overrange:	100% on both ranges, ±150V maximum input
Resolution:	1 microvolt on 10 mV range
Accuracy: **10 mV range***	24 hours, 25°C ± 1°C ±(0.005% of reading +0.01% of full scale) 90 days, 23°C ± 5°C ±(0.01% of reading +0.03% of full scale) *accuracy of 0.1V range same as DC Volts
Temperature Coefficient:	0°C to 50°C 0.1V range ±(0.001% of reading +0.001% of full scale)/°C 10 mV range ±(0.001% of reading +0.005% of full scale)/°C
Input Resistance:	10,000 megohms
Noise Rejection:	Same as DC Voltage
Settling Time:	Same as DC Voltage

TRUE 4-WIRE OHMS	
Full Scale Display:	1.0000, 10.000, 100.00, 1.0000k, 10.000k, 100.00k, 1.0000M, 10.000M, 100.00M ohms
Overrange:	100% on all ranges; ±30 VDC or 30V peak AC maximum input
Accuracy:	90 days, 23°C ± 5°C 10, 100, 1k, 10k, 100k, 1M ohm ranges ±(0.01% of reading +0.01% of full scale) 1 ohm range ±(0.01% of reading +0.05% of full scale) 10M ohm range ±(0.05% of reading +0.01% of full scale) 100M ohm range ±(0.20% of reading +0.01% of full scale)
Temperature Coefficient:	1Ω ±(.002% of reading +.01% of full scale)/°C 10Ω to 1 MΩ ±(.002% of reading +.002% of full scale)/°C 10 MΩ ±(.008% of reading +.002% of full scale)/°C 100 MΩ ±(.03% of reading +.002% of full scale)/°C
Normal Mode Noise Rejection:	Same as DC Voltage
Settling Time:	To rated accuracy from full scale step 20 ms (300 ms 100 M range)
Current Through Unknown:	Range 1 ohm — 10.1 mA 10 ohm — 10.1 mA 100 ohm — 1.01 mA 1 kilohm — .101 mA 10 kilohm — 1 mA 100 kilohm — 0.1 mA 1 megohm — 10 μA 10 megohm — 1 μA 100 megohm — 0.1 μA

2.1 UNPACKING AND INSPECTION.

2.2 The Model 4800 DVM is packed in a molded plastic-foam form within a cardboard carton for shipment. The plastic form holds the DVM securely in the carton and absorbs any reasonable external shock normally encountered in transit. Prior to unpacking, examine the exterior of the shipping carton for any signs of damage. Carefully remove the DVM from the carton and inspect the exterior of the instrument for any signs of damage. If damage is found, notify the carrier immediately.

2.3 Included with the instrument in the packing container are the instruction manual, power cord, and rear input and BCD output mating connectors. With instruments equipped with remote programming, a mating connector for that accessory is included.

2.4 BENCH OPERATION.

2.5 Each Model 4800 is equipped with a tilt bail or "kickstand" to enable the front of the instrument to be elevated for convenient bench use. The tilt bail is attached to the two front supporting "feet" at the bottom of the instrument. For use, the bail is pulled down to its supporting position.

2.6 RACK MOUNTING.

2.7 The instrument can be mounted in a standard 19-inch rack with the optional rack-mounting flanges (403402, includes attaching hardware). To install the flanges, proceed as follows:

a. With instrument on its side, remove four Phillips-head screws holding bottom cover. Remove cover. Remove screws holding feet (and bail) in place. Replace bottom cover.

b. Place one of the supplied screws through each of the two holes in the mounting flange (figure 2.1). Thread a securing nut onto each screw just enough to attach it to the screw (approximately one turn).

c. Place the mounting flange onto the mounting slot in the instrument side panel so that the securing nuts fit entirely into the slot. Be sure the rack-mount slots on the flange are toward the front of the instrument.

d. Tighten screws. The securing nuts will rotate and hold the flange securely in place.

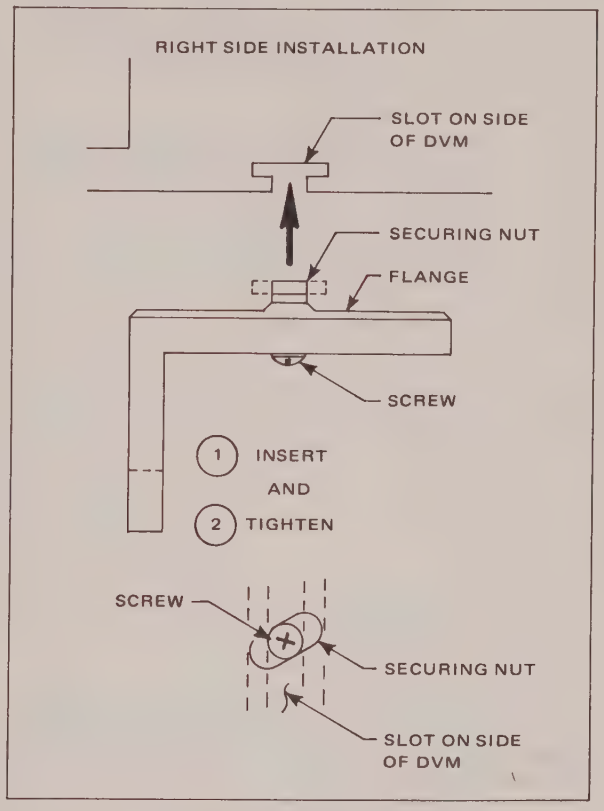

Figure 2.1 - Rack Mount Installation

2.8 POWER CONNECTIONS.

WARNING

Disconnect the instrument from the AC Power source before attempting to change power connections. Potentially lethal voltages are exposed when covers are removed.

2.9 Power requirements for domestic units are 115V ± 10%, 50 to 400 Hz. Power consumption is 40 watts maximum. Instruments for export, designated as Models 4800E, are equipped with a special transformer with an attached jumper matrix. The matrix has numbered pairs of terminals that are jumpered according to the line voltage (figure 2.2).

Line Voltage	Jumpers across terminal(s):
100V	2, 3, and 6
120V	1, 3, and 7
200V	5 and 6
220V	4 and 6
240V	4 and 7

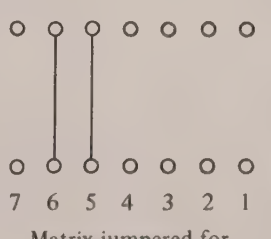

Figure 2.2 - Line Voltage Jumpers – Export Models Only

2.10 A standard power cable having a three-pin plug is supplied with the instrument. It connects to POWER connector J203. The ground pin (round) is attached to the instrument case. It is important that this pin be connected to a good quality earth ground.

2.11 Fuse receptacle F201 on the rear panel is equipped with a .5 amp fuse in domestic units. In export units, the fuse value is .25 amp.

2.12 INPUT/OUTPUT CABLING.

2.13 Binding Posts.

2.14 Several connectors on the Model 4800 consist of a pair of binding posts spaced so as to accept standard "banana" plugs. The connectors are:

Front Panel	Rear Panel
± INPUT	± ANALOG OUTPUT
± OHMS CURRENT	± REFerence INput

2.15 Input cables to fit this type of connector can be ordered from Dana (P/N 402190). Figure 2.3 is a wiring diagram of this cable included for assistance to users desiring to construct their own cables.

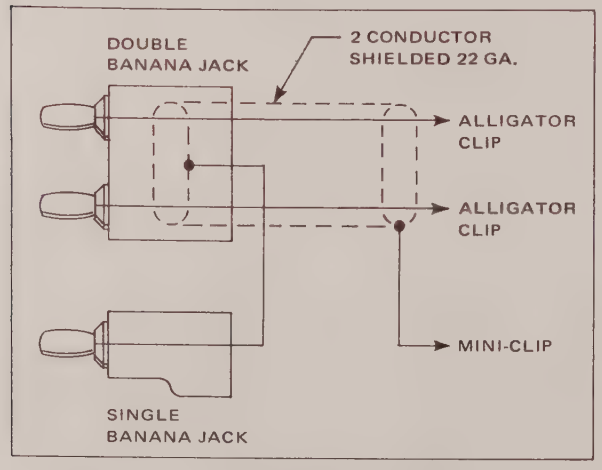

Figure 2.3 - Cabling Diagram, Binding Posts

2.16 Rear Input Connector.

2.17 The rear input connector J204 is a Viking TKR7-101 (Dana 600673). The mating connector is TKP7-100 (Dana 600616) and is supplied with the basic instrument. The instrument accepts inputs applied to this connector or inputs applied to the front-panel binding posts depending on the position of the FRONT/REAR switch. It is recommended that the cable for the mating connector be constructed as shown in figure 2.4 using two two-conductor shielded cables. Other configurations may be desirable depending on the ohms measuring method to be used (see paragraph 2.60).

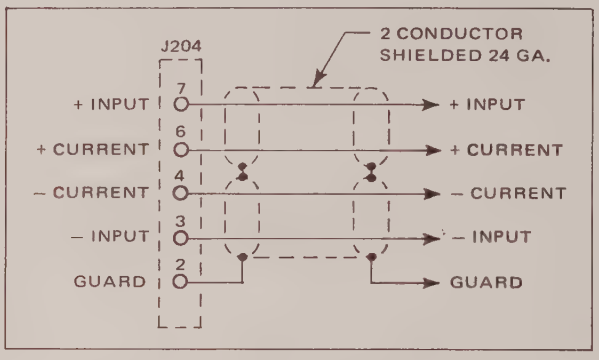

Figure 2.4 - Cabling Diagram, Rear Input

2.18 PRINTER OUTPUT.

2.19 Outputs are delivered to PRINTER OUTPUT connector J201 in the form of positive-true TTL logic levels:

False: 0 to +.5V
True: +2.4V to +5.0V
Fanout: 2 max.
Maximum capacitive load: 500 pF

2.20 J201 is a double-edged PCB connector (extension of Interconnection and Logic board) with pins A1 through A22 on the top edge and pins B1 through B22 on the bottom edge. Pin assignments of J201 are shown in figure 2.5. All outputs are referenced to data output ground, pin A12. This ground may be "floated" at up to 200V (peak) from power ground.

NOTE

Figure 2.5 shows the pin numbering when a Viking mating connector is supplied. On certain instruments, a Cinch connector was supplied. Pin numbering for the Cinch connector is shown in figure 2.6. Signal descriptions and relative positions of the pins are identical, only pin numbers are different.

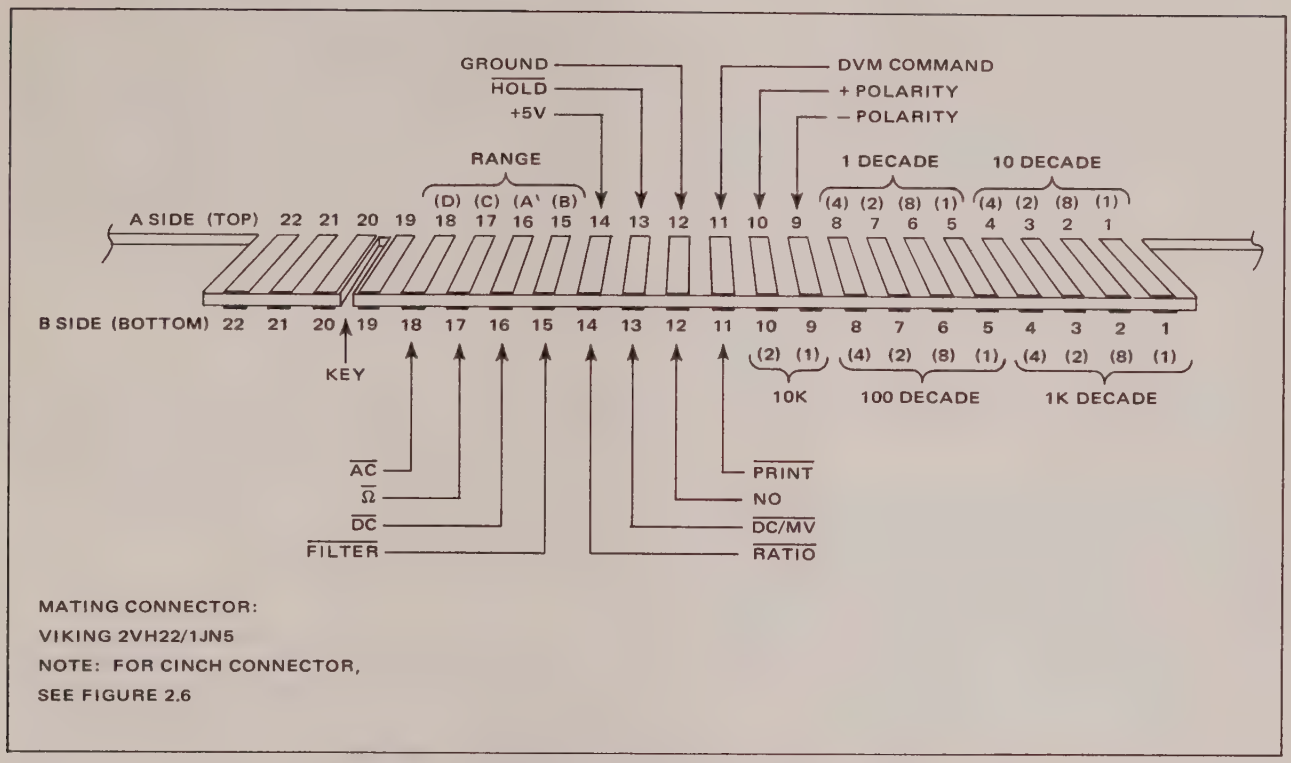

MATING CONNECTOR:
VIKING 2VH22/1JN5
NOTE: FOR CINCH CONNECTOR, SEE FIGURE 2.6

Figure 2.5 - PRINTER OUTPUT Connector J201 (Viking)

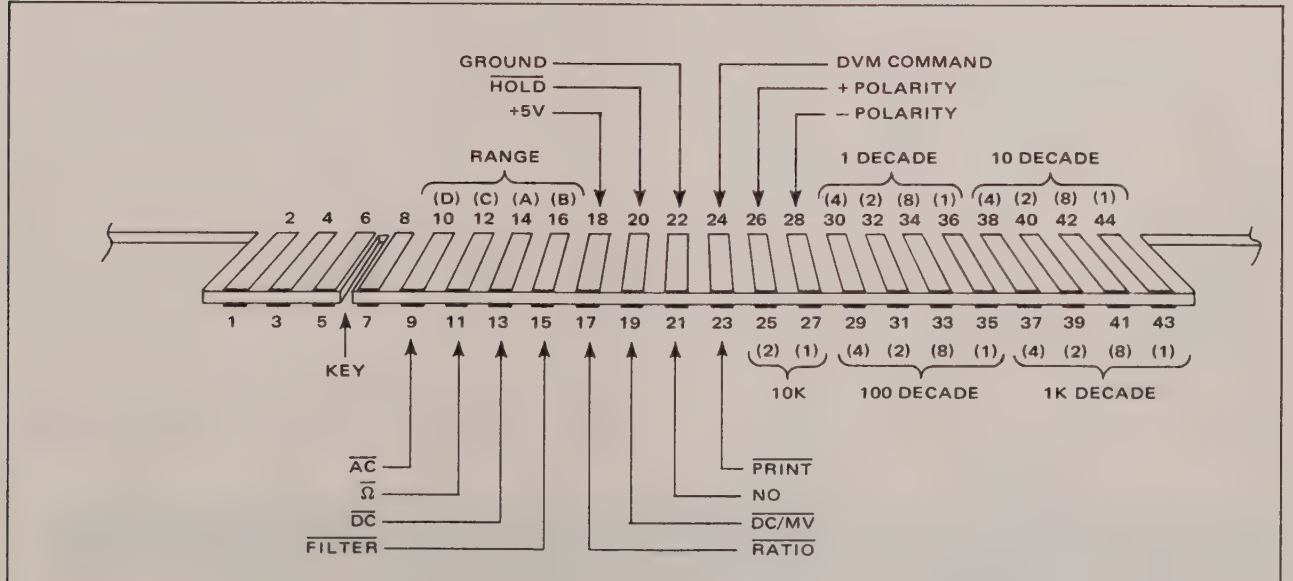

MATING CONNECTOR: CINCH 50-44C-10
NOTE: FOR VIKING CONNECTOR, SEE FIGURE 2.5

SOME CINCH CONNECTORS ARE NOT KEYED; IT IS POSSIBLE TO CONNECT THEM BACKWARD. CAREFULLY OBSERVE PROPER ORIENTATION OF CONNECTOR ACCORDING TO ABOVE DRAWING.

Figure 2.6 - PRINTER OUTPUT Connector J201 (Cinch)

2.21 Numerical Data.

2.22 Numerical data appears in four-line BCD code on pins A1 through A8 and B1 through B10. The BCD weight of each bit is identified in figure 2.5. Polarity is indicated in positive true format on pin A9 (negative) or pin A10 (positive).

> **CAUTION**
>
> True output lines are not short-circuit proof. Accidental grounding may damage the output circuitry.

2.23 Function Data.

2.24 Function outputs appear on pins B13 through B18. Note that function lines are the complements of the corresponding function as indicated by the bar over the name. For example: with AC function selected, AC is true and $\overline{AC}$ is false. Therefore, the selection of a particular function is indicated by a false level on the corresponding line.

2.25 Range Data.

2.26 Range data appears in four-line BCD code on pins A15 through A18. Range codes are described in table 2.1.

Table 2.1 - Range Codes

Range	A (pin A16)	B (pin A15)	C (pin A17)	D (pin A18)	Dec. Value
1Ω	1	0	0	0	1
10Ω, 10 mV	0	1	0	0	2
.1 kΩ, .1V	1	1	0	0	3
1 kΩ, 1V	0	0	1	0	4
10 kΩ, 10V	1	0	1	0	5
100 kΩ, 100V	0	1	1	0	6
1000 kΩ, 1000V	1	1	1	0	7
10 MΩ	0	0	0	1	8
100 MΩ	1	0	0	1	9

2.27 $\overline{\text{PRINT}}$ Command.

2.28 The $\overline{\text{PRINT}}$ line (pin B11) remains true during the signal and reference integration periods plus the overrange time, if required. The line drops to false level to indicate to the printer that the measurement is complete and output data can be printed. During front panel operation, the print pulse is enabled only when the DATA OUTPUT switch on front panel is depressed.

2.29 "No" Indication.

2.30 The NO line (pin B12) duplicates the NO indicator on the readout. The line is true if a function or range is selected for which the particular instrument is not equipped. Overrange is indicated by a true NO line plus a numerical data output of 20000.

2.31 DVM (Read) Command.

2.32 To externally command a new measurement cycle, it is necessary to activate the $\overline{\text{HOLD}}$ line by applying a false (ground) level to pin A13. A read command must then be generated by a true level on pin A11, $\overline{\text{DVM Command}}$. The command occurs on the positive transition of the voltage level on this line. The reading delayed 5 ms after the command to allow for input settling time and digitizer reset. Specifications of the command signal are shown in figure 2.7.

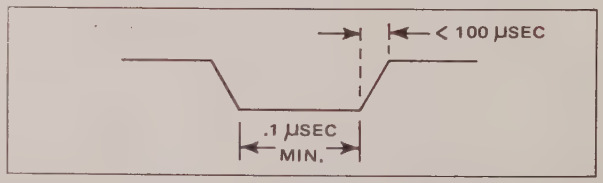

Figure 2.7 - Read Command

2.33 MANUAL OPERATION.

2.34 Controls.

2.35 All operating controls are located on the front panel of the instrument. They are shown in figure 2.8 and their operation described in table 2.2.

Figure 2.8 - Front Panel

Table 2.2 - Operating Controls

Control	Position	Function
Power (rocker switch)	ON (up)	Applies power to instrument
	OFF (down)	Removes power from instrument
Function Select (rotary switch)	AC	Selects the measurement of AC voltages on the .1, 1, 10, 100, and 1000 volt ranges (max. input, 1000V RMS)
	DC	Selects the measurement of DC voltages on the .1, 1, 10, 100, and 1000 volt ranges (max. input, 1000V)
	mV - DC	Selects the measurement of DC voltages on the 10 mV range plus the five d-c ranges (above)
	Ω - MΩ	Selects the measurement of resistance on the 1 and 10 ohm ranges; on the .1, 1, 10, 100, and 1000 kilohms ranges; or on the 10 or 100 Megohm ranges
Range Select (rotary switch)	AUTO	Selects Auto Range in which the optimum range is selected automatically by internal circuits. Uprange occurs at 200% of full scale; downrange occurs at 10% of full scale
	Other Positions	Enables manual selection of fixed ranges. Ranges permissible for each function are inscribed on the panel
DATA OUTPUT (pushbutton)	Depressed	Enables the print pulse causing BCD data at P201 to be recorded by printer, or other output device. (Output data is present at P201 regardless of the position of this switch.)
PROGRAM CONTROL (pushbutton)	Depressed	Enables the selection of range, function, and mode to be made externally through the remote programming connector and disables all front panel controls
PERIODIC (pushbutton)	Depressed	Selects the Periodic mode of operation in which the instrument automatically takes readings at the rate of 3-1/3 per second (approx.)
HOLD (pushbutton)	Depressed	Selects the HOLD mode in which each reading is held until a new reading is commanded by depression of the SINGLE switch or by an external read command
SINGLE (momentary-contact pushbutton)	Depressed	Commands a new reading to be taken in HOLD mode. Only one reading is taken and held until SINGLE is again depressed (NOTE: DVM will not Auto Range in Single Read mode unless program option installed)
RATIO (pushbutton)	Depressed	Selects a ratio measurement in which the readout represents the ratio of the input to an external d-c reference voltage (applied at terminals on the rear panel) multiplied by 10: $E_{in}/E_{Ref} \times 10$
FILTER (pushbutton)	Depressed	Adds an active three-pole filter across the input circuit when measuring any function but AC. In AC mode, filter is switched in automatically
FRONT/REAR (slide switch)	Front	Selects signal at front set of input terminals for measurement
	Rear	Selects signal at rear set of input terminals for measurement

2.36 Display.

2.37 The display consists of five numerical readout tubes with polarity and function indicators as shown in figure 2.9. Maximum usable readout with overrange is 19999. A one-digit increase (from 19999) results in an overload condition indicated by a readout of 20000 and illumination of the NO indicator.

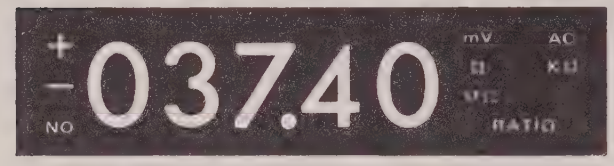

Figure 2.9 - Readout

2.38 The NO indicator also illuminates when a function or range is selected for which the instrument is not equipped.

2.39 REMOTE PROGRAMMING.

2.40 The instrument accepts commands made through PROGRAM INPUT connector J202 on the rear panel of the instrument. Pin assignments of J202 are shown in figure 2.10. Commands are made by a switch closure from the appropriate pin to ground or by standard TTL logic levels: 0 to .5V, false; +2.4 to +5.0V, true (with respect to ground, pin B3). Either open collector or standard TTL output circuits may be used.

NOTE

Figure 2.10 shows the pin numbering when a Viking mating connector is supplied. On certain instruments, a Cinch connector was supplied. Pin numbering for the Cinch connector is shown in figure 2.11. Command requirements and relative position of the pins are identical; only the pin numbers are different.

2.41 External Program Control.

2.42 A contact closure to ground or a false logic level applied to pin B5 disables all front panel operating controls. Operation of the instrument is then under control of the remote program input. This line duplicates the PROGRAM CONTROL switch on the front panel.

2.43 Function Programming.

2.44 The desired function is selected by applying a ground or false logic level to the appropriate pin:

Table 2.3 - Function Programming

$\overline{DC}$	pin A9
$\overline{DC/MV}$	pin B6
$\overline{AC}$	pin A3
$\overline{OHMS}$	pin A4
$\overline{RATIO}$	pin A5
$\overline{FILTER}$	pin A6

2.45 When selecting AC function with Autorange programmed, it is necessary to also select FILTER (pin A6) in order to obtain proper timeout. This is not necessary when a fixed range is programmed. Timeouts are described under "Read Commands", paragraph 2.52.

2.46 RANGE PROGRAMMING.

2.47 Autorange is selected by a ground or false level at pin A8; the fixed range lines must be at a true level or floating to prevent programming errors. Fixed ranges are programmed by applying a positive true BCD code to the four range lines. See table 2.4.

Table 2.4 - Range Programming

Range	Range A pin A10	Range B pin A7	Range C pin B8	Range D pin B7
1 ohm	1	0	0	0
10 ohms, 10 mV	0	1	0	0
.1 Kilohm, .1V	1	1	0	0
1 Kilohm, 1V	0	0	1	0
10 Kilohm, 10V	1	0	1	0
100 Kilohms, 100V	0	1	1	0
1 Megohm, 1000V	1	1	1	0
10 Megohms	0	0	0	1
100 Megohms	1	0	0	1

2.48 Remote (Output Flag).

2.49 This is an output line to pin A1 that remains true (positive) while the instrument is under remote control.

2.50 + Five Volts.

2.51 This voltage, +5 volts ± 5%, from the logic power supply is available at pin B4 for external use. Current output is .1A, maximum.

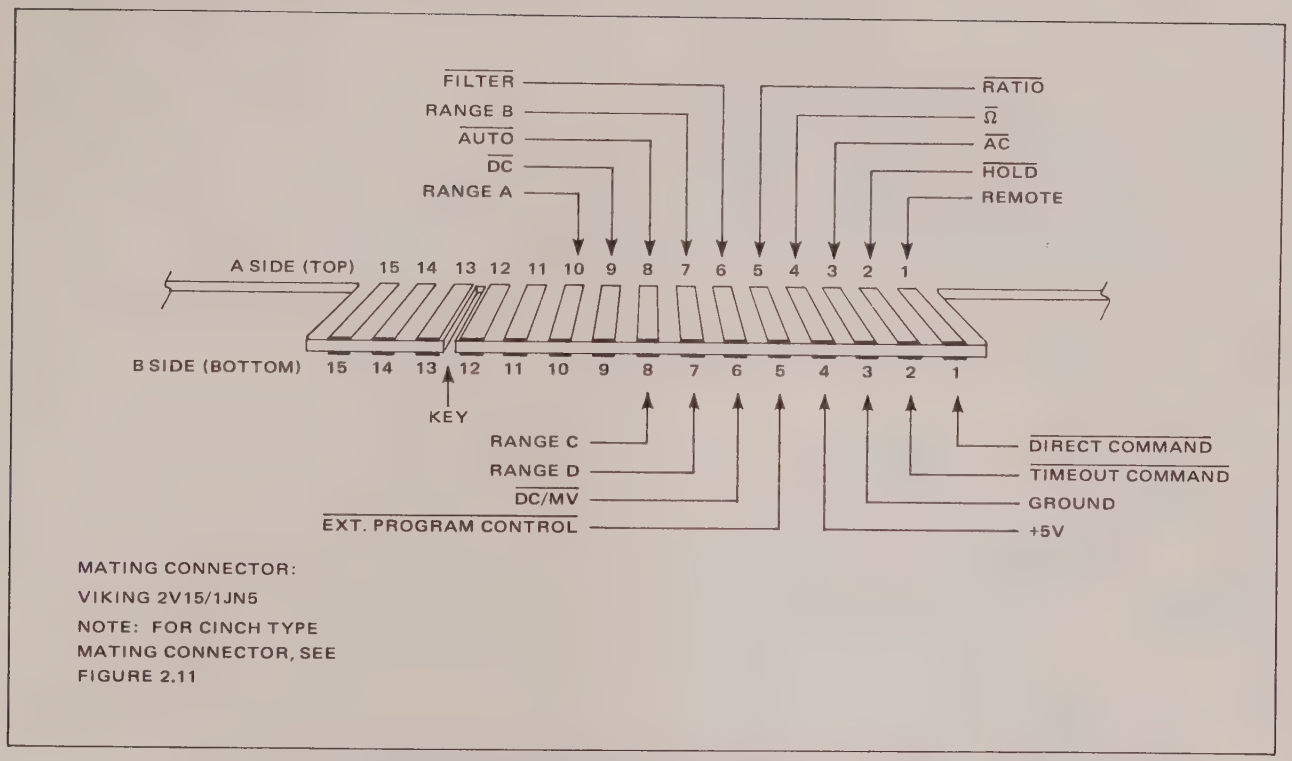

MATING CONNECTOR:
VIKING 2V15/1JN5
NOTE: FOR CINCH TYPE
MATING CONNECTOR, SEE
FIGURE 2.11

Figure 2.10 - PROGRAM INPUT Connector J202 (Viking)

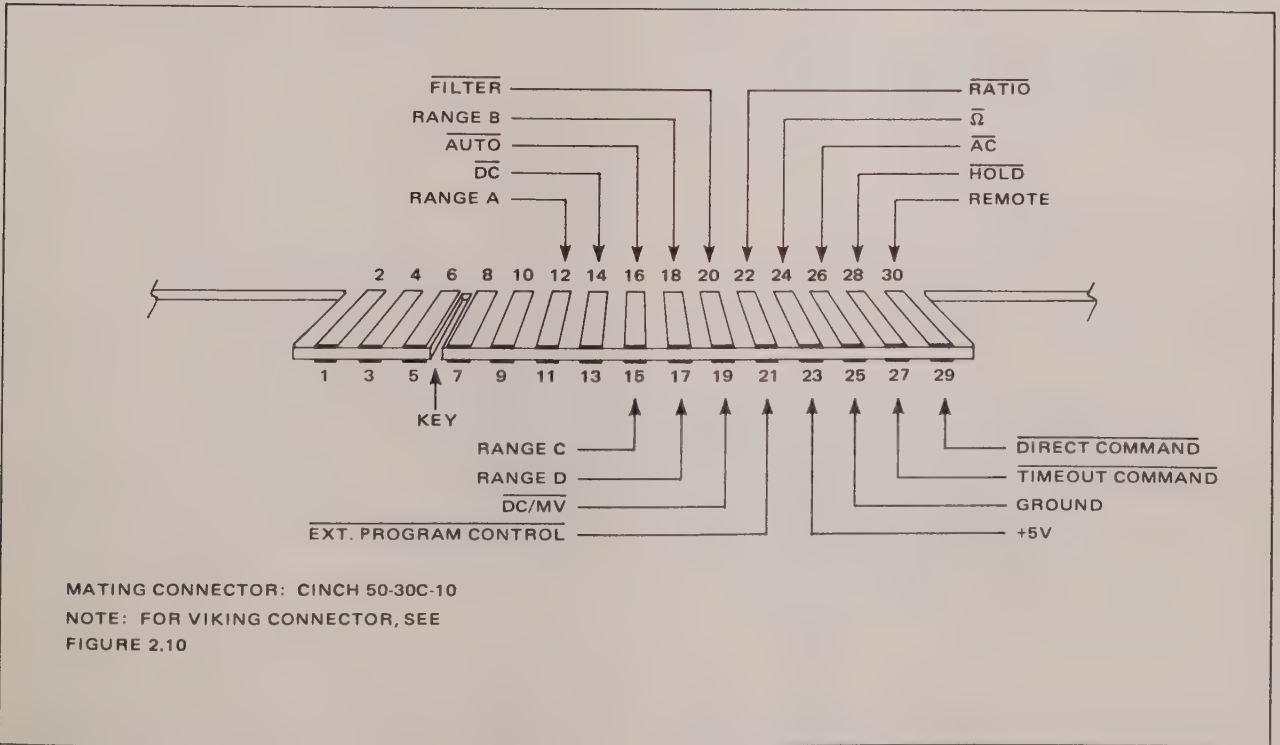

MATING CONNECTOR: CINCH 50-30C-10
NOTE: FOR VIKING CONNECTOR, SEE
FIGURE 2.10

Figure 2.11 - PROGRAM INPUT Connector J202 (Cinch)

2.52 Read Commands.

2.53 Either of two read command lines can be selected by a contact closure to ground or by a negative logic level applied to the appropriate pin. Pin B1, $\overline{\text{DIRECT COMMAND}}$, commands a new measurement after a five millisecond reset delay. Pin B2, $\overline{\text{TIMEOUT COMMAND}}$, starts a new measurement after five milliseconds plus a timeout delay to allow for internal settling time of the measured signal.

2.54 Timeout periods for each function are listed in table 2.5. In autorange, the indicated delays are taken following each range change.

Table 2.5 - Timeouts

Function	Timeout
DC	30 msec
1 ohm to 10 Megohm	30 msec(w-1 out); 300 ms(w-1 in)
100 Megohm	300 msec
Filter	250 msec (plus function timeout)
AC*	500 msec
*See paragraph 2.45	

2.55 MEASUREMENT CONNECTIONS.

NOTE

Before taking any measurements, refer to the list of maximum input voltages, table 2.6.

2.56 Basic Voltage Measurement.

2.57 An ac or dc voltage measurement connection recommended to minimize the effects of noise requires a two-conductor shielded cable connected as shown in figure 2.12.

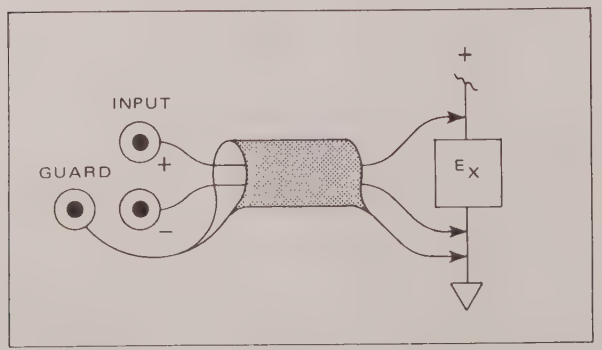

Figure 2.12 - Basic Voltage Measurement Connections

Table 2.6 - Maximum Input Voltage

CAUTION

Do not exceed the following maximum inputs:

DC	1000 VDC or RMS AC
mV/DC	On 10 mV and .1 volt range: 150 VDC or RMS AC On 1V, 10V, 100V, and 1000V ranges: 1000 VDC or RMS AC
AC	1000V RMS decreasing to 20V RMS at 1 MHz (see figure 1.7)
RATIO	Input: same as function selected Reference: +10.5V, –0.5V
OHMS	With + OHMS CURRENT terminal connected to + INPUT: 1Ω to 10 KΩ ranges: –30V/+150V DC or RMS AC 100 KΩ to 100 MΩ ranges: ±150V DC or RMS AC with + OHMS CURRENT terminal floating (from input): ±150V DC or RMS AC
GUARD	Voltage between GUARD and – INPUT must not exceed 250 volts or damage to the instrument may result

2.58 For all voltage measurements, the GUARD lead and the – INPUT lead are connected to the measurement point nearest ground potential. Somewhat less shielding is achieved by placing a shorting bar between – INPUT and GUARD and shorting the single banana plug (shield) to the – INPUT side of the double banana plug at the input connector. This arrangement is adequate for measuring all but low voltage (mV) levels and/or in high-noise environments.

2.59 When making "floating" voltage measurements (both measurement points above ground potential), do not connect GUARD to measurement ground without making sure that the voltage between GUARD and – INPUT does not exceed 250 volts.

2.60 Ohms Measurement.

2.61 Ohms measurement in the Model 4800 consists of the application of a known current through the unknown

(a)

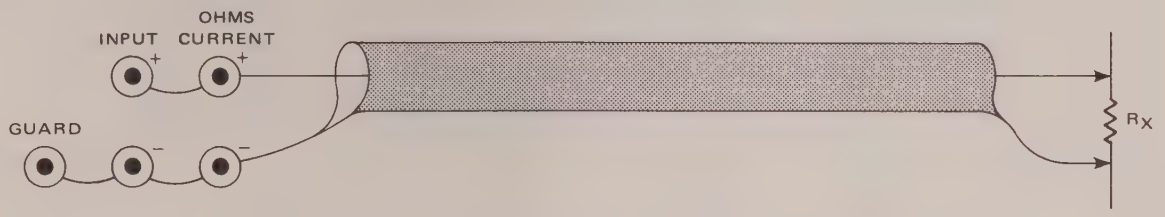

USED FOR NORMAL MEASUREMENTS ON ALL BUT THE 1, 10, and 100 Ω RANGES.

(b)

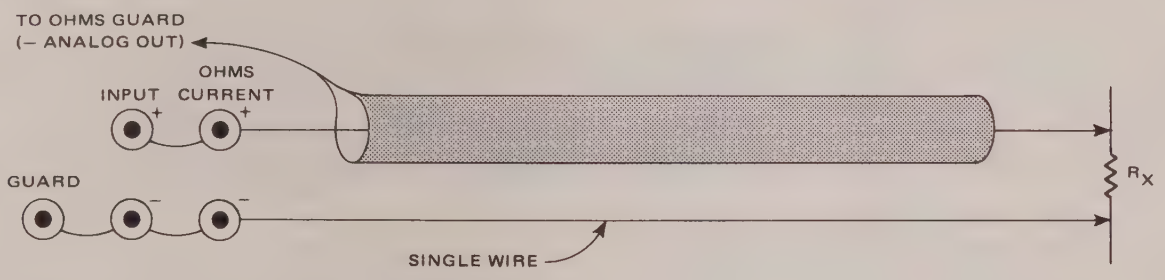

USED ON 100 MΩ RANGE WHERE CABLE LEAKAGE IS A PROBLEM.

(c)

USED ON 100 MΩ RANGE IN HIGH-NOISE ENVIRONMENT; MINIMIZES BOTH NOISE AND LEAKAGE PROBLEMS.

Figure 2.13 - Two Wire Ohms Measurements

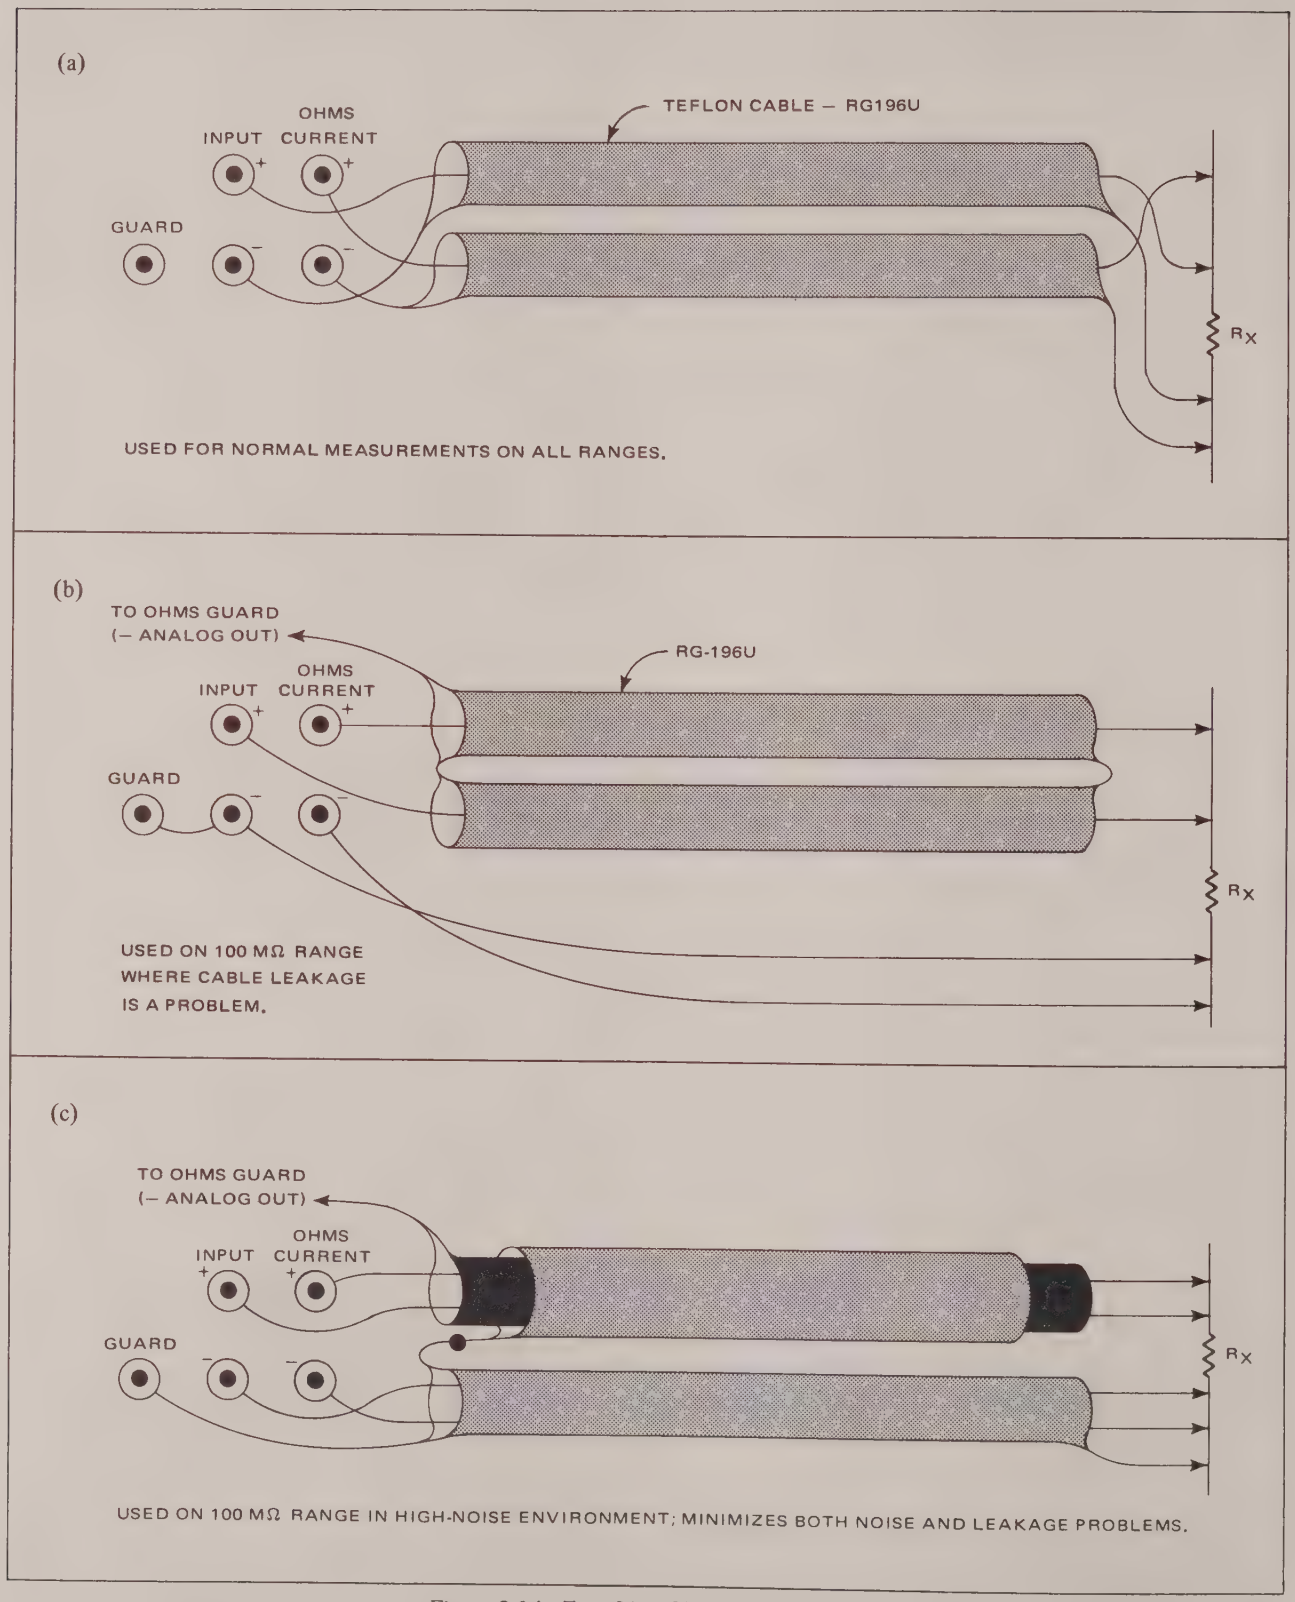

Figure 2.14 - Four Wire Ohms Measurement

resistance (R_X) and measuring the ratio of the voltage drop across R_X to the drop across an internal "full-scale" resistor (E_{RX}/E_{FS}). Current through R_X is applied through leads from the ± OHMS CURRENT terminals. The voltage drop is sensed by the ± INPUT terminals.

2.62 TWO-WIRE MEASUREMENTS.

2.63 Connections for a simple two-wire shielded ohms measurement are shown in figure 2.13a. It consists simply of a single-conductor shielded cable with the conductor serving as both the + CURRENT and + INPUT leads and the shield carrying – CURRENT and – INPUT. While reasonably accurate measurements can be made with this method, shunt leakage problems result from the parallel combinations of R_X and the cable impedance. This causes loss of accuracy, especially at high resistance (100 MΩ range).

2.64 A more accurate two-wire measurement connection is shown in figure 2.13b. The + INPUT and + CURRENT, – INPUT and – CURRENT terminals are again tied together. But now, the positive side is a single-conductor, shielded cable with the shield tied to Ohms Guard. Ohms Guard is the low ANALOG OUTPUT terminal on the rear panel of the Model 4800 when ohms is selected. The negative side is a single wire connected as shown. Guard current is present in the low side, but the leakage problems of the first configuration are eliminated.

2.65 In high noise-level environments, the configuration shown in figure 2.13c is recommended. This method also eliminates error due to shunt leakage, but provides more complete shielding. The positive terminals are tied together and carried in a single-conductor, double-shielded cable with the inner shield tied to Ohms Guard (– ANALOG OUTPUT). The outer shield is tied to GUARD. The negative terminals are tied together and carried in a single-conductor shielded cable with the shield tied to GUARD. This configuration eliminates guard current sensitivity, thereby increasing guarding characteristics.

2.66 FOUR-WIRE MEASUREMENTS.

2.67 In most system applications, the device to be measured is located at a remote location requiring interconnection by cables of lengths from several to possibly hundreds of feet. When measuring low resistance values over long cables, most lead resistance problems can be solved by the use of a four-wire measurement system.

2.68 For high resistance measurements over long cables, other problems are encountered: noise pick-up, leakage resistance, and capacitive loading of the system. These problems can be minimized by proper shielding and the use of ohms guard.

2.69 Figure 2.14a shows a basic shielded four-wire ohms measurement configuration. This method uses two single-conductor shielded teflon cables. The conductors carry the positive sides of the INPUT and CURRENT lines while each shield carries the low side.

2.70 This configuration, although shielded, places the shield capacitance and cable leakage in parallel with R_X. This results in loss of accuracy and slow measurements. In addition, it is very responsive to the triboelectric effect at high resistance measurements.

2.71 Better guarding is achieved by the use of the configuration shown in figure 2.14b. Here again, RG196U teflon dielectric cable (either single-conductor shielded or two-conductor shielded) is used on the positive terminals. The shield(s) are connected to Ohms Guard (low ANALOG OUTPUT terminal). The negative leads are single wires with the – INPUT terminal tied to GUARD.

2.72 This eliminates much of the shunt leakage problem of the previous configuration since guard current now flows through the low side of the measurement circuit. Measurement is much faster since the shield capacity is driven by the guard current.

2.73 A high-noise environment calls for the "super" configuration shown in figure 2.14c. Here, a two-conductor, double-shielded cable is used as the positive leads. The inner shield is tied to Ohms Guard. A two-conductor shielded cable is used as the negative leads. Its shield is tied to GUARD and to the outer shield of the positive cable. The shield is also tied to – CURRENT at the measurement point. This configuration maintains high guarding characteristics while eliminating guard current sensitivity.

2.74 Ratio Measurements.

2.75 Ratio measurements are made by applying a positive d-c voltage to the reference input terminals on the rear panel and an input signal of any function at the front input terminals. For DC/DC, DC-MV/DC, or AC/DC ratios, the reference voltage must be within the range of +.5V to +10.5V. For Ω/DC ratio, the reference voltage must be within +9V to +10.5V. Input signal limitations (numerator) are the same as those given for conventional measurement of the particular function (table 2.6). The readout is the ratio multiplied by ten: $E_{input}/E_{reference} \times 10$. The – INPUT terminal is internally connected to the – REF input terminal.

2.76 ADDING/REMOVING ACCESSORIES.

2.77 The AC, mV, or Ohms/mV accessories may be added or removed at any time in the field without modification to the basic instrument. Note that switching board (403431) is required whenever accessories are used. Access to the accessory mounting connectors is by removal of the top cover and shield as described in paragraph 5.8.

2.78 When an accessory is added or removed from the instrument, a jumper corresponding to the accessory is removed or added to allow proper operation of the NO circuitry. The three jumpers (W1, W2, and W3) are located on the display board, shown partially in figure 2.15. When an accessory is added, the corresponding jumper is removed; conversely, when an accessory is removed, the jumper is added as shown in table 2.7.

Table 2.7 - Accessory Jumpers

Accessory	Jumper
AC	W1
Preamp	W2
Preamp/Ohms	W2, W3

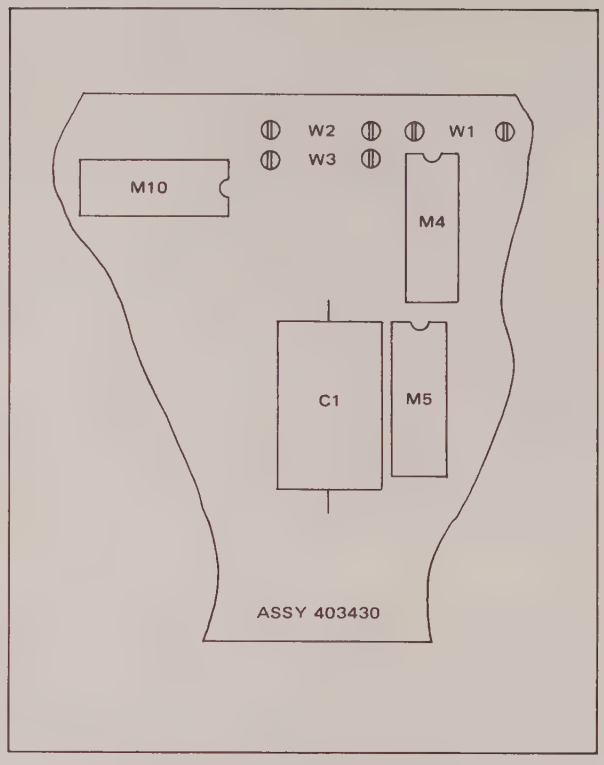

Figure 2.15 - Jumper Location

SECTION 3 SPECIFICATION TESTS

3.1 GENERAL.

3.2 This procedure is designed to insure that the instrument is operating properly and within its specifications. If any of the readings are not within tolerance, refer to the calibration procedure. If the instrument fails to operate properly, refer to the troubleshooting procedure.

3.3 PREPARATION.

3.4 Allow one hour warmup time for the instrument to reach full accuracy.

3.5 EQUIPMENT.

3.6 A list of equipment is provided in table 3.1.

3.7 PROCEDURE.

3.8 Connect the DVM and test equipment as shown in the figure supplied with each accuracy check. Select the controls and inputs as called out in the tables and monitor the DVM readout for the indicated values.

Table 3.1 - Required Equipment

TYPE	REQUIRED SPECS	SUGGESTED EQUIPMENT
DC Voltage Standard	Adjustable: 0 to 1000V RMS Resolution: 1 μV on 10V range Accuracy: ± .003%	Fluke 332A
Decade Voltage Divider	.005% Accuracy	ESI Model RV622A
AC Laboratory power source	Variable: 0 to 500V RMS & 20 Hz to 100 KHz. Resolution better than 100 PPM. Harmonic distortion of 0.1% or less. Stability of .01%	HP 745/746
Thermal Transfer voltmeter [1]	AC/DC thermal transfer voltmeter. Ranges: 1 to 500V. Accuracy 0.05% or better	Holt Model 6 Thermal Transfer Voltmeter
Standard Resistors [2]	1, 10, 100 Megohms; 1, 10, 100 Kohm; 1, 10, 100 Ohm. All ± .005% except 10 Megohm and 100 Megohm which are ± .01%	ESI SR-1 series standard resistors
1/4W Carbon Resistors	10, 100 Kohm and 100 Ohm	
Capacitor	1 μF (non polar)	
Batteries, 2 required	1.5V cells having screw type binding posts	

[1] Required for instruments equipped with AC Option only

[2] Required for instruments equipped with OHMS Option only

Table 3.2 - DC Range Check (Low Ranges)

DVM			INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION		RANGE	DC VOLTAGE STANDARD	DIVIDER SETTING			
mV/DC		10 mV	10.00000	.00100	10.000	09.999 - 10.001	23°C ± 5°C (After zeroing)
	DC	100 mV	10.00000	.01000	100.00	099.99 - 100.01	
		1V	10.00000	.10000	1.0000	0.9999 - 1.0001	

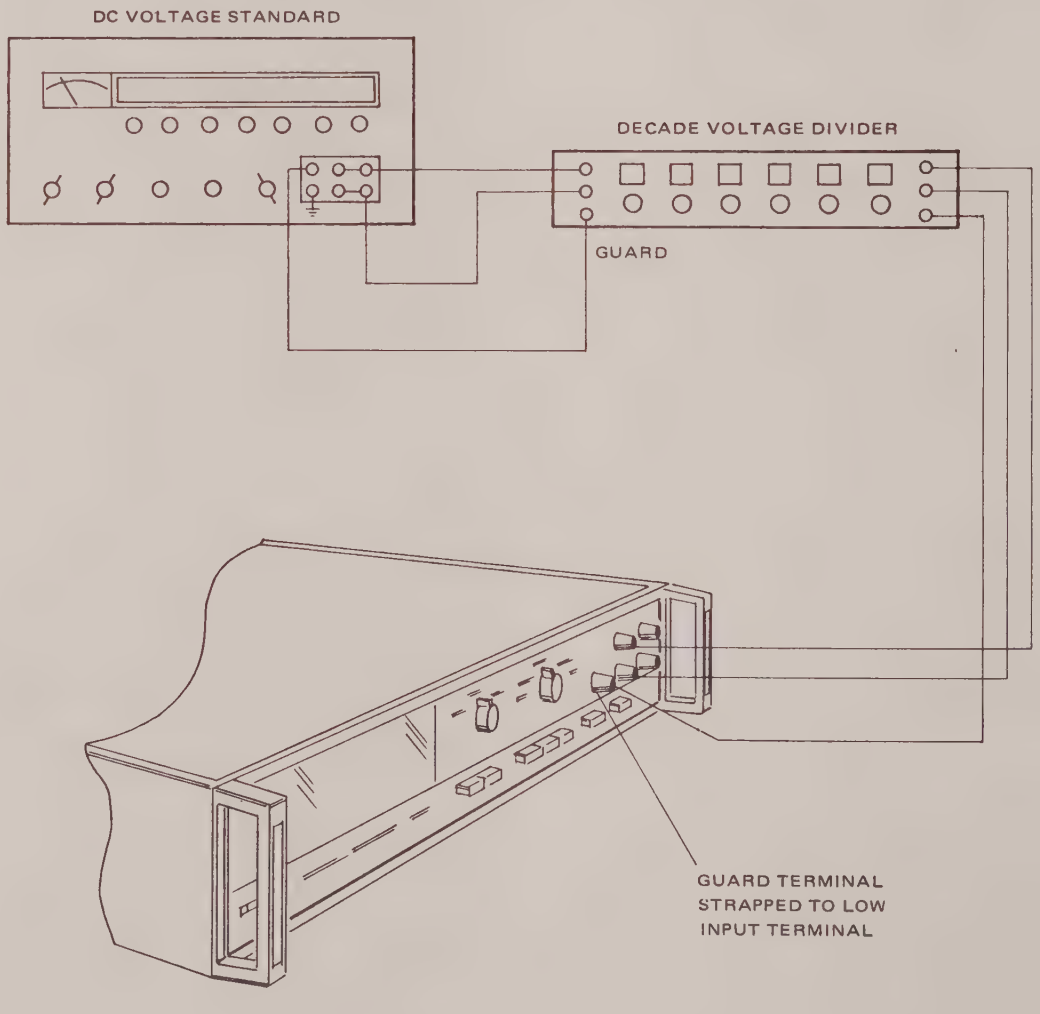

Table 3.3 - DC Range Check (High Ranges)

DVM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	DC VOLTAGE STANDARD				
DC	10	10.0000V		10.000	9.999 - 10.001	$23^{o}C \pm 5^{o}C$ (After zeroing)
	100	100.000V		100.00	99.99 - 100.01	
	1000	1000.00V		1000.0	999.9 - 1000.1	

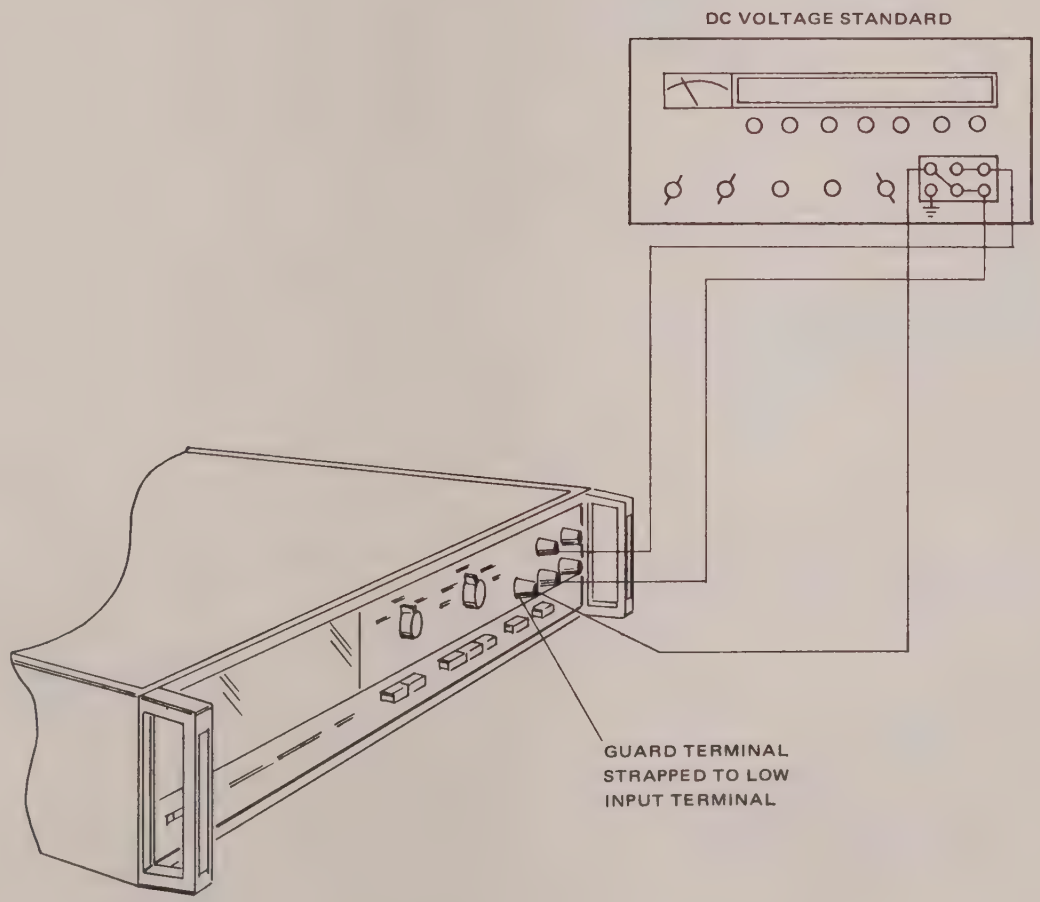

Table 3.4 - Ratio Check

DVM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	DC VOLTAGE STANDARD				
DC	10	+ 2.00000V		10.000	9.990 - 10.010	23°C ± 5°C (After zeroing)
RATIO	10	+10.00000V		10.000	9.999 - 10.001	

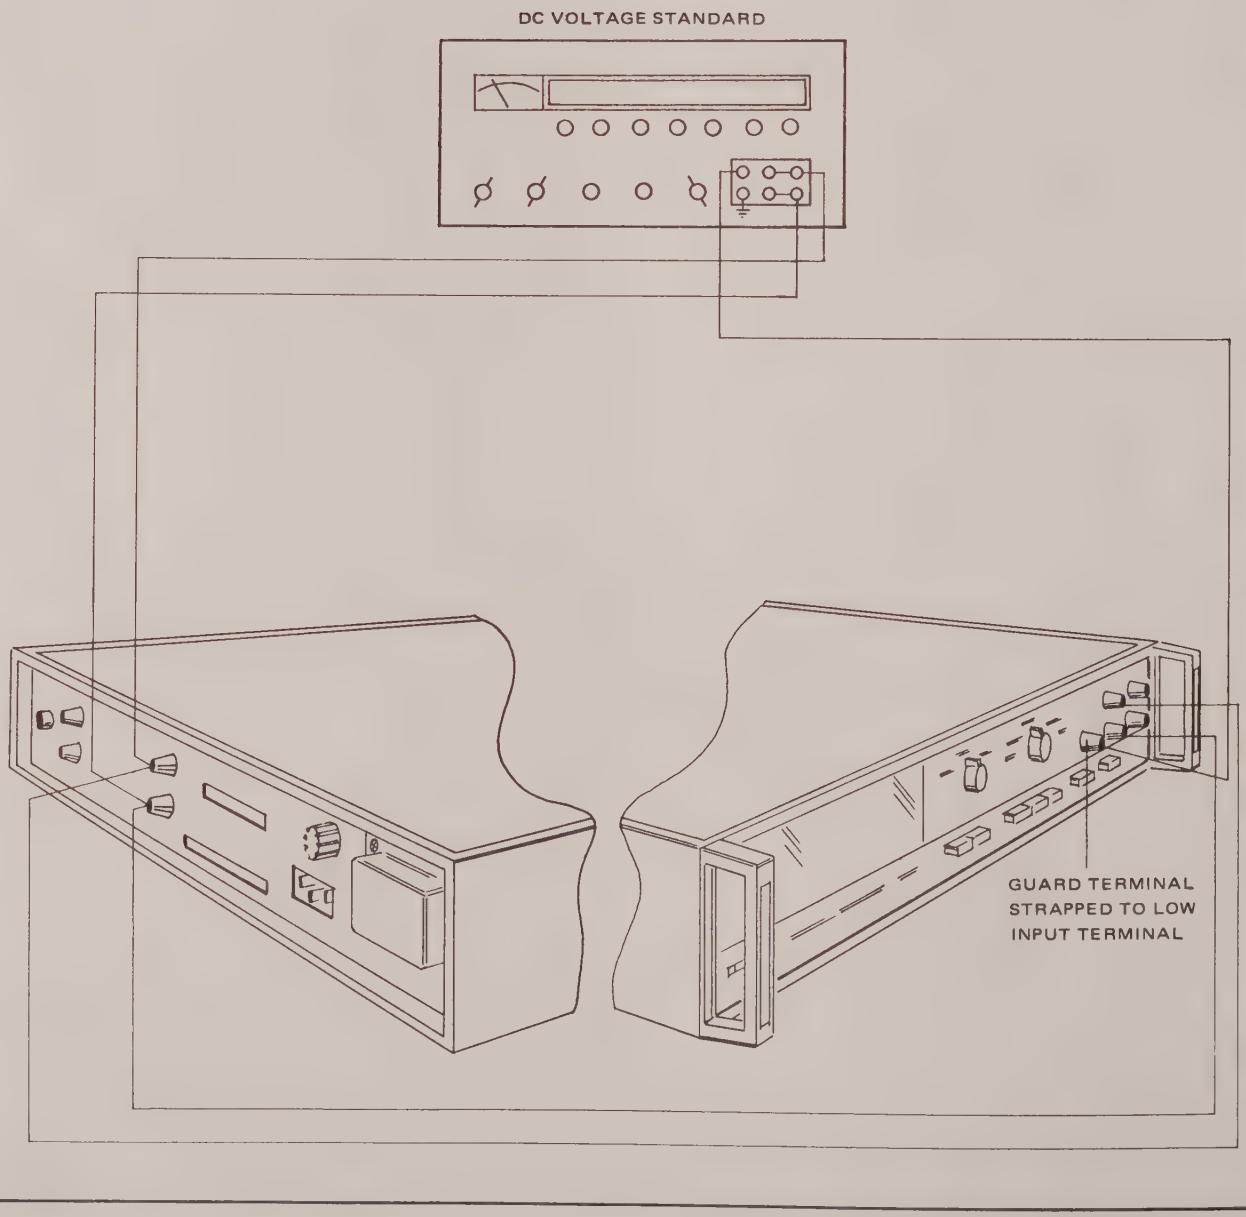

Table 3.5 - DC Linearity Check

DVM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	
FUNCTION	RANGE	DC VOLTAGE STANDARD				
DC	100	90.0000		90.00	89.99 - 90.01	
		80.0000		80.00	79.99 - 80.01	
		70.0000		70.00	69.99 - 70.01	
		60.0000		60.00	59.99 - 60.01	
		50.0000		50.00	49.99 - 50.01	
		40.0000		40.00	39.99 - 40.01	
		30.0000		30.00	29.99 - 30.01	
		20.0000		20.00	19.99 - 20.01	

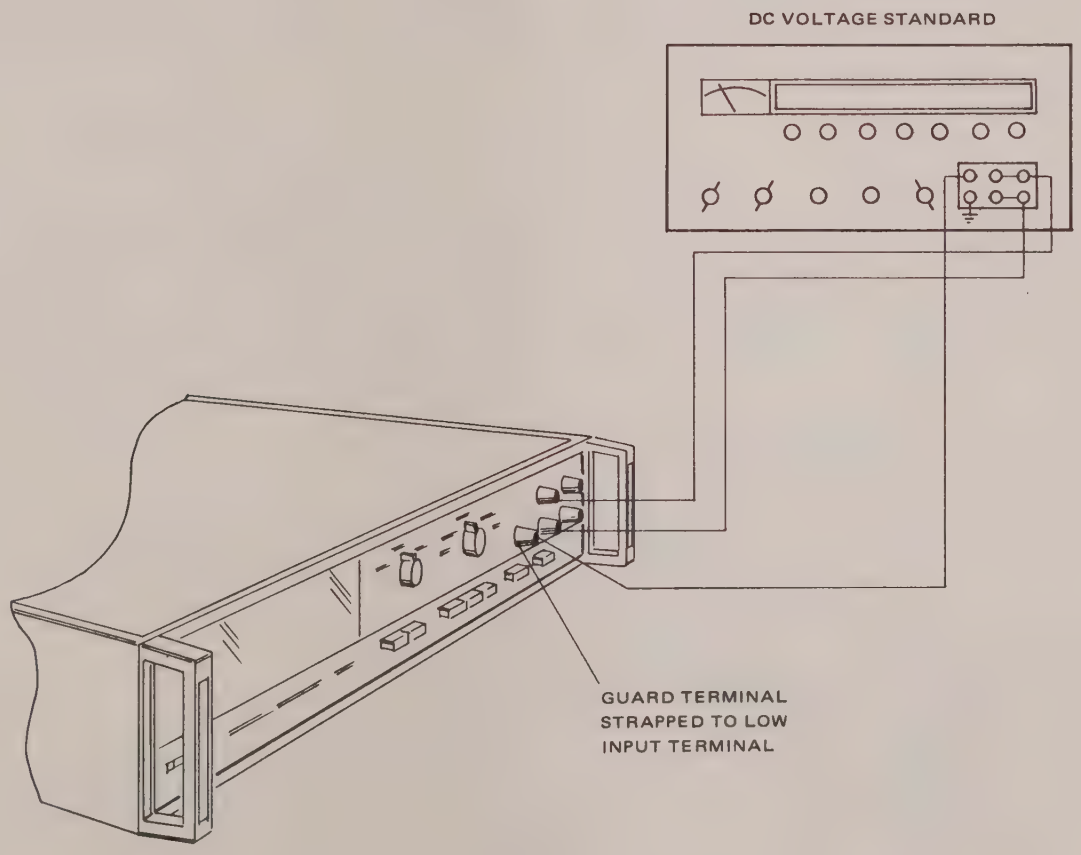

Table 3.6 - DC Input Resistance

DVM		INPUT SIGNAL		DVM DISPLAY	TOLERANCE	NOTE
FUNCTION	RANGE	DC VOLTS*	S1			
DC	0.1	.100000	Closed	.10000		Rs
			Open		.09998 - .10002	100 KΩ
	1	1.000000	Closed	1.0000		
			Open		0.9999 - 1.0001	100 KΩ
	10	10.00000	Closed	10.000		
			Open		9.999 - 10.001	100 KΩ
	100	100.0000	Closed	100.00		
			Open		99.99 - 100.01	1 KΩ
	1000	1000.000	Closed	1000.0		
			Open		999.9 - 1000.1	1 KΩ
						*Adjust the DC Voltage Standard to produce the DVM DISPLAY reading.

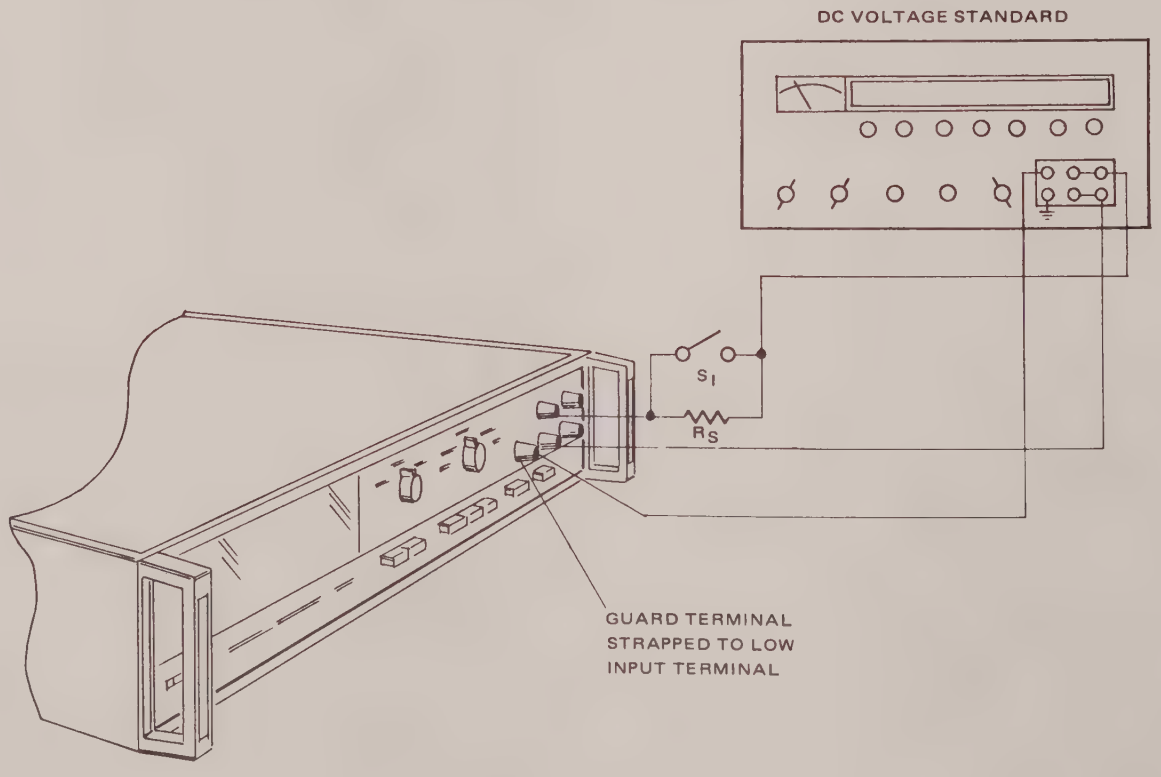

Table 3.7 - DIAC Range Check

DVM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	DC VOLTAGE STANDARD	AC			
AC	.1	.100000	0.1V, 10 KHz	.10000	.09986 - .10014	Set thermal transfer voltmeter to same range as the DMM Adjust the amplitude controls on the AC source to produce a Null on the thermal transfer voltmeter, for each new setting 23°C ± 5°C
		.100000	0.1V, 50 KHz	.10000	.09980 - .10020	
	1	1.000000	1.V, 10 KHz	1.0000	0.9994 - 1.0006	
		1.000000	1.V, 50 KHz	1.0000	0.9992 - 1.0008	
	10	10.00000	10V, 10 KHz	10.000	09.994 - 10.006	
		10.00000	10V, 50 KHz	10.000	09.992 - 10.008	
	100	100.0000	100V, 10 KHz	100.00	099.94 - 100.06	
		100.0000	100V, 50 KHz	100.00	099.92 - 100.08	
	1000	125.0000	125V, 10 KHz	125.00	0124.7 - 0125.3	
		125.0000	125V, 50 KHz	125.00	0124.6 - 0125.4	

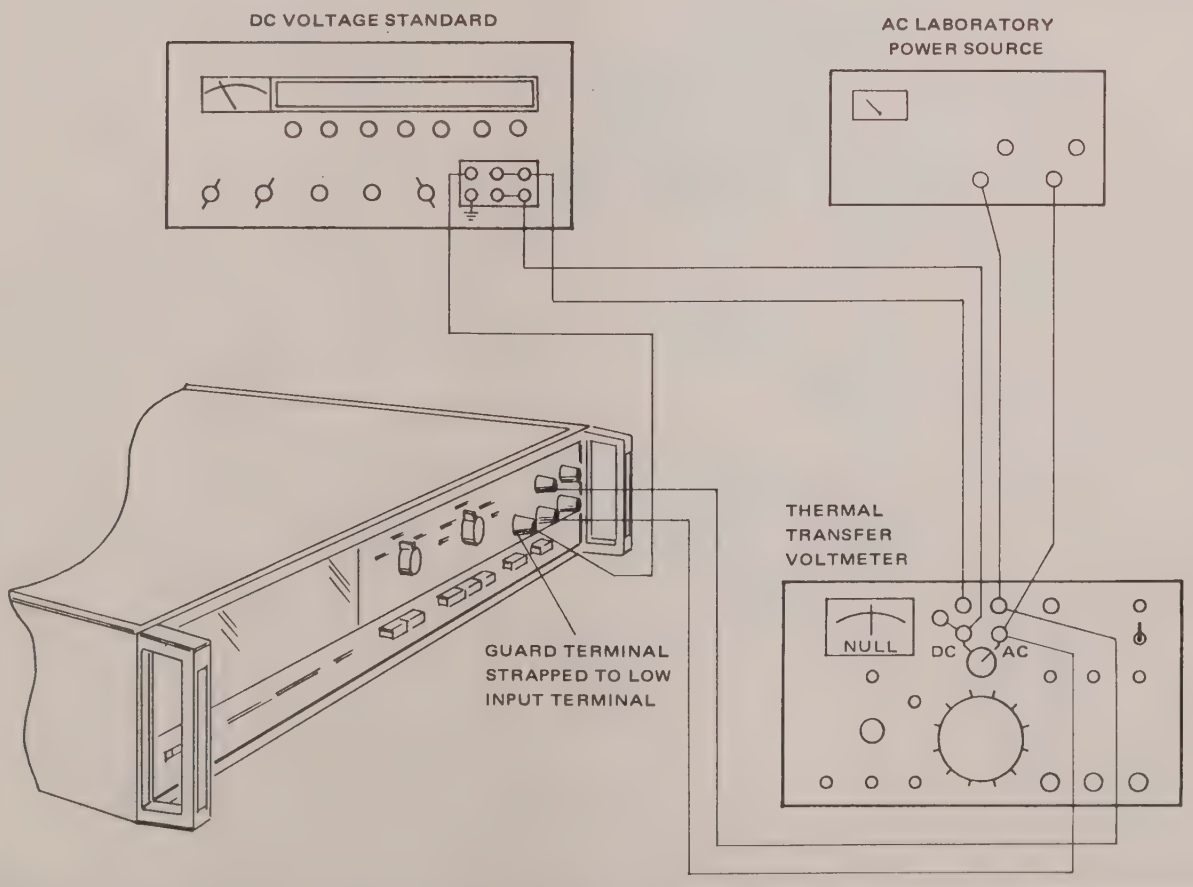

Table 3.8 - RMS AC Range Check

DVM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	DC VOLTAGE STANDARD	AC			
AC	.1	.100000	0.1V, 10 KHz	.10000	.09981 - .10019	Converter AC coupled
		.100000	0.1V, 50 KHz	.10000	.09880 - .10120	
	1	1.000000	1.V, 10 KHz	1.0000	0.9990 - 1.0010	Set thermal transfer voltmeter to same range as the DMM
		1.000000	1.V, 50 KHz	1.0000	0.9980 - 1.0020	
	10	10.00000	10V, 10 KHz	10.000	09.990 - 10.010	
		10.00000	10V, 50 KHz	10.000	09.980 - 10.020	Adjust the amplitude controls on the AC source to produce a Null on the thermal transfer voltmeter, for each new setting
	100	100.0000	100V, 10 KHz	100.00	099.90 - 100.10	
		100.0000	100V, 50 KHz	100.00	099.80 - 100.20	
	1000	125.0000	125V, 10 KHz	125.00	0124.6 - 0125.4	
		125.0000	125V, 50 KHz	125.00	0123.9 - 0126.1	
						$23^{o}C \pm 5^{o}C$

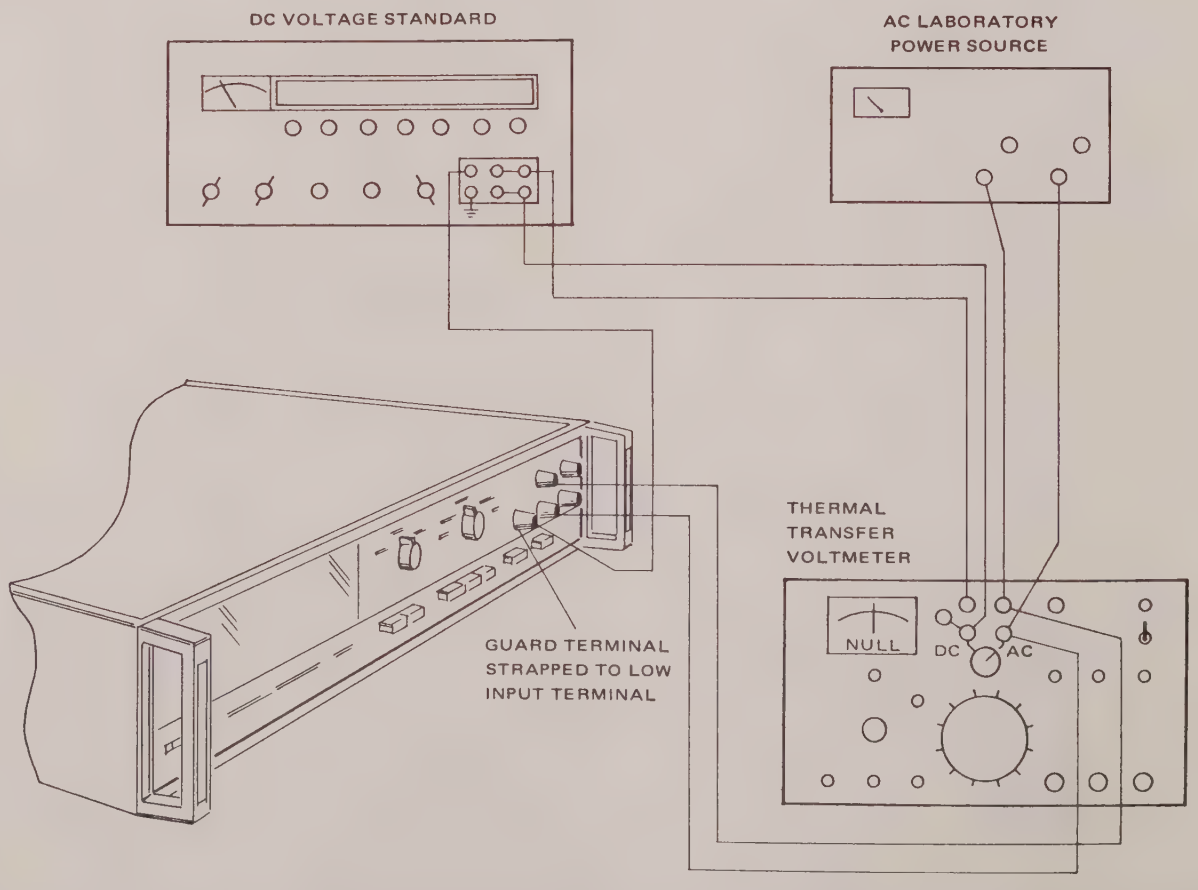

Table 3.9 - Ohms-Megohms Range Check

DVM		INPUT SIGNAL		NOMINAL READING (Same as Standard)	TOLERANCE
FUNCTION	RANGE	NOMINAL STANDARD VALUE	TOLERANCE		
Ω - MΩ	1Ω	1Ω	.005%		±7 digits
	10Ω	10Ω	.001%		±3 digits
	100Ω	100Ω	.001%		±3 digits
	1 kΩ	1 kΩ	.001%		±3 digits
	10 kΩ	10 kΩ	.001%		±3 digits
	100 kΩ	100 kΩ	.001%		±3 digits
	1 MΩ	1 MΩ	.001%		±3 digits
	10 MΩ	10 MΩ	.005%		±9 digits
	100 MΩ	100 MΩ	.02%		±31 digits

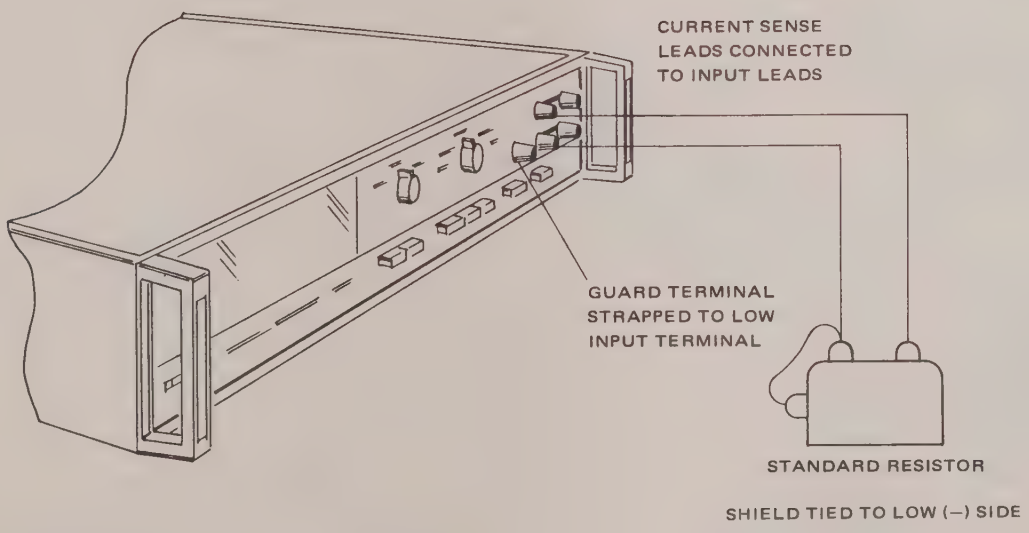

Table 3.10 - Common Mode Rejection (In DC Volts Function)

DVM		INPUT SIGNAL		NOMINAL READING See Note 1	TOLERANCE	NOTE
FUNCTION	RANGE	S1				
DCV FILT. OUT	0.1	Off			±1 digit from nominal	1) With switch S-1 in the off position, record the reading displayed on the DMM's readout in the "nominal reading" boxes of the table. DC: ±5 digits=140 dB AC: ±25 digits=120 dB ±12 digits=126 dB
		DC			±5 digits from nominal	
		AC			±25 digits from nominal	
DCV FILT. IN	0.1	DC			±5 digits from nominal	
		AC			±12 digits from nominal	

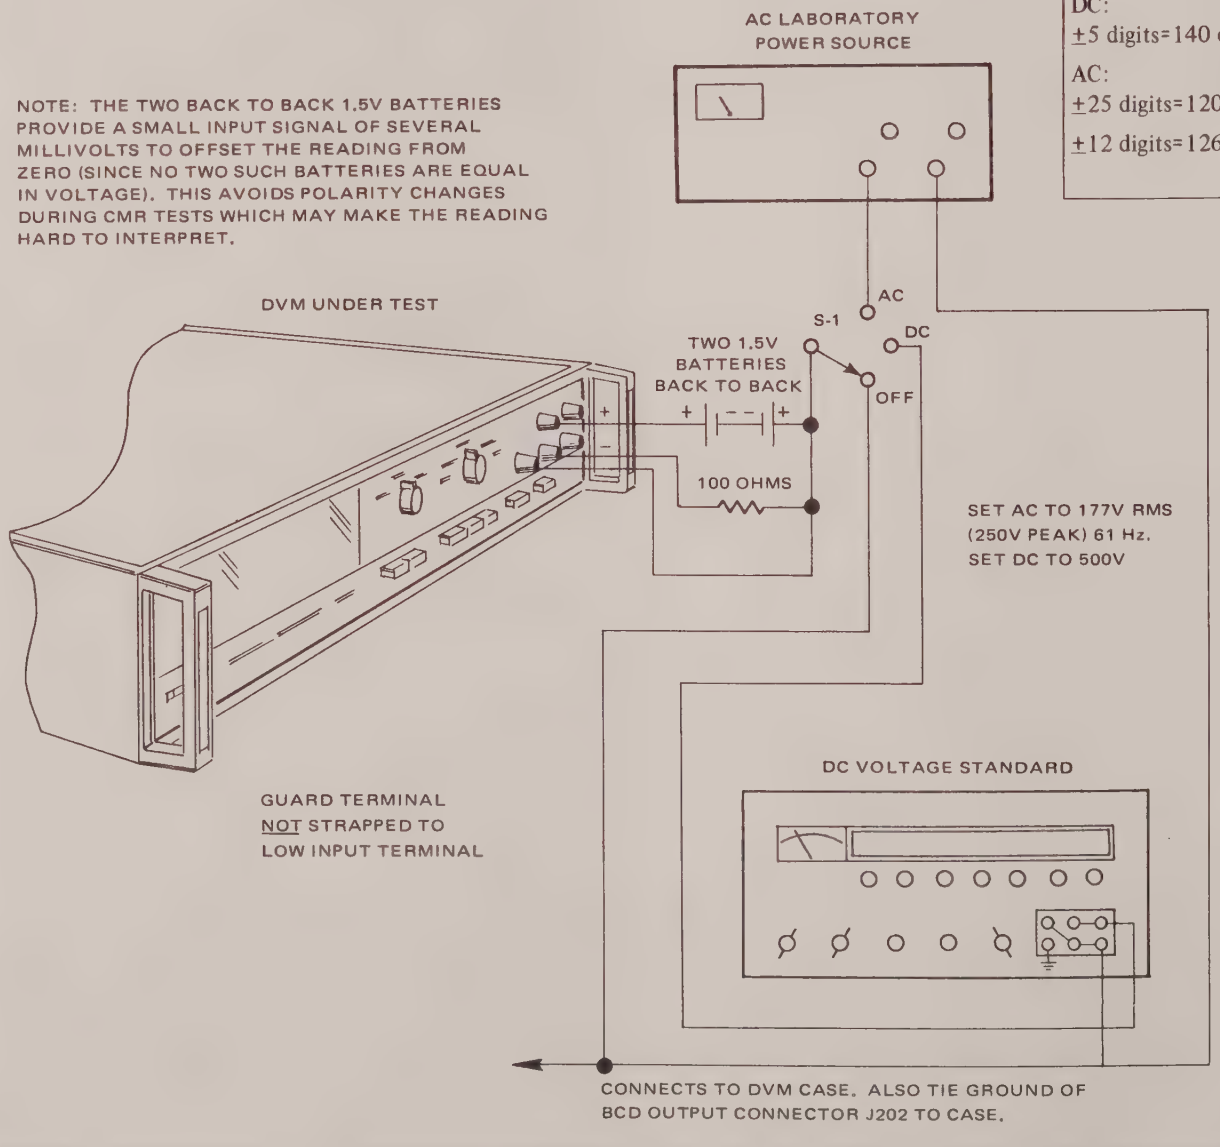
AC LABORATORY POWER SOURCE
NOTE: THE TWO BACK TO BACK 1.5V BATTERIES PROVIDE A SMALL INPUT SIGNAL OF SEVERAL MILLIVOLTS TO OFFSET THE READING FROM ZERO (SINCE NO TWO SUCH BATTERIES ARE EQUAL IN VOLTAGE). THIS AVOIDS POLARITY CHANGES DURING CMR TESTS WHICH MAY MAKE THE READING HARD TO INTERPRET.
DVM UNDER TEST
AC
S-1
DC
TWO 1.5V BATTERIES BACK TO BACK
OFF
100 OHMS
SET AC TO 177V RMS (250V PEAK) 61 Hz. SET DC TO 500V
DC VOLTAGE STANDARD
GUARD TERMINAL NOT STRAPPED TO LOW INPUT TERMINAL
CONNECTS TO DVM CASE. ALSO TIE GROUND OF BCD OUTPUT CONNECTOR J202 TO CASE.

Table 3.11 - Normal Mode Noise Rejection (In DC Volts Function)

DVM		INPUT SIGNAL		NOMINAL READING	TOLERANCE	NOTE
FUNCTION	RANGE	DC	AC			
DC FILT. OUT	10	0.5V		00.500	±1 digit	
		0.5V	10V*, 60 Hz	00.500	±40 digits	
FILT. IN	10	0.5V	10V*, 59 Hz	00.500	±40 digits	
	1	0.5V	10V*, 300 Hz	0.5000	±3 digits	

*peak

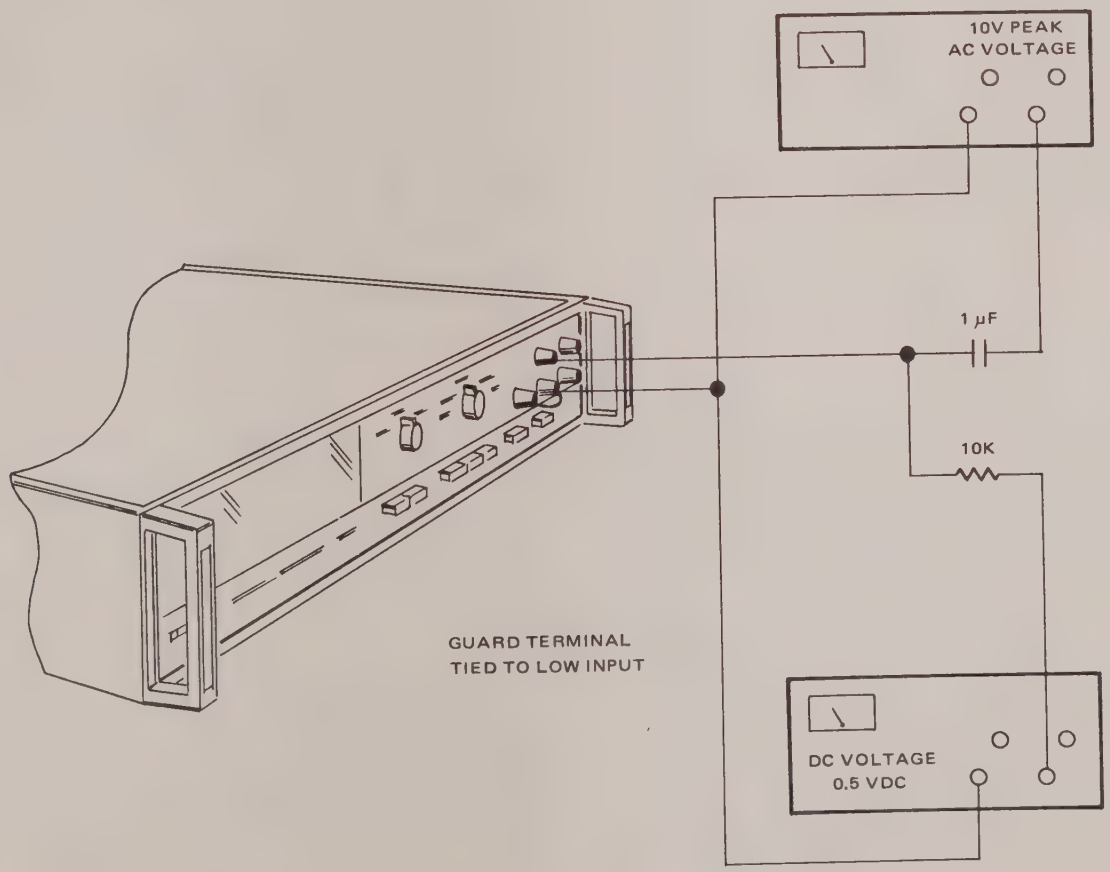

Table 3.12 - Common Mode Rejection (In AC Volts Function)

DVM		COMMON MODE INPUT SIGNAL		NOMINAL READING (see note)	TOLERANCE	NOTE
FUNCTION	RANGE	VOLTAGE	FREQ.			
AC	1	200V P.P.	60 Hz		±1 digit	Enter reading with shorted input in nominal column before beginning
	10	200V P.P.	60 Hz		±1 digit	
	100	200V P.P.	60 Hz		±1 digit	
	1000	200V P.P.	60 Hz		±1 digit	
	0.1	200V P.P.	60 Hz		±10 digits	

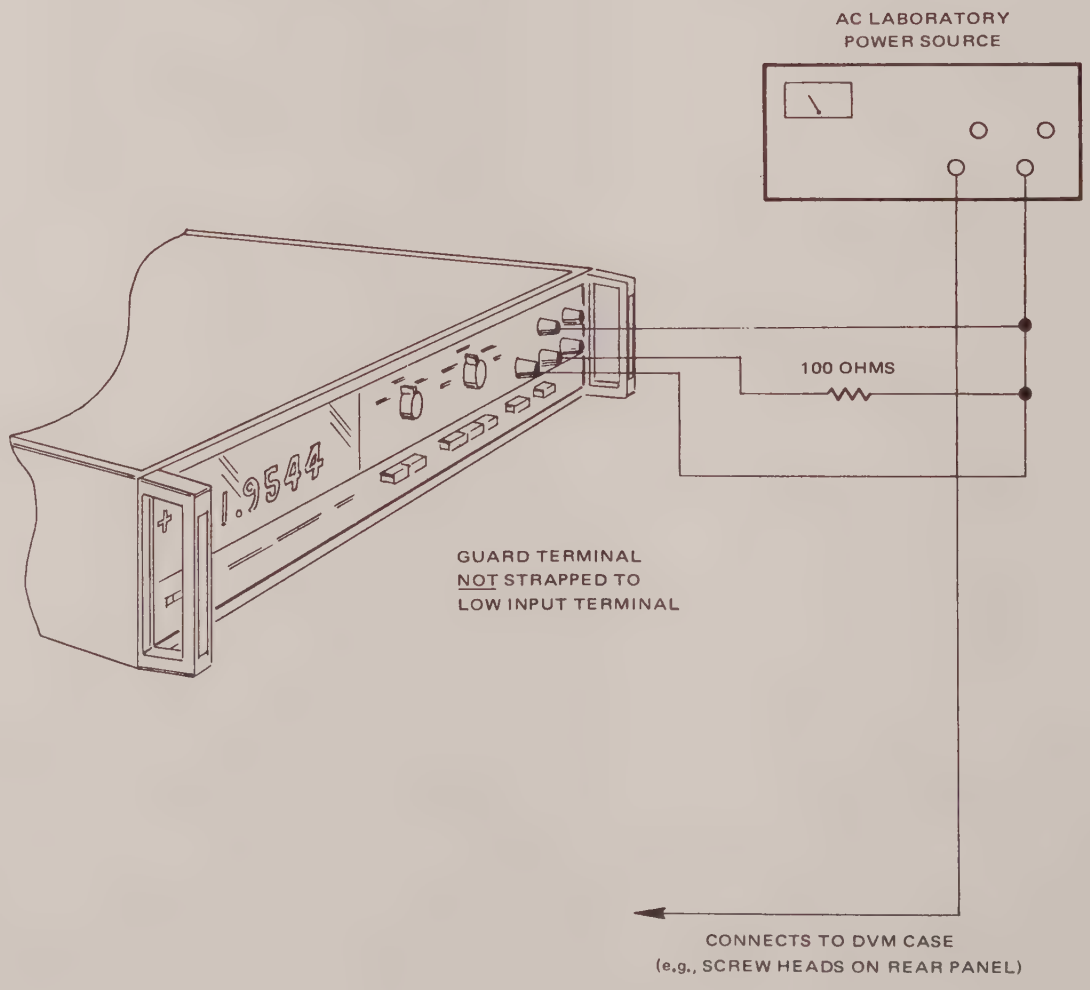

SECTION 4 THEORY OF OPERATION

4.1 GENERAL.

4.2 This section covers the general theory of the Model 4800 DVM. The instrument is defined in terms of its operating principles and the sequence of a normal measurement. Each board is then described individually. All drawings in this section are simplified for the purpose of this description and serve only to supplement the complete schematics of Section 6.

4.3 The Model 4800 DVM is a dual-slope integration instrument consisting of three major functional parts: signal conditioning, integrating, and display. The signal conditioning section consists of the switching card, a-c converter, ohms converter, millivolt converter (preamplifier), attenuator, isolator, and filter. The function of these components is to convert the incoming signal to a stable d-c signal, scaled to 10 volts full-scale. The integrating section consists of the integrator, amplifier, null detector, and the plus and minus reference supplies. The purpose of these components is to convert the conditioned input signal into an equivalent time-period and transmit this time period to the display portion of the DVM. The signal conditioning and integrating portions are floating and isolated from the grounded display to achieve high common mode rejection. All digital inputs and outputs are interfaced through the display section.

4.4 The display section consists of the program logic, range logic, clock, counter, storage, readout, remote program, and BCD output. The purpose of the display portion is to control the signal conditioning and integrating portions and to convert the time-period generated by integrator into a numeric value for display by the readout.

4.5 PROGRAM STATES.

4.6 The Model 4800 is shown in a simplified block diagram form in figure 4.1 and a program sequence timing diagram in figure 4.2. Referring to these figures, the instrument follows four well-defined program states, generated by two flip-flops (designated A and B) in the program logic.

4.7 PGM-0.

4.8 PGM-0 is the reset state, with the value of the previous DVM reading displayed on the readout and the instrument prepared to accept a command for a new reading. This step is defined by the program logic flip-flops being in the state $\overline{A} \cdot \overline{B}$. Read commands are generated in three ways: internally, every 250 milliseconds + reading time with PERIODIC selected; externally, by depressing the SINGLE switch on the front panel with HOLD selected; or remotely, by externally generating a command pulse with REMOTE selected. The command pulse, regardless of how produced, initiates a five-millisecond delay during which the integrator is reset to zero.

4.9 PGM-1.

4.10 At the completion of the 5 ms delay; the program logic advances to $A \cdot \overline{B}$ and the signal integrate sequence (PGM-1) begins. The signal integrate period converts the conditioned input signal into an equivalent charge which is a function of the input value and the integration period. At the beginning of the signal integration period, the count line is enabled, permitting clock pulses to advance the counter at the clock rate (600 kHz). Simultaneously, the integrator reset is disabled and the isolator gate is enabled permitting the integrator to charge at a rate determined by the input signal. After 16-2/3 milliseconds, the counter overflows (10,000 clock cycles) and the signal integration period is complete.

4.11 PGM-2.

4.12 PGM-2 is the reference integration state. The counter overflow advances the program logic to $A \cdot B$ and a 16.7* microsecond delay pulse is generated. The isolator gate is disabled, the polarity of the input signal is determined, and the reference gate is enabled (the gate is selected which connects the integrator input to the reference having the opposite polarity as the input signal). During the delay pulse, the counter is held at zero by the counter reset (for ten clock counts) to permit settling of the integrator. At the end of the delay, the reset is disabled and the counter again advances at the clock rate. The integrator begins discharging at a rate determined by the reference voltage. The time required for the integrator to discharge is measured by the clock-counter and is determined by the initial charge developed during the signal integration period. The state PGM-2 is completed when the integrator charge returns to zero and is indicated by the zero axis-crossing signal. The time required for the period to elapse is the sum of the 16.7 microsecond delay and the time interval of the reference integration (zero to 33.3 milliseconds with 100% overrange).

4.13 PGM-3.

4.14 When the zero axis signal is produced, the program logic is advanced to $\overline{A} \cdot B$, the strobe step. A strobe pulse (one clock pulse) is generated, commanding the transfer of

*For 50 Hz instruments; see figure 4.2

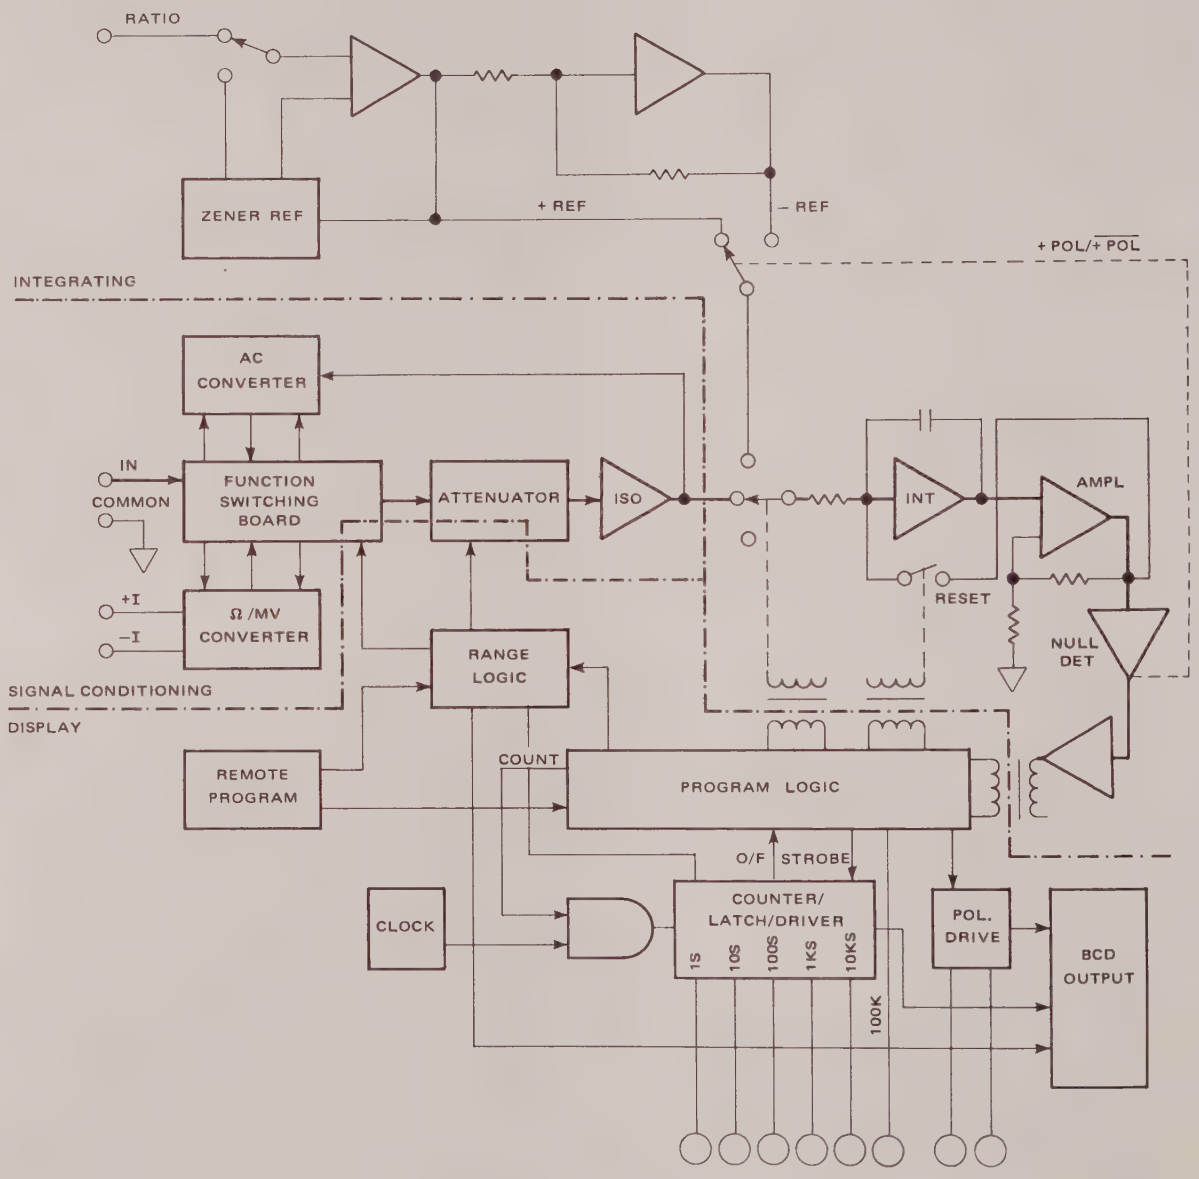

Figure 4.1 - Block Diagram 4800 DVM

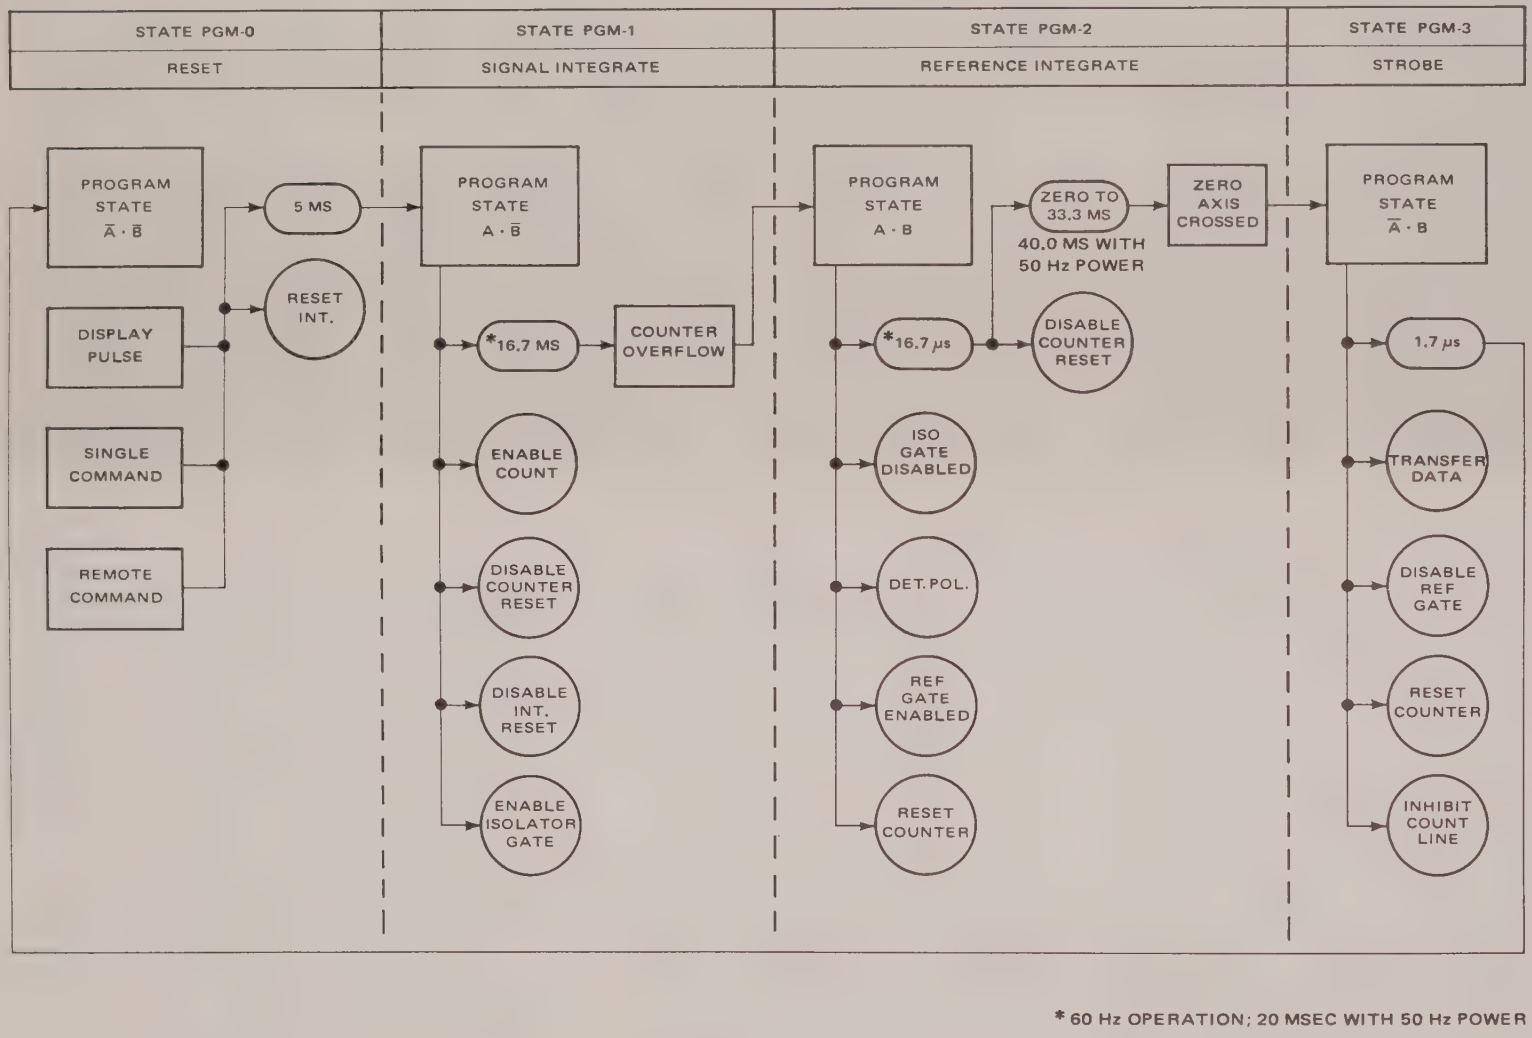

Figure 4.2 - Sequence Timing Diagram

data from the counter to the storage latches. The latches retain the data which is displayed by the readout until the next PGM-3 state (strobe from next reading). At the same time, the reference gate is disabled, the counter is reset to zero (actually, 30,000) and the count line is inhibited. The completion of the strobe pulse advances the program logic to $\overline{A} \cdot \overline{B}$ (PGM-0) and the instrument is ready to take a new reading.

4.15 BOARD DESCRIPTIONS.

4.16 When fully equipped, the Model 4800 consists of nine printed circuit boards, eight of which plug into the remaining interconnection and logic ("mother") board.

4.17 Interconnection & Logic Board (Schematic: figures 6.1 and 6.3).

4.18 This is the largest board in the instrument and provides the most functions. It couples all of the other boards together and on it is located the circuits for the power supplies, readout, BCD output, program counter, range logic, attenuator, and isolator gain. This board and the display board comprise the entire digital section. Basically, there are two power supplies completely separate and isolated from each other. The digital supply consists of a high current handling +5-volt supply for powering the digital circuitry, a +220-volt supply for the readout tubes and the display board, and a −1-volt supply for use on the remote program board. The analog supply consists of +31 and −31-volt unregulated supplies and regulated +18 and −18-volt supplies, all referenced to analog ground. These supplies provide power for all of the analog circuits of the DVM.

4.19 The Readout consists of the readout tubes, decoder-drivers, storage, decade counters, overflow counters, and range logic. The counter receives clock pulses during the entire integration period (program states 1 and 2) but the counter advancement is temporarily halted when the highest decade overflows. The overflow signal is produced by the 8 bit of the highest decade going false at the same time Q2 of F/F 2 goes true. This starts the 16.7 ms delay generator (on display board) that prevents the counter from advancing during the 16.7 ms period. The overflow also causes the program counter to advance to program state 2 (reference integration period). The storage retains the counter setting from the previous reading until commanded to accept new data by a strobe pulse (program state 3). The range logic indicates when the measurement is 1000 or greater (true) or less than 1000 (false).

4.20 The BCD output for the numeric data is taken from the output of the storage. The majority of the remaining output data originates on the display board.

4.21 The program logic dictates the timing and operating sequence of the DVM and consists primarily of a four-step counter. The counter is advanced initially by the read command which may be generated internally by activation of the front panel switch or externally through the remote program command. The counter is advanced through the remaining program steps by the counter overflow and axis crossing detector. (See figure 4.2, sequence timing diagram.)

4.22 The range logic consists of a synchronous 4-bit up/down counter, two full adders, and logic gates. The circuitry, with AUTO RANGE selected, automatically selects the most suitable range for the input signal being monitored. Associated circuitry detects when the instrument is in a range unsuitable for the function selected and automatically selects the 1000 range, even with HOLD selected.

4.23 The two full adders operate as equality detectors, one for maximum range and the other for minimum range of any given function. The adders compare the output of the up/down counter with a binary code, the value of which is dependent on the function selected (see table 4.1). When the numeric sum of the two binary inputs to the maximum autorange limit detector is greater than 15, the up/down counter is inhibited from counting up. When the numeric sum of the minimum autorange limit detector is not greater than 15, the up/down counter is inhibited from counting down.

Table 4.1 - Range Limit Codes

Function	Max Limit				Range	Min Limit				Range
	1	2	4	8		1	2	4	8	
Ω	0	1	1	0	100 MΩ	0	1	1	1	1Ω
mV-DC	0	0	0	1	1000V	1	0	1	1	10 mV
DC	0	0	0	1	1000V	0	0	1	1	.1V
AC	0	0	0	1	1000V	0	0	1	1	.1V

4.24 The count commands to the up/down counter are in the form of two normally true clock lines. The positive-going edge of a negative pulse applied to the appropriate clock line causes the counter to count up or down by one count. Each of the four flip-flops in the up/down counter can be individually preset. By pulling the LOAD line on the counter to ground, the outputs of the counter assume the level of the preset lines. In manual range the load line is always false and the binary data from the range switch is transferred directly through the counter. In autorange, the load line is normally true and control is through the clock lines.

4.25 Range changes are generated if required during program step 3 (the one-clock-pulse strobe during which the data from the decade counters is transferred to the storage). At this time a pulse, designated $\overline{X}$ and generated solely for the range circuitry, is enabled ($\overline{X}$ is generated with clock but lags it by 90°). The enabled $\overline{X}$ generates an uprange command, a downrange command or neither if the proper range has been reached. An uprange command is generated if $\overline{\text{MAX LIMIT}}$ is true (instrument is not in the highest possible range for the function selected) and $\overline{Q_2O/F}$ is true (instrument has reached the 100% overrange limit). A downrange command is generated if the MIN LIMIT detector is true (instrument is not in the lowest possible range for the function selected) and downrange is true (readout is less than 10% of full-scale).

4.26 In addition to the normal autorange functions, the same basic circuits take the instrument out of forbidden ranges that may develop when a function is changed and the instrument is in PGM-0.

4.27 In program step 0, the one bit that is normally added to the value of the up/down counter through the carry in of the MAX LIMIT full adder is removed, effectively subtracting one. Also, a one bit is added to the MIN LIMIT full adder. This action effectively expands the minimum and maximum limits by one digit in each direction; it permits the instrument range to be at the minimum or maximum setting for a given function without producing a limit signal ($\overline{\text{CARRY OUT}}$ for max, CARRY OUT for min) for either full adder. If the instrument is in autorange and the range position is beyond the range limits for the selected function, a limit signal is generated during program step 0, allowing an $\overline{X}$ pulse to generate a load command to the up/down counter. When in autorange, the range lines are automatically set to the 1000 range, forcing the up/down counter to the 1000 range (this range is legal for any function selected).

4.28 Attenuator & Gain Networks (Schematic: figure 6.1).

4.29 The attenuator is a precision voltage divider used in d-c voltage measurement. The attenuator basically consists of a double-pole, double-throw relay and three precision resistors. There are two states available: X1, in which no attenuation occurs and the dc volts input from the switching card is applied through a 100 Kohm resistor to the isolator positive input; and X.01, in which the dc volts input is applied through a 100 to 1 divider having an input resistance of 10 megohms and an output resistance of 100 kohms. The output of the divider is applied to the isolator positive input. The isolator gain network permits the isolator to operate at gain levels of X1, X10, and X100. This divider consists of two voltage tap positions on a single voltage divider string and two relays. Relay settings determine the fraction of the isolator output applied to the isolator input, thereby setting the gain.

4.30 Display Board (Schematic: figure 6.21).

4.31 On this board are mounted: the annunciators and drivers for the functions, ratio, plus and minus polarity and NO; decimal point drive, the isolator gain relay decode and drive, ratio relay drive, filter relay drive, overflow (counter, storage, and drive) range switch, function switch, and counter reset logic. The decimal point drive circuit and the isolator gain relay decoding circuit each consist of a BCD to 10 line decoder. Ratio and filter drive circuits are initiated from front panel switches. The overflow counter consist of two JK flip-flops preset to 0-0. The flip-flops are advanced during a measurement cycle by the overflow of the decade counters. The output of the f/f's steer two D type f/f's (storage) and a one-shot generator (counter reset). On the first counter overflow, the counters advance to 1-1, and the counter reset is energized. If a strobe is generated, the storage is commanded to transfer and the 0 of the overflow display tube is energized. If one more overflow is generated prior to the strobe, the counter advances to 0-1 and the 1 of the overflow display tube is energized. If two overflows are generated prior to the strobe, the counter advances to 1-0 and the overflow display tube indicates 2. The range selector provides nine range positions and auto. These positions are encoded into a standard 1, 2, 4, 8 BCD code by a diode matrix. The function switch has four positions used directly as negative true logic inputs.

4.32 Switching Bypass Card.

4.33 This board is used in basic instruments only (AC, Millivolts or Ohms/Millivolts options not included). The PC board has two interconnecting printed circuit straps that tie pin E to pin L and pin P to pin 15 of connector J6.

4.34 Switching Card (Schematic: figure 6.5).

4.35 This board is used whenever the AC, Millivolt or Ohms/Millivolt options are included in the DVM. The board consists of three relays, their drivers, and an accessory range matrix. As shown in figure 4.3, relay K2 is energized when the AC function is selected, K3 is energized when the ohms function is selected and K1 is energized as indicated by the Boolean equations given. The seven range lines that comprise the output of the accessory range matrix are negative true (minus 31-volts true and zero volts false). The logic for each of the accessory range lines is given in the figure. The purpose of the relays is to route the input

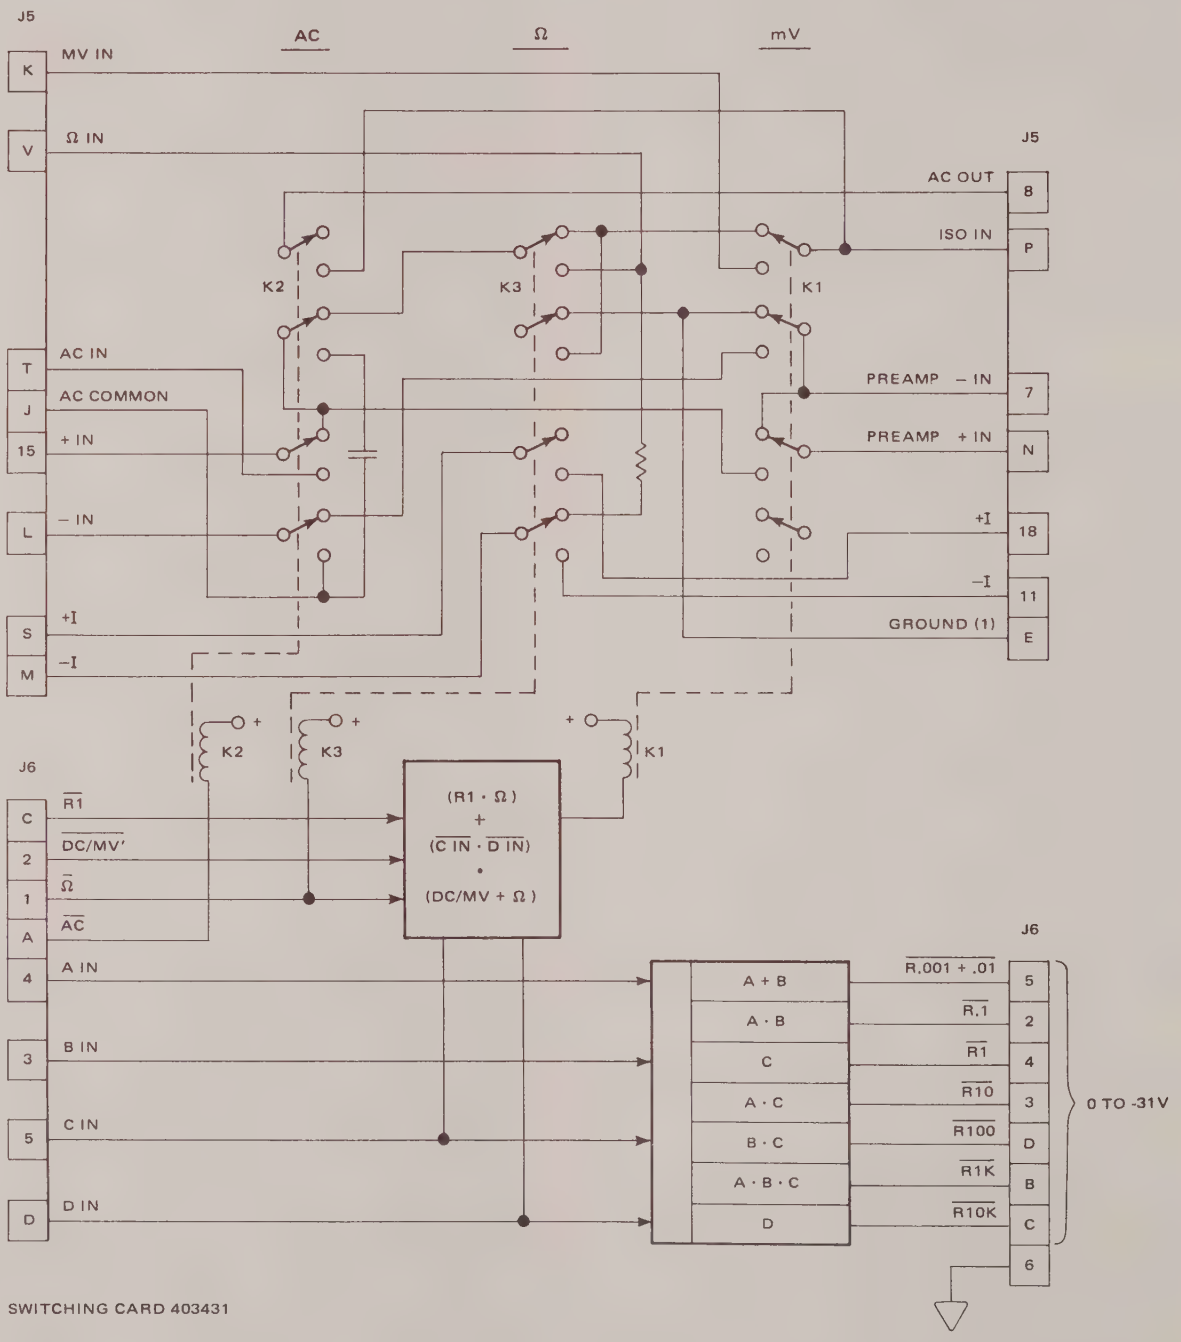

Figure 4.3 - Simplified Schematic – Switching Card

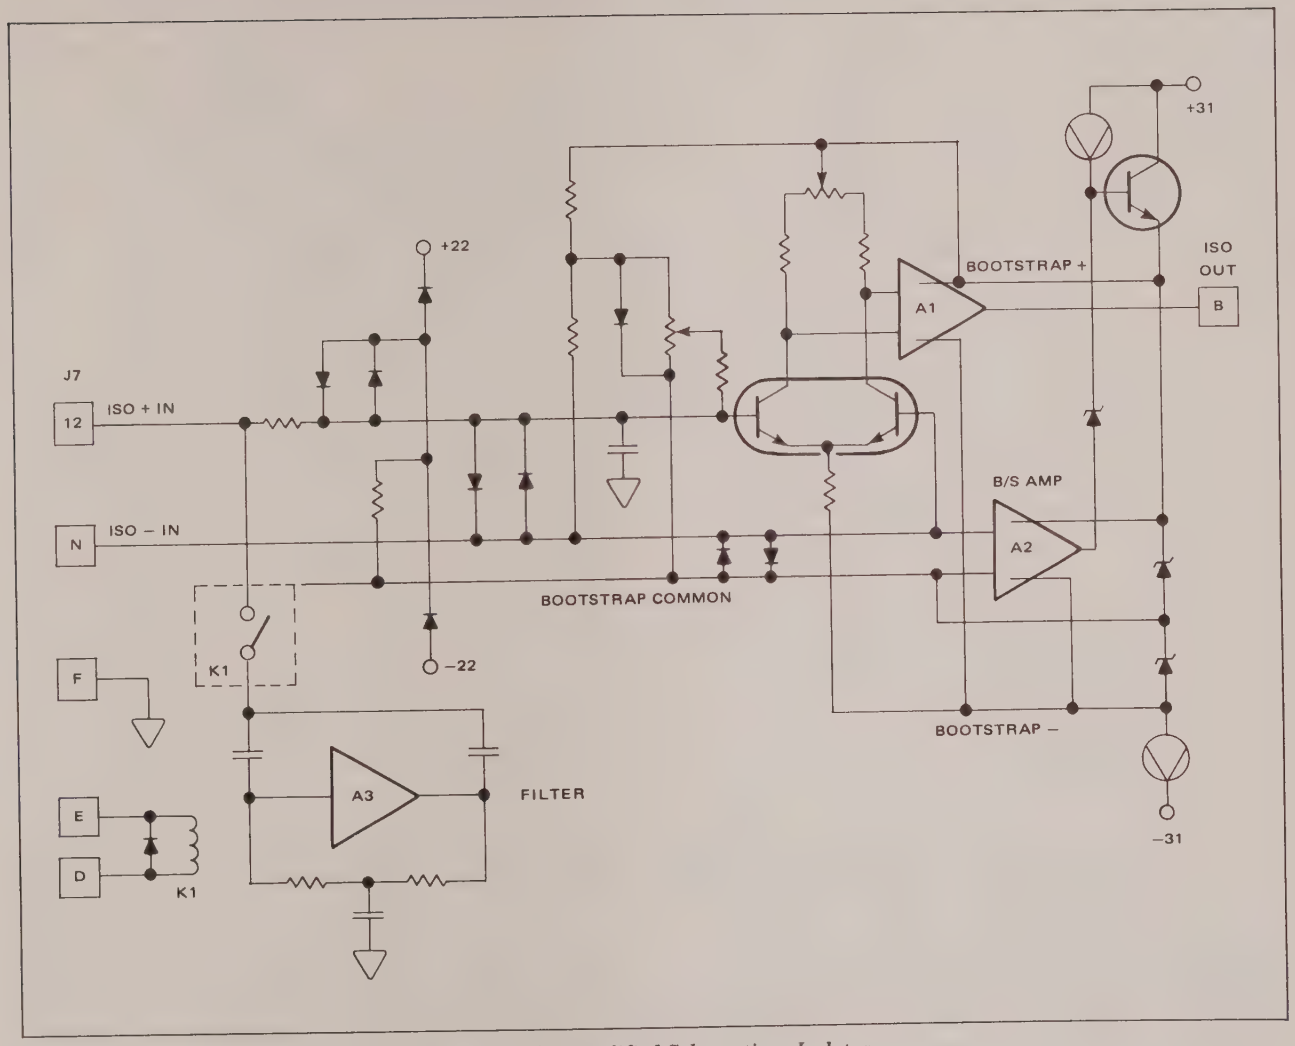

Figure 4.4 - Simplified Schematic – Isolator

signal to the attenuator when the DC function is selected or the appropriate accessory module when AC, Ohms or Millivolts is selected.

4.36 Isolator Assembly (Schematic: figure 6.17).

4.37 The isolator receives the conditioned input signal from the attenuator on the mother board. With filter selected or when the AC function is selected (in which case filter is automatically selected) normal mode noise on the input signal is attenuated. Filtering is achieved by an active 3-pole filter operating in conjunction with the 100 Kohm impedance of the attenuator. The input signal is then buffered and, if required, amplified by the isolator. The isolator (shown simplified in figure 4.4) consists of an input-current-compensated differential stage (with emitter follower omitted for simplicity) driving a 748 operational amplifier. These stages receive positive and negative supply voltages from a bootstrap supply. The bootstrap arrangement allows the isolator stages to follow the input signal, thereby greatly enhancing the effective input impedance. The output of the amplifier drives a discrete output stage powered by the ± 31-volt supplies and permitting an output swing of greater than ± 20 volts.

4.38 Digitizer Assembly (Schematic: figure 6.19).

4.39 The digitizer accepts the conditioned input signal from the isolator and converts it to a set of timing signals for transmission to the logic circuitry. The digitizer, shown

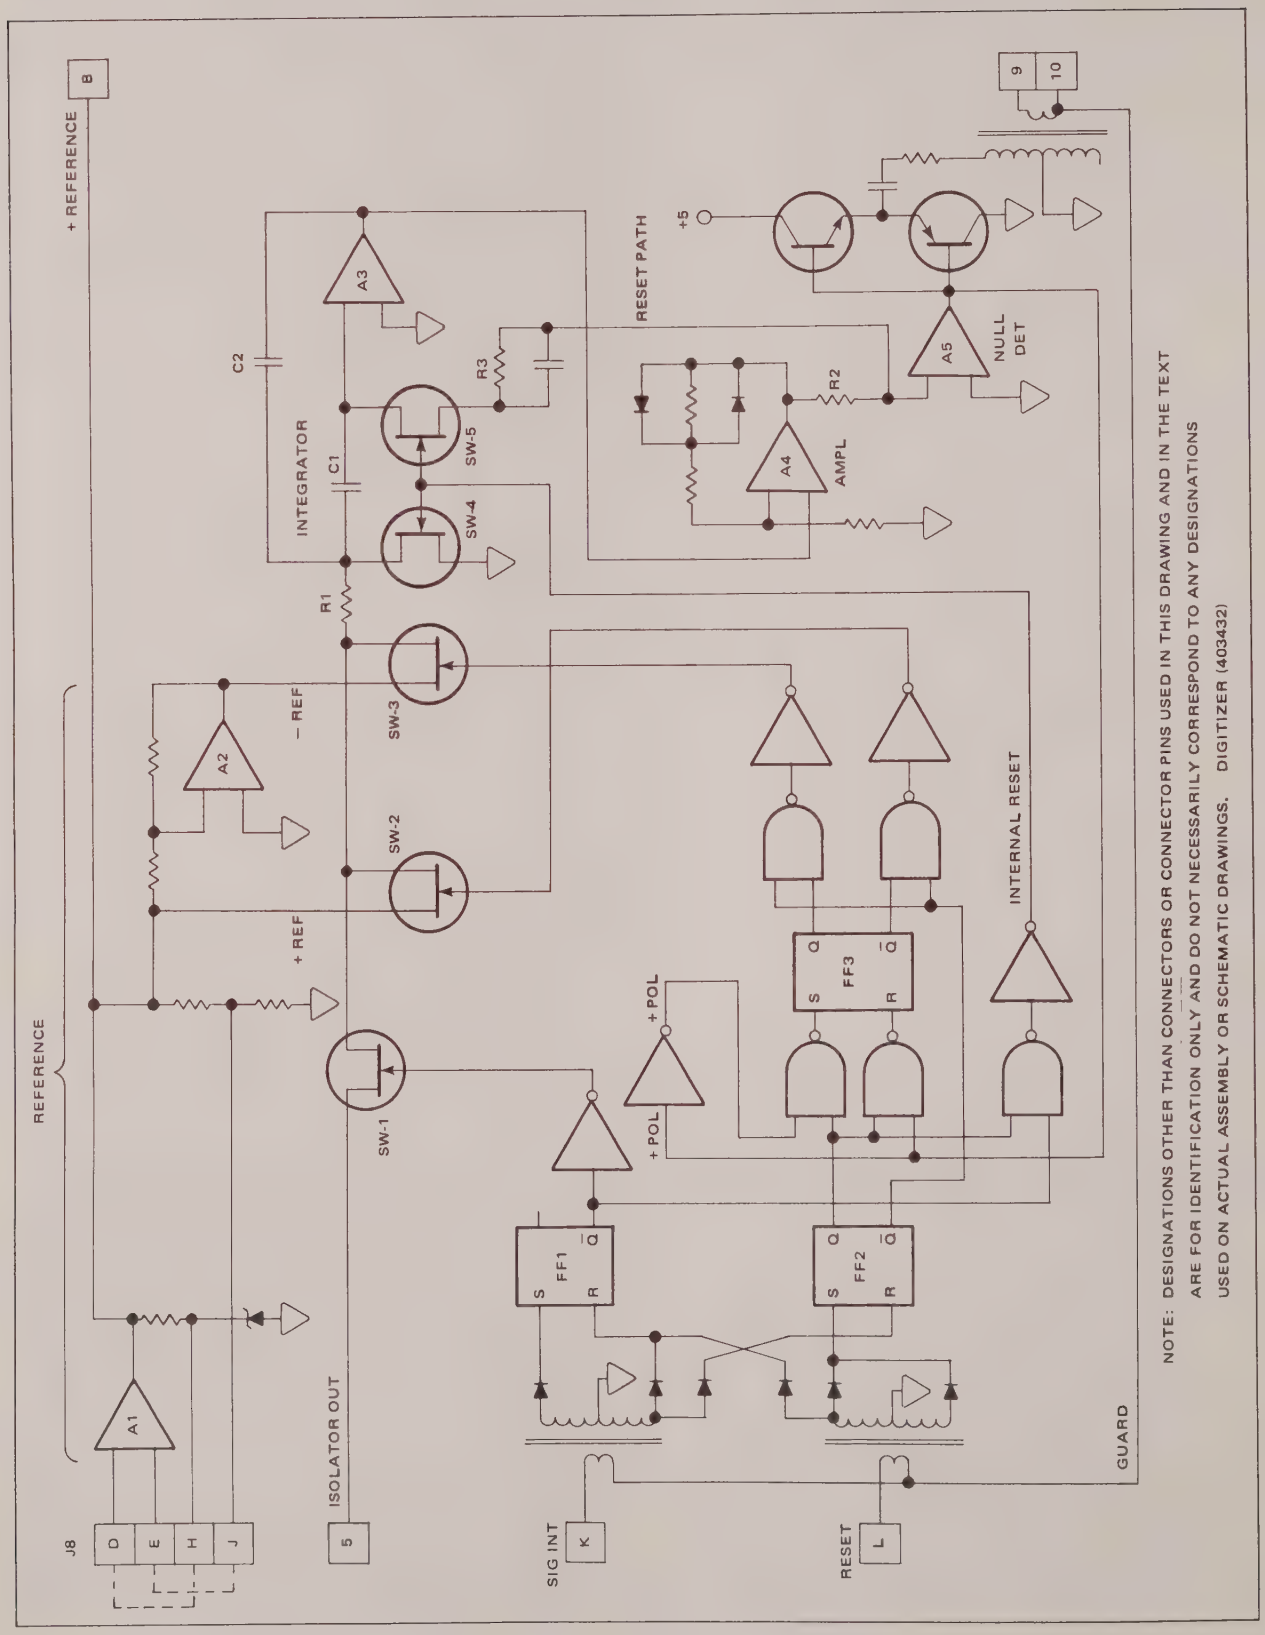

NOTE: DESIGNATIONS OTHER THAN CONNECTORS OR CONNECTOR PINS USED IN THIS DRAWING AND IN THE TEXT ARE FOR IDENTIFICATION ONLY AND DO NOT NECESSARILY CORRESPOND TO ANY DESIGNATIONS USED ON ACTUAL ASSEMBLY OR SCHEMATIC DRAWINGS. DIGITIZER (403432)

Figure 4.5 - Simplified Schematic – Digitizer

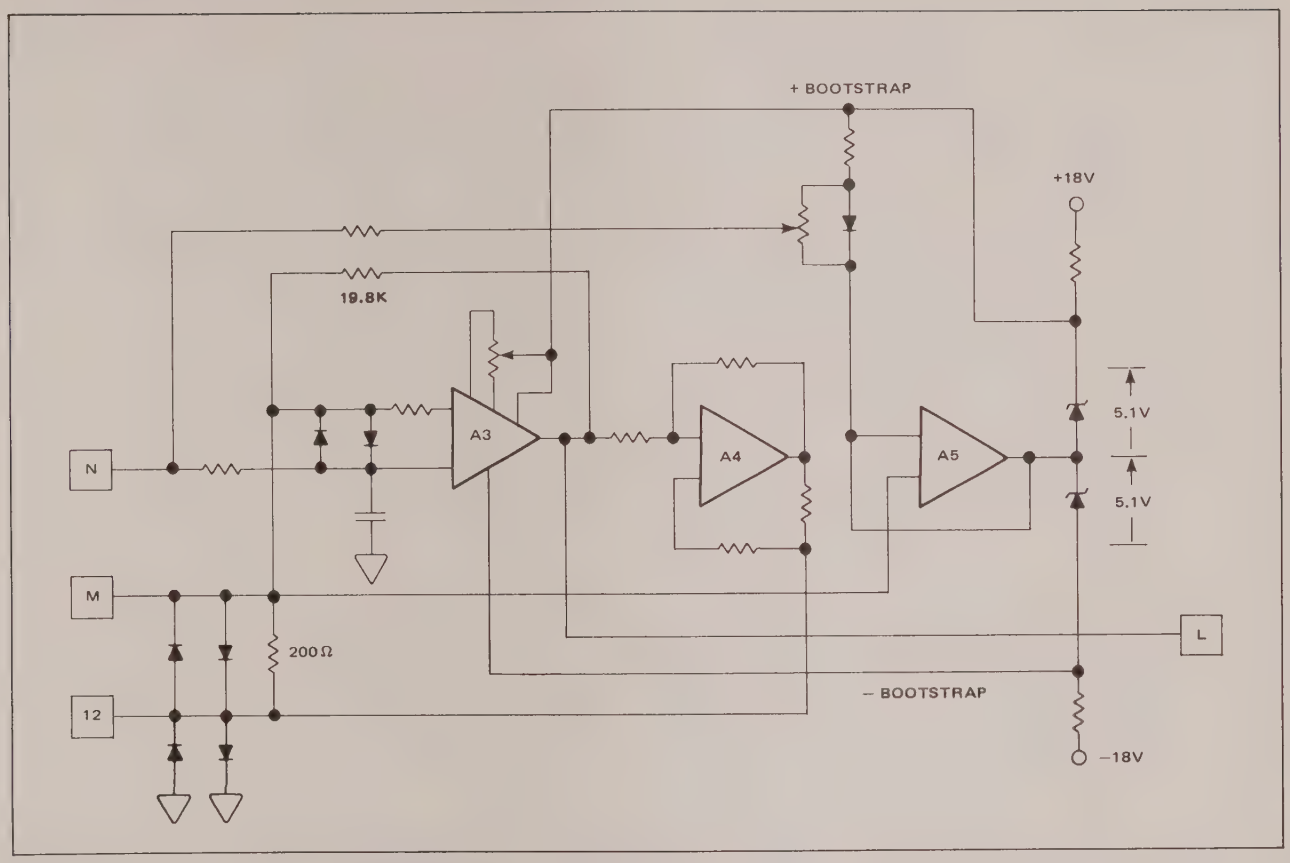

Figure 4.6 - Simplified Schematic – Millivolts Preamp of Millivolts/Ohms Converter Board

simplified in figure 4.5, consists of three switches, integrator, amplifier, null detector, output transformer, two demodulators, and decode logic. The operating sequence is determined by the program logic (see figure 4.2). The output of the isolator is applied to a FET (switch 1) connected to the input of the integrator. Two other FET switches (2 and 3) tie the integrator input to either the positive or negative reference supplies. All switches are off during the PGM-0 program step. The voltage level of the positive and negative reference supplies, (P1, P2) is 10 volts when ratio is not selected (internal reference). With ratio selected the reference supplies are equal to the value of the external reference input. Switching between ratio and internal reference takes place on the interconnection and logic board. The reference element and feedback resistors for the internal reference are located on the digitizer board.

4.40 When program step PGM-0 is initiated, a positive pulse appears on the signal integrate line causing f/f 1 $\overline{Q}$ to go false, turning on switch 1 and turning off the integrator reset switches (described later). From the previous reading, a negative pulse on the reset line causes f/f 2 Q to go true causing f/f 3 Q to follow the polarity of the integrator. With switch 1 closed, the isolator output voltage (+10V in this discussion) is sensed through R1-C1 by the input of the integrator amplifier A3, causing the output of the amplifier to go negative. The output draws current through C2 pulling the R1-C1 junction back towards zero. Equilibrium is reached when the current through R1 equals the current through C2 causing the junction of R1, C1, C2 to be at approximately zero volts and the output of the amplifier (voltage across C2) increasing linearly in the negative direction. The integrator charges for 16-2/3 milliseconds (counter overflow). The charge across the integrator is now –5 volts (with +10 volts in). When the counter overflows (program step PGM-2), a negative pulse appears across the signal integrate transformer causing both f/f's 1 and 2 to reset. This turns switch 1 off and turns switches 2 or 3 on depending on the position of f/f 3 (polarity of the integrator output. With +10 volts in, switch 3 is selected and applies –10 volts to the integrator input. Because, in this example, the input is equal but opposite, the time required to discharge the integrator is equal to the time required to charge the integrator or 16-2/3 milliseconds. The output of the integrator is amplified by a gain of approximately 100 and applied to the input of the null detector through resistor

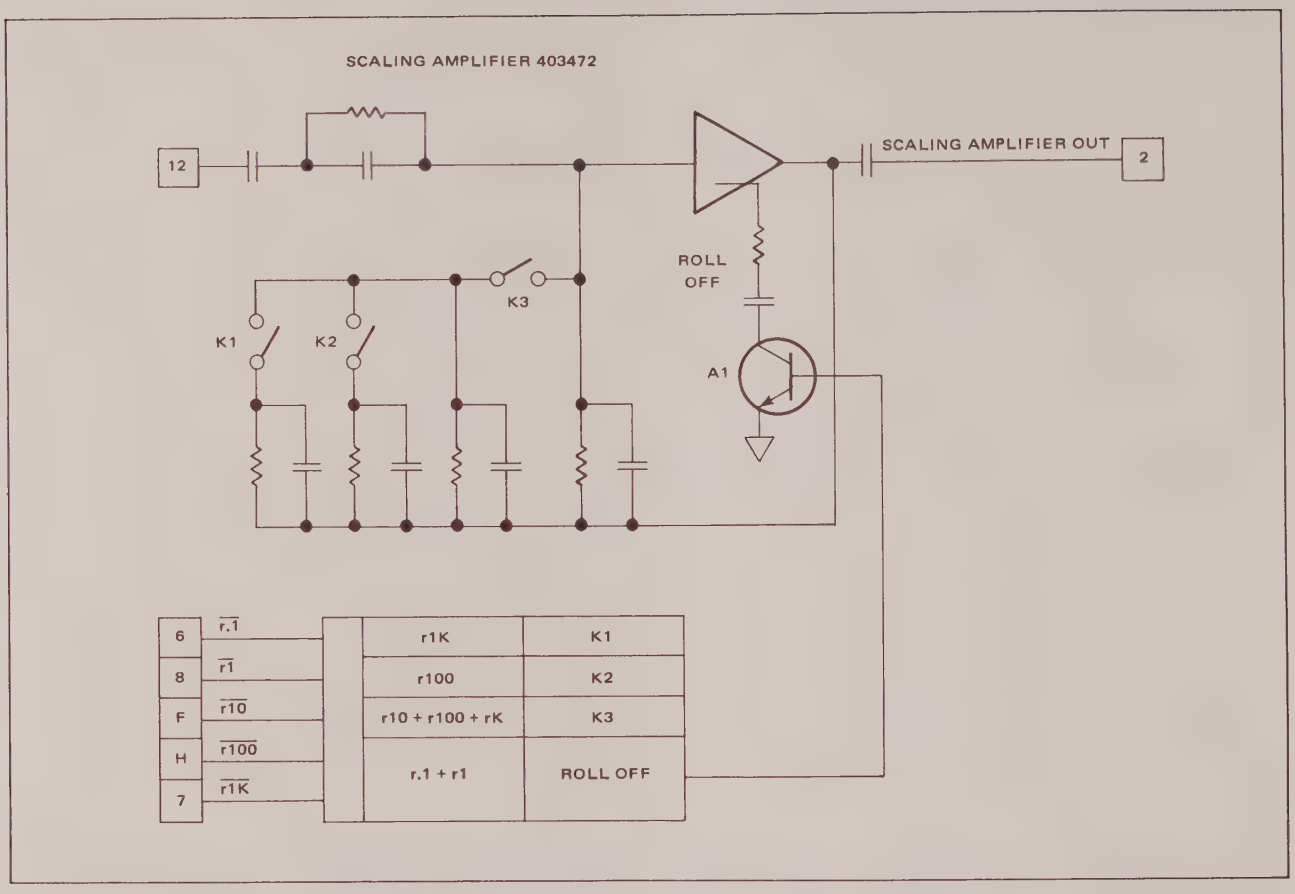

Figure 4.7 - Simplified Schematic – DIAC Scaling Amplifier

R2. The null detector inverts the integrator causing the transformer driver to set at +5 volts during the entire integrate period. When the charge across the integrator reaches zero, the transformer driver goes to zero causing the program logic to advance to program step PGM-3. At this time, a negative pulse on the reset line resets f/f 2 opening the reference switch and energizing the internal reset line. This line shorts the junction of R1, C1, and C2 to ground and connects the junction of C1 and input A3 to the junction of R2 and input A5. This allows input voltage errors of A3 and A4 and any input current error of A5 to be lumped together and reduced by a factor equal to the product of both amplifiers A3 and A4 (C1 charges to required offset during reset, effectively eliminating all zero shifts in the digitizer).

4.41 Millivolt Preamplifier (Schematic: figure 6.7).

4.42 This option is available as a separate option (403464) or combined with the Ohms converter (403435) and consists of a precision, fixed gain amplifier. As shown in figure 4.6, the millivolt amplifier consists of three parts: a potentiometric amplifier (A3) set at a fixed gain of 100, a "current sink" amplifier (A4), and a bootstrap amplifier (A5). The potentiometric amplifier is a stable low-drift operational amplifier (op amp) with voltage and current offset compensation. The power to the potentiometric op amp is supplied by the bootstrap supply, providing extremely high input impedance. The op amp output drives a discrete component amplifier for greater voltage swing. The bootstrap amplifier is non-inverting with a voltage gain of one. The input of the bootstrap is tied to the reference input of the potentiometric amplifier allowing the bootstrap supplies to follow the input voltage.

4.43 The current sink eliminates measurement errors due to I-R drops developed in the common line by the feedback resistance of the potentiometric amplifier. The amplifier A4 monitors and inverts the output of the potentiometric amplifier to provide, at the junction of the feedback path and the ground strap, a current that is equal to but subtracting from the current supplied by the feedback path.

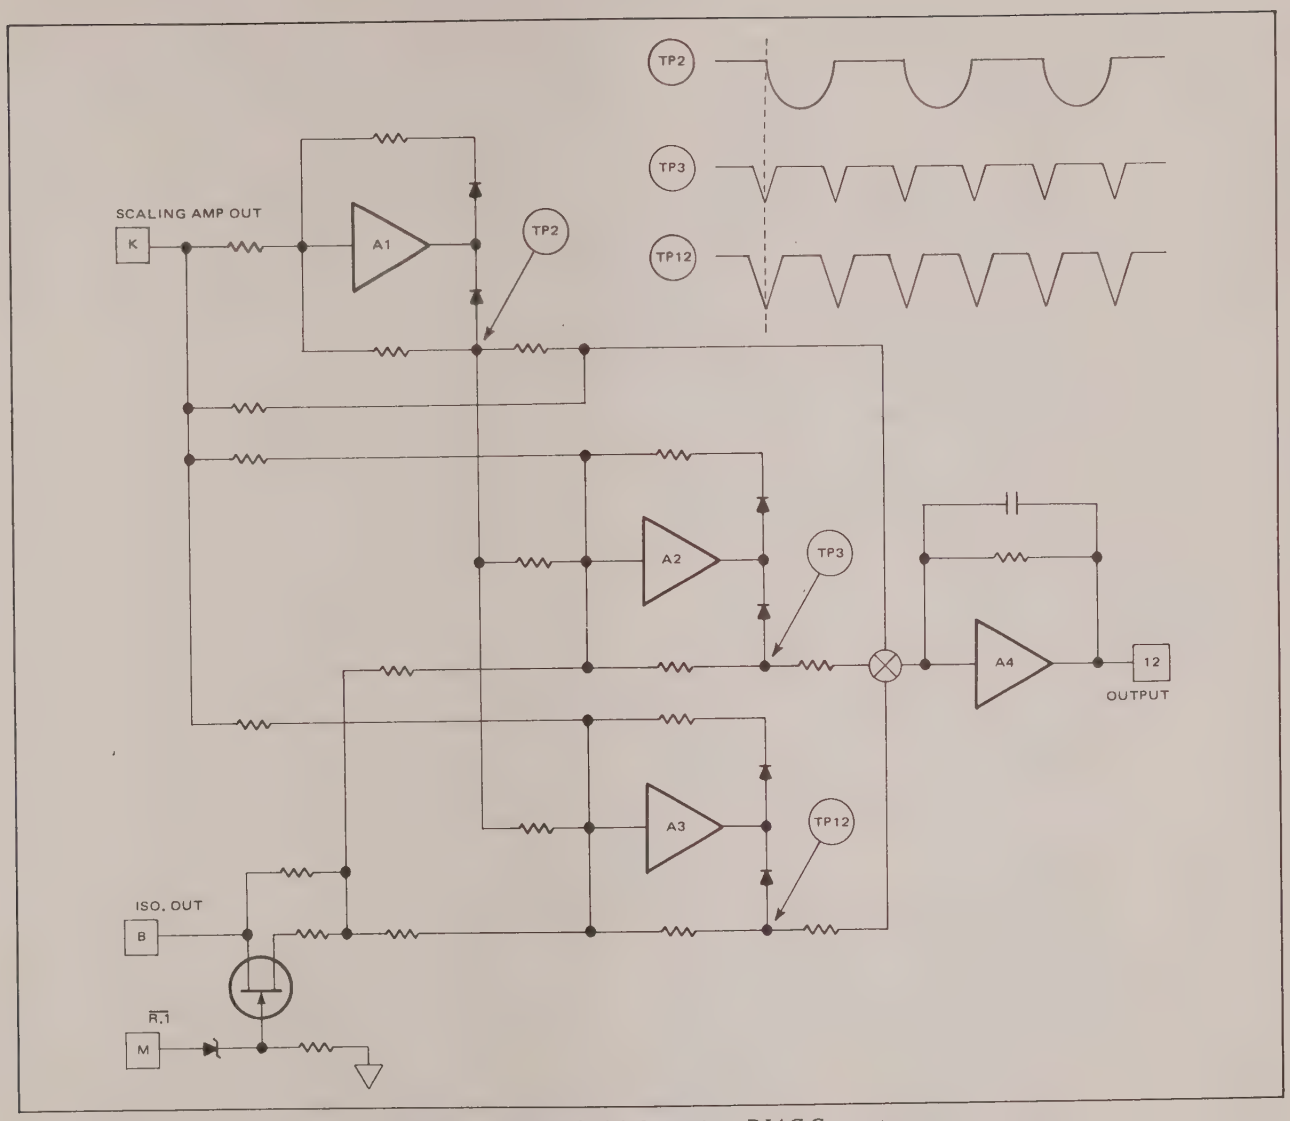

Figure 4.8 - Simplified Schematic – DIAC Converter

4.44 AC CONVERTERS.

4.45 Two AC converter options are available for use in the Model 4800, the Option 21 Distortion Insensitive AC Converter and the Option 31 True RMS AC Converter. The DIAC generates a three-segment straight-line approximation of a square law curve by which the input signal is squared, the squared result is then averaged and the root is derived by means of feedback through the system. The RMS converter takes the log of the input signal, averages it and derives the antilog of the signal to determine the RMS value. Circuit descriptions are provided in the following paragraphs.

4.46 DIAC Scaling Amplifier (Schematic: figure 6.11).

4.47 The scaling amplifier (shown simplified in figure 4.7) is one of the two DIAC converter boards used in the instrument. The scaling amplifier occupies connector J12 and consists of an ac compensated operational amplifier with four possible gain settings (X1, X.1, X.01, and X.001). The range lines are driven by decoded data from the accessory range lines. On the R.1 and R1 ranges, increased bandwidth is provided the scaling amplifier by transistor Q1 for the X1 amplifier setting.

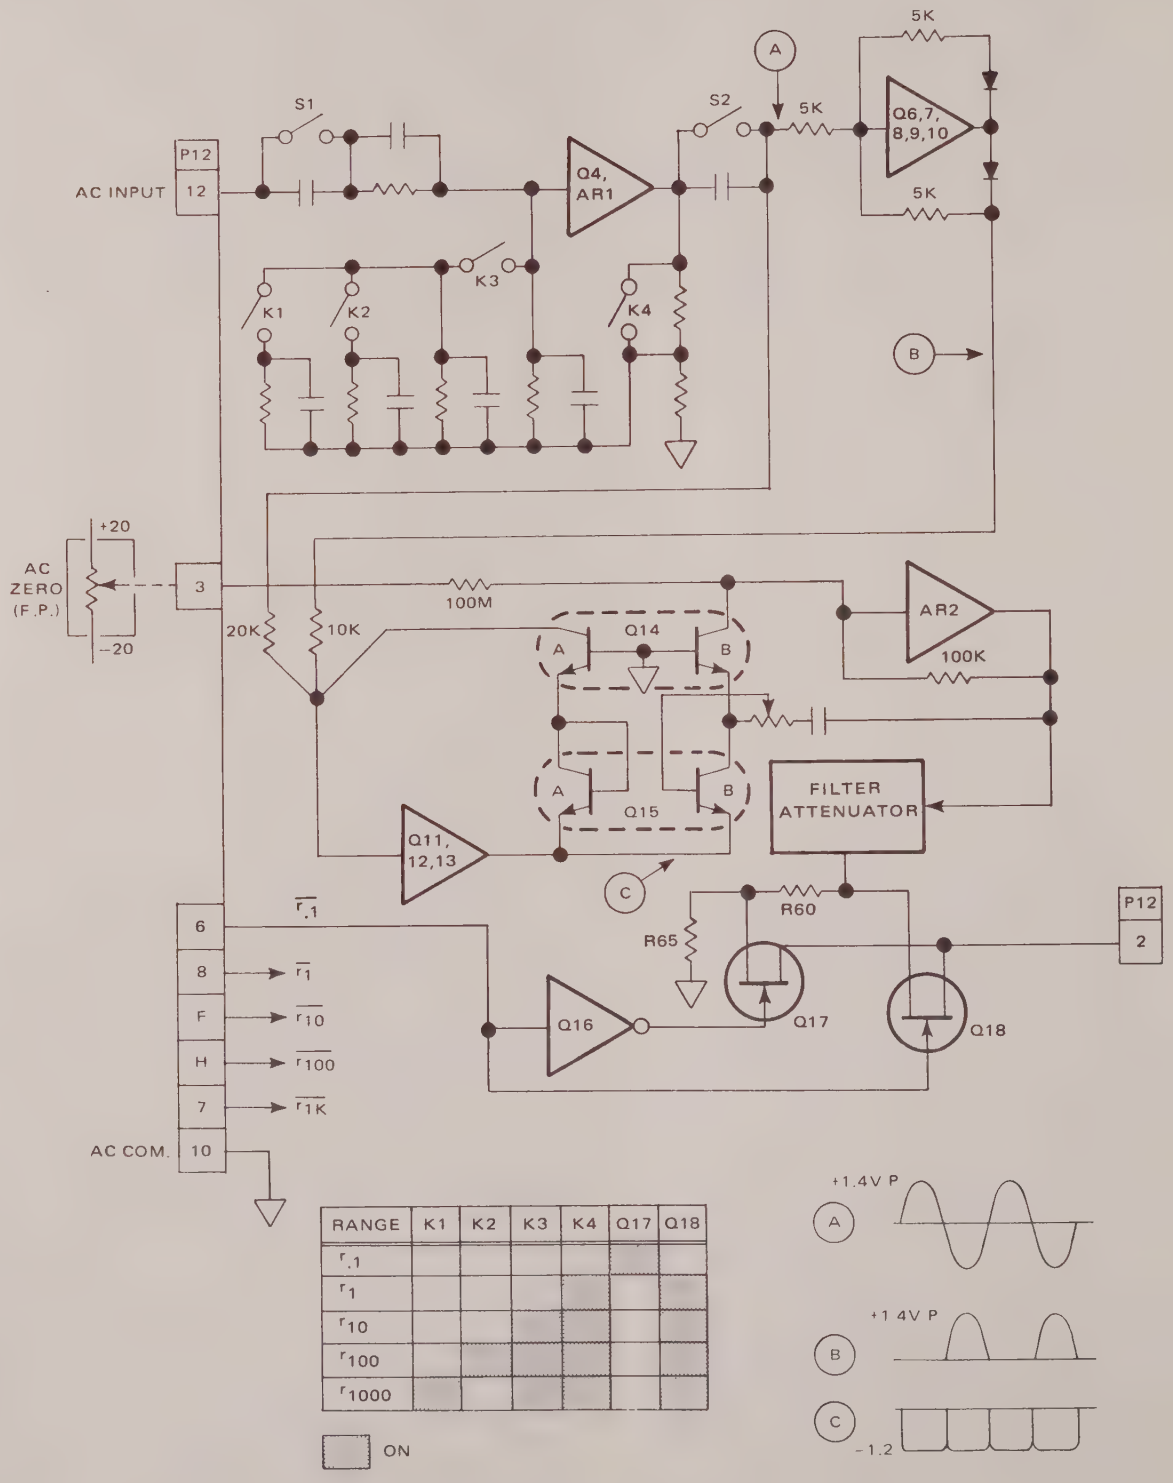

RANGE	K1	K2	K3	K4	Q17	Q18
$r_{.1}$						
r_1						
r_{10}						
r_{100}						
r_{1000}						

ON

Figure 4.9 - Simplified Schematic – RMS AC Converter

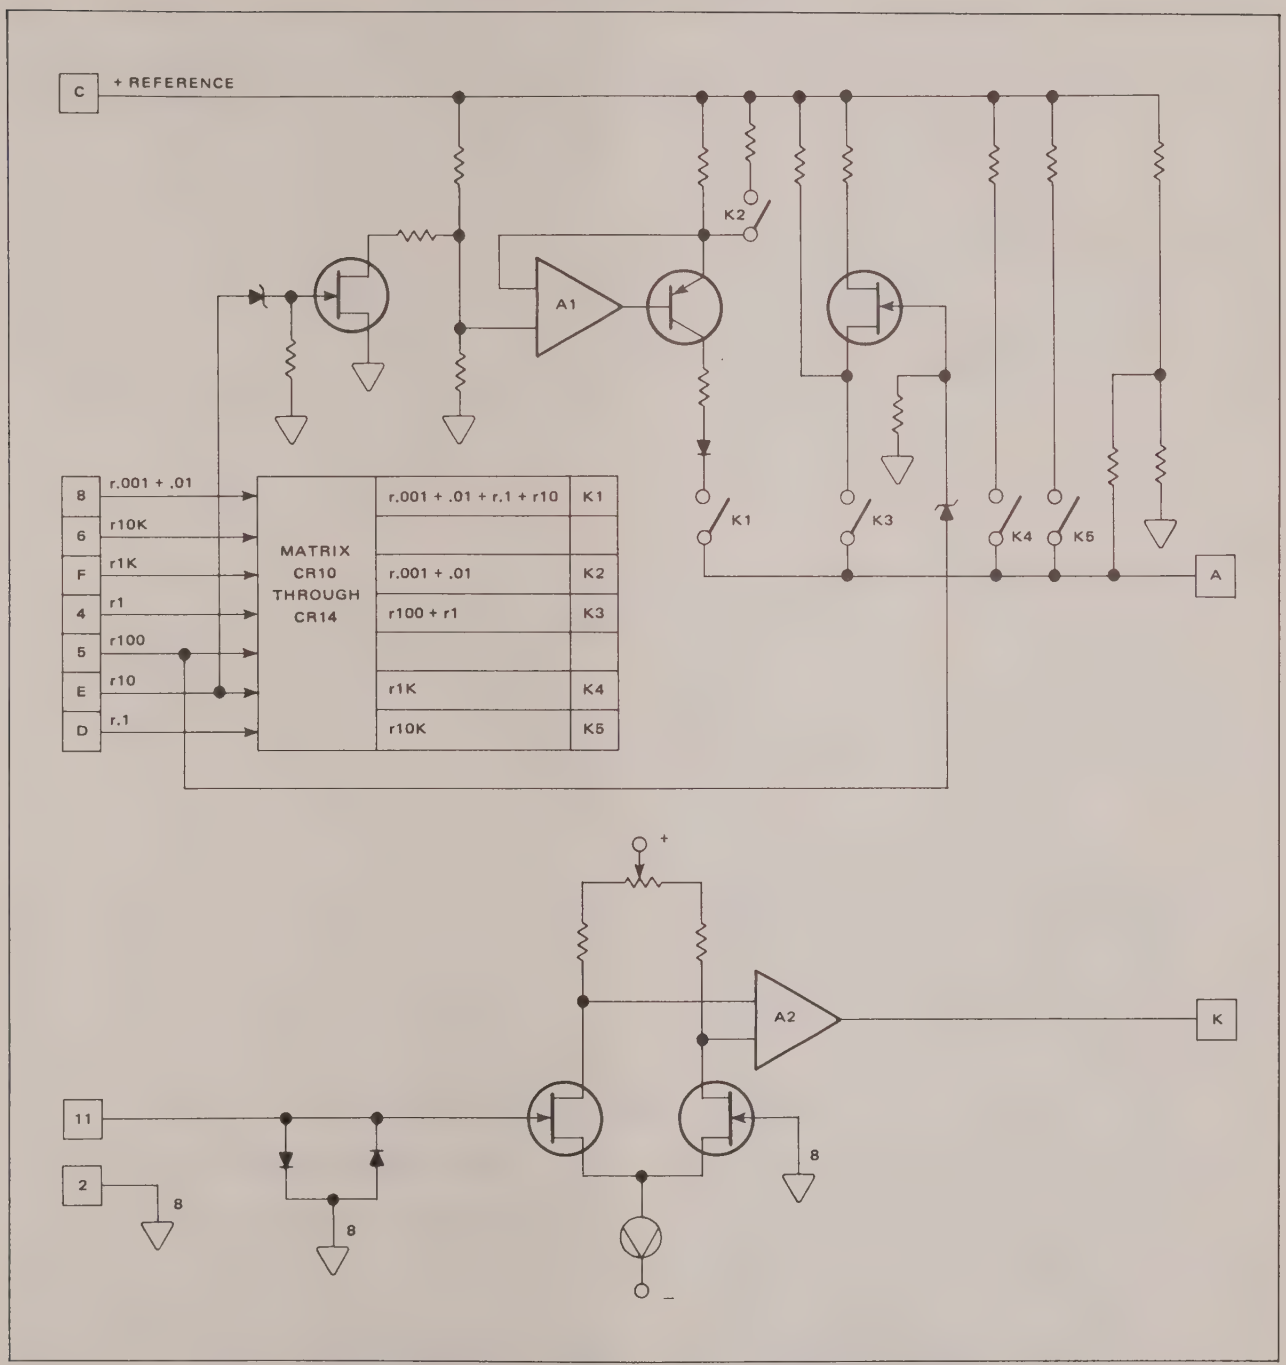

Figure 4.10 - Simplified Schematic – Ohms Converter of Millivolts/Ohms Converter Board

4.48 DIAC Converter (Schematic: figure 6.13).

4.49 The DIAC converter (figure 4.8) uses the scaled output of the scaling amplifier along with the DVM isolator output (whose value is a function of the ac input) to produce a distortion insensitive dc equivalent of the ac input. The converter, located at connector J11, consists of three active rectifiers and one summing amplifier. Active rectifier A1 inverts and rectifies the scaled input. The output of A1 is taken from the negative-going feedback diode producing a negative half-wave signal. Active rectifier A2 sees inputs from the scaling amplifier, the output of A1 and the isolator

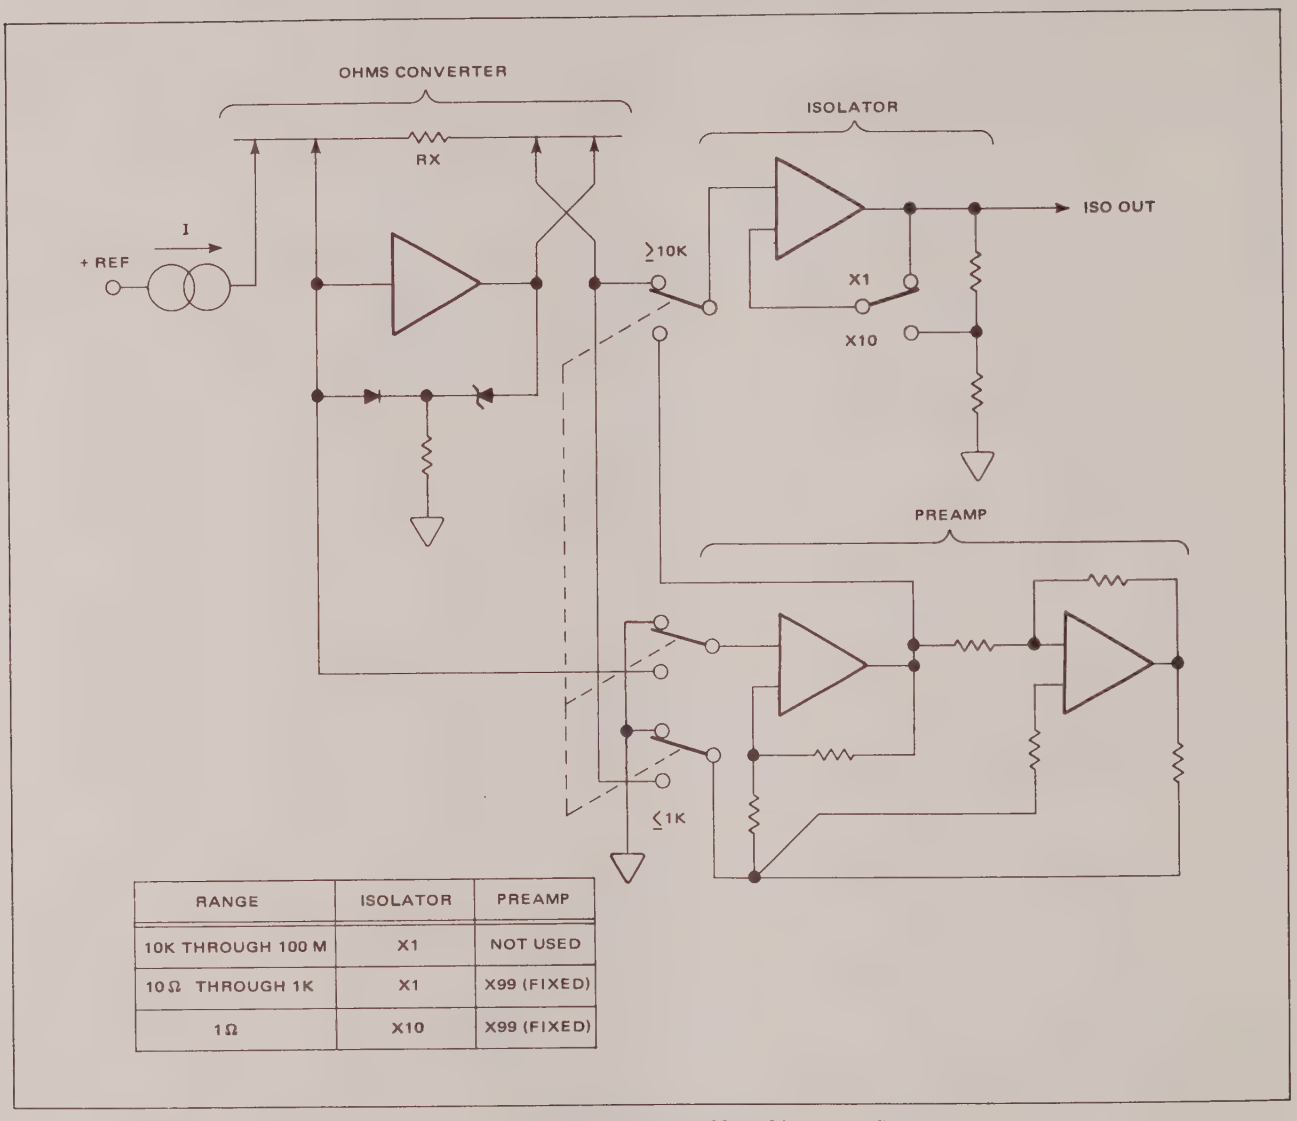

RANGE	ISOLATOR	PREAMP
10K THROUGH 100 M	X1	NOT USED
10Ω THROUGH 1K	X1	X99 (FIXED)
1Ω	X10	X99 (FIXED)

Figure 4.11 - Functional Diagram, Ohms Measuring System

output. The AC signal from the scaling amplifier combines with the A1 output signal to produce a full-wave rectified negative current to the input of A2 where it is inverted and rectified. The A2 output is taken from the negative-going feedback diode. The isolator output biases A2 such that only a certain portion of the signal is allowed to appear at A2 output. Active rectifier A3 operates in precisely the same manner as A2 but with a different amount of bias from the isolator. The summing amplifier sums and filters the outputs of the scaling amplifier and the three active rectifiers to produce the dc equivalent voltage. Full-scale output for the summing amplifier is +1 volt (.1 volt on the .1 volt range). The output is fed through the switching card to the isolator where, on the AC 1, 10, 100, and 1000 volt ranges the isolator gain is at X10 and on the AC .1 volt range, the gain is X100.

4.50 RMS AC Converter (Schematic: figure 6.15).

4.51 The scaling amplifier and converter of the RMS AC Converter is mounted on a single printed circuit board that is located at connector J12. A bypass board (410686-A) occupies connector J11 and routes the output of the converter to the isolator input by way of the switching board. The converter circuitry is shown in simplified form in figure 4.9.

4.52 The Scaling Amplifier consists of an operational amplifier capable of providing five gains (X10, X1, X.1, X.01, and X.001) selectable by data from the accessory range lines. On the .1 volt range the signal is amplified by a gain of 10 to provide adequate signal strength for the converter portion of the circuitry. The signal is subsequently

Table 4.2 - Ohm Converter Current Generator

Range	Accessory Range Line	Converter Output Voltage, Full Scale	Current through Unknown	Current Generated By:	
100M	r100K	10V	.1 μA	Non-switched .1 μA (added to all other ranges)	
10M	r10K	10V	1 μA	+	K5 (.9 μA)
1M	r1K	10V	10 μA	+	K4 (9.9 μA)
100K	r100	10V	.1 mA	+	K3 (99.9 μA)
10K	r10	10V	1 mA	+	K1 (999.9 μA)
1K	r1	100 mV/.99	.10101 mA	+	K1 (1 mA) + FET2 (X1.0101)
100Ω	r.1	100 mV/.99	1.0101 mA	+	K3 (99.9 μA + FET1 (1.01 μA)
10Ω	r.01	100 mV/.99	10.101 mA	+	K1 (1 mA) + K2 (9 mA) + FET2 (X1.0101)
1Ω	r.001	10 mV/.99			

reduced by a factor of 10 prior to leaving the circuit board. In each case, the scaling amplifier supplies a full scale 1 volt output. The scaling amplifier can be operated in either the dc or ac operating mode. The dc mode permits measuring the combined RMS value of an ac signal riding on a dc level; the ac mode permits measurement of the ac portion of a signal only. Both switches must be moved to the desired operating mode to operate. Switch position is indicated in the Calibration section.

4.53 The active rectifier is an operational amplifier with two polarity selective feedback paths (one conducting only with a positive amplifier output and the other conducting only with a negative amplifier output). The voltage developed across the positive conducting leg is applied through a 10K resistor to the summing node of the log amplifier along with the full wave signal through a 20K resistor from the output of the scaling amplifier. These two inputs are combined and, due to the non-linear feedback loop of the log amplifier (consisting of Q14A and Q15A) produce the log of the combined signal at (c) . This signal is fed through an identical path (consisting of transistors Q15B and Q14B) to the input of the summing amplifier.

4.54 The summing amplifier converts the signal to a dc level. The ripple content of the dc level is attenuated and the output reduced to provide a dc equivalent of the RMS value of the ac input signal. The dc output is 1 volt full scale on the 1, 10, 100, and 1000 volt ranges and 0.1 volt full scale on the .1 volt range. The isolator amplifies the output by a factor of 100 on the .1 volt range and by a factor of 10 on all other ac ranges.

4.55 Ohms/Millivolt Converter Preamp (Schematic: figure 6.9).

4.56 The ohms converter permits DVM ohms measurement on nine ranges with full-scale readings from one ohm to 100 megohms. On each range, a precise reference current is supplied to the resistance under test. The voltage developed across the resistance under test is amplified if required and measured by the DVM.

4.57 Referring to figure 4.10, the converter consists of a current generator driving the summing node of an operational amplifier. Considering the summing node as a virtual ground the current developed by the current generator is equal to the equivalent resistance of the generator divided into the reference voltage (+10 volts). The current developed by the generator for each range is given in table 4.2. As shown in figure 4.11, the converter output is routed either through the preamplifier, or directly to the isolator. For ranges 10K through 100 Megohms, the current supplied by the generator produces 10 volts across the resistor under test when the resistance is equal to the full-scale value of the range selected (i.e., 100 kilohms on the 100K range, 10 kilohms on the 10K range, etc.). The voltage developed for full-scale resistances under test on the 10 ohm through the 1K ohm ranges is approximately 100 millivolts and on the one ohm range approximately 10 millivolts. For these ranges, the + input of the preamp is connected to the summing node (effective ground) and the – input of the preamp is connected to the output of the op amp (through the – CURRENT lead). Connected in this configuration, the preamplifier operates as an operational

amplifier with the input impedance made effectively very high by the action of the current sink circuitry (see discussion of Preamplifier in paragraph 4.41). The gain of the preamp in this configuration is 99 (in contrast to the normal potentiometric gain of the preamp of 100). The current supplied by the current generator for the lower ranges are adjusted to compensate for the gain of the preamp not being a factor of ten. The values of the currents are given in table 4.2. On the one-ohm range, the voltage, available for measurement with the Preamplifier included, is only one volt with full-scale resistance being measured (one ohm). The isolator therefore is set to the X10 position for this ohms range only to provide 10 volts full-scale to the DVM measuring circuitry.

4.58 Program Board (Schematic: figure 6.23).

4.59 The program board is mounted on standoffs above the digital portion of the logic and interconnection board and electrically connected to it through two cables. An edge connector consisting of printed circuit contacts on the board extends through the back panel of the instrument to form the remote input connector J202.

4.60 The program board permits the operation of the instrument remotely through connector J202 by contact closure. With remote selected, either by the front panel REMOTE switch or through the remote input connector, control of the function and range is determined by the selection of the control lines as described in Section 2. The selection of remote enables the remote control lines and, by removing logic common from the wiper contact of the function and range switches, disables the front panel control of range and function. The function data from the remote input is parallel fed to the function switch lines and the range data is applied in parallel to the BCD coded output lines of the range diode matrix. Logic is also provided for timeout and external measurement command of the instrument. Two external commands are provided, direct (fast) command and timeout command. Both are used in conjunction with Hold, which prevents the instrument from taking periodic readings from the internal rate oscillator.

4.61 The direct command is applied directly to the program control logic circuitry. The timeout command generates a delay by initiating the timeout circuit (the period of the timeout is dependent on the function selected). During the timeout, the print command is inhibited. At the completion of the timeout, a new measurement cycle is initiated. When the measurement cycle is completed, the print command is generated as usual. The timeout circuit is also initiated when remote auto range is selected and ranging takes place.

SECTION 5 MAINTENANCE

5.1 GENERAL.

5.2 This section contains the calibration and troubleshooting procedures and instructions for disassembling the instrument.

5.3 CALIBRATION.

5.4 The calibration procedure is designed to keep the Model 4800 operating within its specifications for indefinite periods of time. Make any necessary instrument repairs as covered under the troubleshooting procedure prior to calibration. Allow 30 minutes warmup time for temperature stabilization.

5.5 Required Equipment.

5.6 The equipment necessary for calibration is listed in table 5.1.

5.7 Disassembly for Calibration.

> **WARNING**
> Removal of covers exposes potentially lethal voltages. Avoid contact with internal electrical connections while unit is connected to AC Power source.

5.8 Remove Power cable. Loosen the four captive screws at each corner of the top cover and remove the top cover. Remove the four countersunk Phillips head screws from the metal shield covering the analog and digitizer portion of the instrument.

Table 5.1 - Required Calibration Equipment

Name	Use	Recommended Type
precision DC voltage standard	DC, DC/mV Range calibration	FLUKE 332A (or equivalent)
microvoltmeter	isolator, preamplifier, ohms converter, & AC converter zero	FLUKE 845A (or equivalent)
AC laboratory power source	AC scaling amplifier	HP 745 & 746 (or equivalent)
standard resistors: 100 Megohms 19 Megohms 1.9 Megohms 190 Kilohms 19 Kilohms 1.9 Kilohms 190 Ohms 19 Ohms 1.9 Ohms	ohms converter	ESI Series SR1 (or equivalent)
insulated adjustment tool	All adjustments	JFD 5284
clipleads	approximately 12" long made with copper mini-gator clips & slip on insulators	
1 Megohm, 1/4 Watt, 5%, Carbon	isolator current zero	
100 Kilohm, 1/4 Watt, 5%, Carbon	preamp current zero	
10 Kilohm, 1/4 Watt, 5%, Carbon	AC converter bias current zero	

Table 5.2 - DC Gain

Signal Input	Ref. Input	Mode	Adjust:	For Display of:
–1.90000V	+1.00000V	DC/DC	(1V Ratio – Pol.) R55	–19.000V
+1.90000V	+1.00000V	DC/DC	(1V Ratio + Pol.) R68	+19.000V
–19.0000V	+10.0000V	DC/DC	Verify a readout of –19.000V ± 1 digit	
–19.0000V	———	DC*	Ref. – Pol., R43	–19.0000V ± 1 digit
+19.0000V	———	DC	Ref. + Pol., R59	+19.0000V ± 1 digit
*Set instrument out of Ratio mode.				

5.9 DC Calibration.

5.10 ISOLATOR VOLTAGE ZERO.

a. Select 0.1 Range, DC FUNCTION, and FILTER OUT.

b. Remove Shield. Referring to figure 5.1, connect a jumper from point ① (pin 4 of relay K1) to the *front panel* – input terminal. Connect one end of another jumper wire to point ② (bottom of resistor R35) and dress both wires towards the front of the instrument. Replace shield (do not replace screws) and allow five minutes for the circuitry to stabilize.

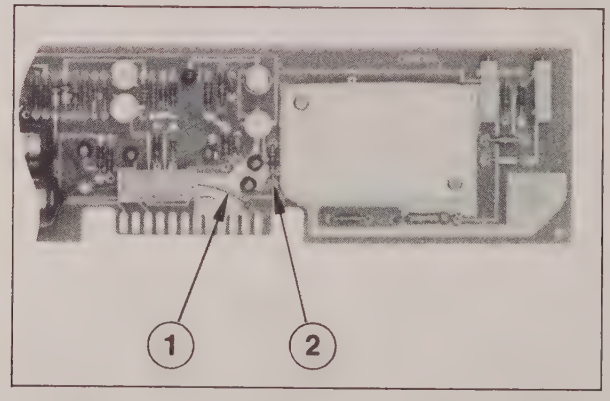

Figure 5.1 - Test Points – Isolator Voltage Zero

c. Connect the microvoltmeter High input lead to the jumper from R35 and the Low input lead – input terminal.

d. Adjust potentiometer R36 (DC ZERO, figure 5.2) for a microvoltmeter reading of less than ± 10 microvolts. Remove microvoltmeter leads.

e. Remove shield and remove jumpers from Isolator board. Replace shield and allow five minutes for instrument to temperature stabilize.

5.11 ISOLATOR CURRENT ZERO.

a. Short DVM input. Connect the high input lead of the microvoltmeter to ANALOG OUTPUT and the low input side to common on the instrument *rear panel.*

b. Adjust the *front panel* OFFSET DC potentiometer for a microvoltmeter reading of ± 100 microvolts.

c. Remove short and insert a 1 Megohm resistor across the + and – input terminals.

d. Adjust potentiometer R12 (input offset current) on isolator for a microvoltmeter reading of less than ± 1 millivolt. Remove 1 Megohm resistor and microvoltmeter leads.

5.12 DC VOLTAGE ZERO.

a. Select DC FUNCTION and 10 Range.

b. Apply +0.9 millivolts to DVM input.

c. Adjust R34 on Digitizer board for a DVM readout of zero with the last digit alternately reading zero and one.

5.13 DC GAIN ADJUSTMENT.

a. Select AUTO RANGE, DC FUNCTION and RATIO.

b. Apply inputs to DVM and make indicated adjustments as shown in table 5.2.

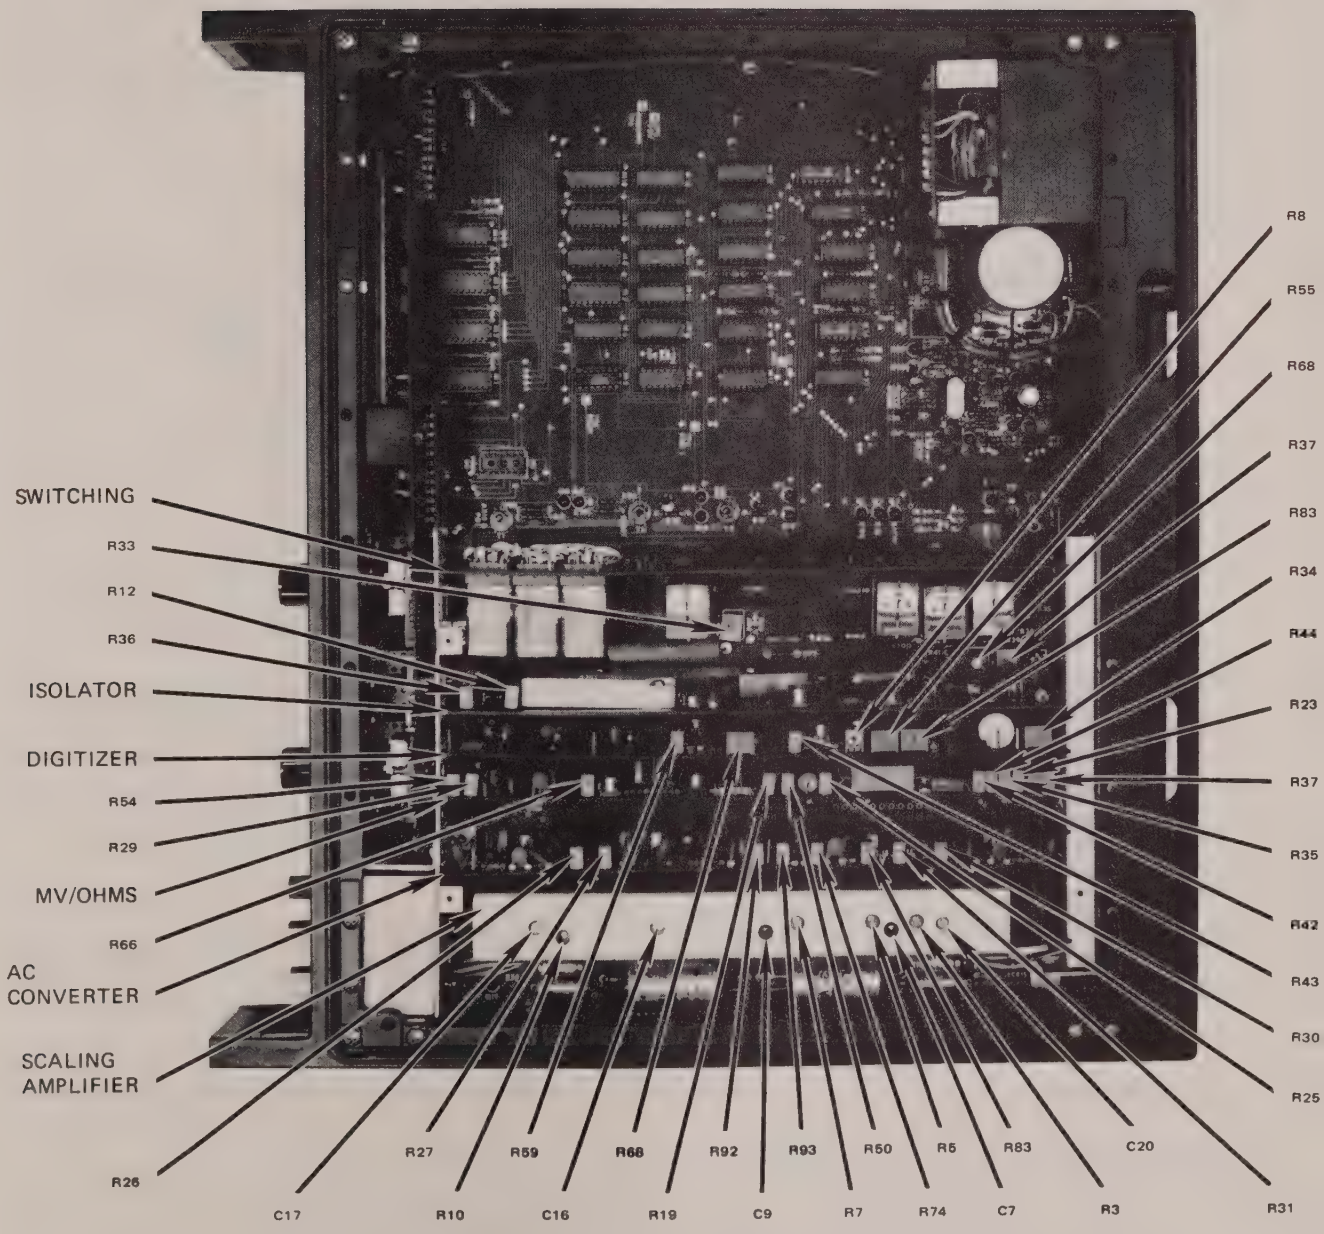

Figure 5.2 - Adjustment Locations

Table 5.3 - DC Range

Input	Adjust	For Readout of:
±.190005	.1V (R68)	±.19001V
±1.90005	1V (R37)	±1.9001V
±190.005	100/1000 (R33)	±190.01V
±1000.00	Verify Readout	±1000.0V ± .5 digit

5.14 DC RANGE ADJUSTMENT.

a. Select DC FUNCTION and AUTO RANGE.

b. Apply inputs to DVM and make the indicated adjustments as shown in table 5.3.

5.15 MV Accessory Calibration (403464).

5.16 VOLTAGE ZERO.

a. Connect a jumper across the + and – input terminals (use jumper with copper clipleads).

b. Select DC/mV FUNCTION, 10 MV RANGE, and FILTER IN.

c. Remove Shield. Connect high input of microvoltmeter to front end of resistor R46 on main interconnection PCB (point (1) in figure 5.3) and the low input to the – INPUT terminal on the instrument *front panel*. Adjust the MV OFFSET control on the *front panel* for a microvoltmeter reading of zero ± 50 mV. Remove microvoltmeter leads, replace shield and allow 5 minutes warmup time.

5.17 MV CURRENT ZERO.

a. With the input still shorted, adjust MV ZERO (R10) for a DVM display of 00000 ± 1 digit.

b. Remove short across input terminals and replace with a 100 kilohm resistor. Adjust MV OFFSET CURR (R20) for a DVM display of 00000 ± 2 digits. Remove 100 kilohm resistor.

5.18 MV GAIN ADJUSTMENT.

a. Select the .1 RANGE. Apply +190 mV across DVM input terminals and adjust MV GAIN (R13) for a DVM display of 190.00 ± 1 digit.

b. Reverse polarity of input to –190 mV. Verify a DVM readout of –190.00 ± 1 digit. Readjust R13 as necessary.

5.19 Ohms-mV Accessory Calibration (403435).

5.20 MV VOLTAGE ZERO.

Perform procedure provided in paragraph 5.16.

5.21 MV CURRENT ZERO.

a. With input still shorted, adjust MV ZERO (R66) for DVM display of 00000 ± 1 digit.

b. Replace short across input terminals with a 100 Kilohm resistor. Adjust MV OFFSET CURR (R54) for a DVM display of 00000 ± 2 digits. Remove 100 Kilohm resistor.

5.22 MV GAIN ADJUSTMENT.

a. Select the .1 RANGE. Apply +190 mV across DVM input terminals and adjust MV GAIN (R29) for a DVM display of 190.00 ± 1 digit.

b. Reverse polarity of input to –190 mV. Verify a DVM readout of –190.00 ± 1 digit. Readjust R29 as necessary.

5.23 OHMS CONVERTER ZERO.

a. Select the Ω-MΩ FUNCTION and 100 KΩ RANGE. Short the + INPUT, – INPUT, + OHMS CURRENT, and – OHMS CURRENT terminals together.

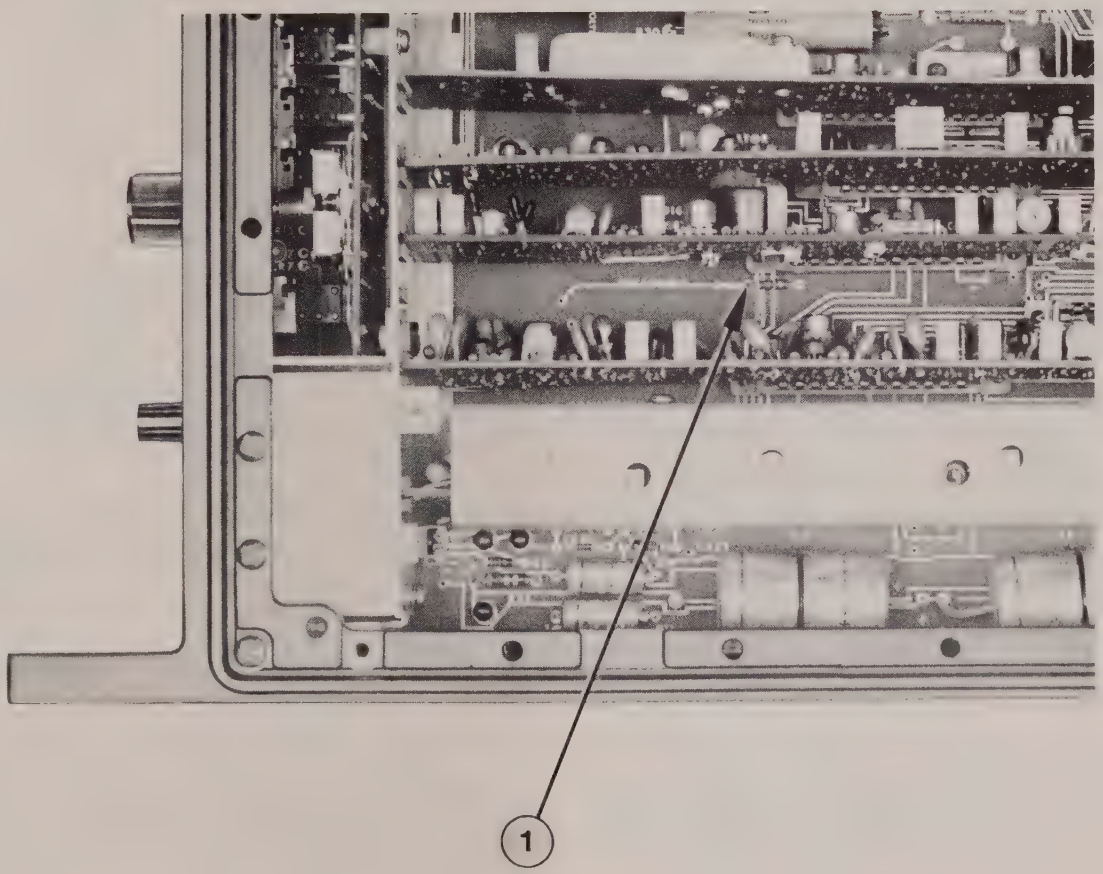

Figure 5.3 - Test Point – mV Offset

Table 5.4 - Ohms Range

Resistance Standard	Range	Adjustment	DVM Readout	Note
100 Megohm	100 MΩ	100 MΩ (R50)	100.00 ± 1 digit	Standard resistors given indicate nominal values. Calibrate for DVM readout equal to actual standard value ± 1 digit
19 Megohm	10 MΩ	10 MΩ (R44)	19.000 ± 1 digit	
1.9 Megohm	1000 Kilohm	1 MΩ (R42)	1900.0 ± 1 digit	
190 Kilohm	100 Kilohm	100 KΩ (R35)	190.00 ± 1 digit	
19 Kilohm	10 Kilohm	10 KΩ (R23)	19.000 ± 1 digit	
1.9 Kilohm	1 Kilohm	1 KΩ (R37)	1.9000 ± 1 digit	
190 Ohm	100 Ohms	Verify a reading of	190.00 ± 1 digit	

b. Connect microvoltmeter + lead to DVM + INPUT terminal and – input lead to DVM – ANALOG COMMON terminal on *rear panel.*

c. Adjust Ω ZERO (R19) for a microvoltmeter reading of zero ± 50 microvolts. Remove shorts from input terminals.

5.24 OHMS RANGE ADJUSTMENT.

a. Connect input connector for 2-wire ohms measurement as described in Section 2. Apply inputs and make the indicated adjustments as shown in table 5.4.

b. Select the 10 OHMS RANGE and remove the jumper between + OHMS CURRENT and + INPUT. Connect input leads to a 19 Ohm standard resistor and verify a DVM reading of 00.000.

c. Select DC/MV FUNCTION and 10 MV RANGE. Verify a DVM readout of 00.000. If necessary, readjust MV OFFSET on front panel for zero. Connect input terminals for 4-wire ohms measurement (Section 2). Select OHMS FUNCTION. Apply inputs and make the indicated adjustments as shown in table 5.5.

d. Remove jumpers between + CURRENT and + INPUT and between – CURRENT and – INPUT.

5.25 DIAC Calibration (Model 21).

5.26 Remove Power. Remove shield, place AC converter on extender board (D.P.N. 403645), remove scaling amplifier and replace with Scaling Amplifier Bypass Board (D.P.N. 410617A). Reapply power. Refer to figure 5.4 for adjustment locations.

Table 5.5 - Ohms Low Range

Resistance Standard	Range	Adjustment	DVM Readout	Note
19 Ohm	10 Ohms	10Ω (R25)	19.000 ± 1 digit	Use low-thermal standard resistors
1.9 Ohm	1 Ohm	Verify a reading of	1.9000 ± 1 digit*	
*If not, repeat step 5.24b				

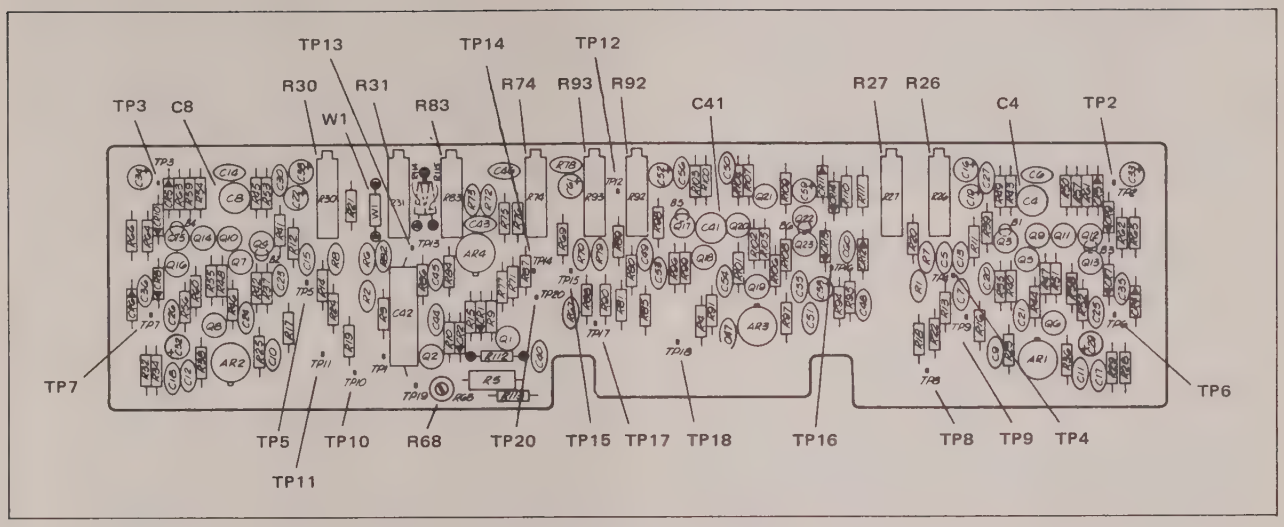

Figure 5.4 - Test Points – DIAC Converter

5.27 DIAC ZERO ADJUSTMENT.

a. Select AC Function, 1V Range, and leave input terminals open.

b. Connect the microvoltmeter Low lead to Common (TP9, TP11 or TP18) and the High lead through a 10 Kilohm resistor to the test points listed in table 5.6.

Table 5.6 - AC Zero

Test Point (fig. 5.)	Adjust:	Reading
TP8	R26	0 ± 10 μV
TP10	R30	
TP17	R92	
TP14	R74	
TP4	R27	
TP5	R31	
TP15	R93	
TP13	R83	

Table 5.7 - AC Symmetry

Test Point	Adjust:	Voltage at Balance
TP2, TP6	R27	Less than ± 10 μvolts
TP3, TP7	R31	Less than ± 30 μvolts
TP12, TP16	R93	Less than ± 30 μvolts

c. Adjust for symmetry of the following pairs of test points (e.g., if TP6 reads +6 μvolts, TP2 will read –6 μvolts when adjusted. (Table 5.7.)

5.28 AVT FREQUENCY RESPONSE ADJUSTMENT.

a. Open jumper W-1 on AC converter (figure 5.4).

b. Apply 1.0000 volts RMS at 1 kHz to DVM input and record the readout (about 0.8410).

c. Apply 1.0000 volts RMS at 100 kHz to DVM input. Adjust C4 for reading recorded at 1 kHz.

5.29 BREAK AMPLIFIER FREQUENCY RESPONSE ADJUSTMENT.

a. Replace jumper W-1. Set input to 1.0000V RMS, 1 kHz and record readout (should be very close to 1.0000).

b. Set input to 1.0000V RMS, 100 kHz. Adjust C8 and C41 for the same readout as recorded in step a, with each capacitor contributing about the same amount (caps in approximately the same position).

5.30 100 mV ZERO ADJUSTMENT.

a. Select 100 mV Range. Apply 10.000 millivolts, 1 KHz to input terminals.

b. Adjust AC OFFSET on the front panel for a readout of .01000.

c. With open input, meter should read 12 digits or less. If not, repeat steps 5.27 and 5.30.

5.31 100 MV GAIN ADJUSTMENT.

a. Remove power. Remove bypass board and install Scaling Amplifier in its place. Reapply power.

b. Select 100 mV Range. Apply 10 mV at 1 kHz and adjust front panel AC OFFSET for a DVM display of .01000.

c. Select 1 Volt Range and apply 1 volt at 1 kHz. Note value of DVM display.

d. Select 100 mV Range. Apply 100 mV at 1 kHz and adjust potentiometer R68 on AC Converter board for a DVM display equal to the value noted in step b (neglect decimal position).

5.32 Scaling Amplifier Low Frequency Gain Adjustment.

a. Remove power. Remove extender board and plug AC Converter board directly into connector J11. Replace shield and top cover on DVM. Reapply power and allow thirty minutes for the instrument to stabilize.

b. Select AUTO RANGE. Apply 10 mV at 1 kHz and adjust front panel AC OFFSET for a DVM display of .01000. Remove input.

c. Connect jumper across DVM input terminals and verify a DVM display of less than 15 digits. If not, repeat paragraphs 5.27, 5.30, and 5.32, steps a, b, and c.

d. Apply the inputs listed in table 5.8 and adjust the indicated control (on the Scaling Amplifier) for a readout equal to the input voltage.

Table 5.8 - Low Freq. Gain

Range	Input	Freq.	Adj.
1	1.0000V	1 KHz	1V LF (R10)
10	10.000V	1 KHz	10V LF (R7)
100	100.00V	1 KHz	100V LF (R5)
1000	1000.0V	1 KHz	1 KV LF (R3)

5.33 SCALING AMPLIFIER HIGH FREQUENCY GAIN ADJUSTMENT.

a. Apply the inputs listed in table 5.9 and adjust the indicated control (on Scaling amplifier) for a readout equal to the applied input.

b. Steps must be performed in the order listed.

Table 5.9 - High Freq. Gain

Range	Input	Freq.	Adj.
1000	500V	40 KHz	Input HF (C16)
1V	1V	100 KHz	1V HF (C17)
10V	10V	100 KHz	10V HF (C9)
100V	100V	100 KHz	100V HF (C7)

c. Apply 100 mV at 1 kHz and select 100 mV Range. Verify DVM readout of 100 mV ± 1 digit. If not, repeat paragraph 5.31, steps c and d.

5.34 RMS AC Calibration (Model 31).

NOTE

Use 10 KΩ resistor in series with + lead of microvoltmeter.

a. Set DVM power switch to off. Extract converter and remove environmental shield. Set S1 and S2 to DC (away from center of board), replace converter and set power switch to on. Select AC and 1 volt range on DVM front panel. Allow 10 minutes for temperature to stabilize. Refer to figure 5.5.

b. Connect jumper across DVM input terminals. Connect the microvoltmeter to TP1 (+) and TP5 (–). Adjust R17 for a microvoltmeter reading of 0 ± 30 μV. Remove + microvoltmeter lead from TP1. Turn R41 fully clockwise.

c. Connect microvoltmeter + lead to TP4. Adjust R42 for a microvoltmeter reading of +20 μV ± 10 μV.

d. Connect + microvoltmeter lead to TP2. Adjust R33 for a microvoltmeter reading of 0 ± 30 μV. Remove microvoltmeter + lead from TP2.

e. Connect + microvoltmeter lead to TP3. Adjust R31 for 0 ± 30 mV. Remove + microvoltmeter lead from TP3.

f. Connect + microvoltmeter lead to TP4. Adjust R41 counterclockwise until the voltage at TP4 reads 0 ± 5 μV. Remove microvoltmeter leads and remove jumper across DVM input.

g. Apply −1.0000V DC and note DVM display.

h. Reverse polarity of input to +1.0000V DC and adjust R28 to obtain approximately the same DVM display as obtained in step g. Repeat steps g and h until the two readings are within .01% of each other. Remove DC supply from DVM input.

i. Apply +0.1000 to DVM input and note DVM display.

j. Reverse polarity of input to −0.1000 and verify DVM display is within ±.5 digits of the reading obtained in step i. If not, use R31 to balance the readings.

NOTE

R54 is an FSV adjustment and is reset only if major repairs have been performed on the converter. In this event, perform the following adjustment:

Apply a calibrated 1.0000V RMS pulse train with a crest factor of 7 and a period of 1 millisecond (1 kHz repetition rate). Adjust R54 for a readout of 1.0000. Remove the pulse generator from the DVM input and continue with the calibration procedure starting at step k.

k. Set power switch on DVM to off, extract converter, set S1 and S2 to AC (toward center of board). Replace environmental shield on converter and replace converter in DVM. Reapply power and allow 10 minutes for temperature to stabilize.

l. Connect the AC source to the DVM input terminals. Apply the inputs listed in the following table and adjust the indicated control for the proper readout.

Range	INPUT		Adjust	Readout
	AC Voltage	Freq		
1V	1.0000	500 Hz	R58	1.0000
1V	.1000	500 Hz	ac offset	0.1000
Repeat steps for R58 and ac offset until no adjustment is required.				
1000V	1000.0	500 Hz	R3	1000.0
1000V	500.00	40 kHz	C11*	500.00
1V	1.0000	50 kHz	C9*	1.0000
10V	10.000	500 Hz	R7	10.000
10V	10.000	50 kHz	C7*	10.000
100V	100.00	500 Hz	R5	100.00
100V	100.00	50 kHz	C4*	100.00
.1V	.1000	500 Hz	R20	.10000
.1V	.1000	20 kHz	C28	.10000
*Use an insulated screwdriver when adjusting the capacitors. High voltage present on C11.				

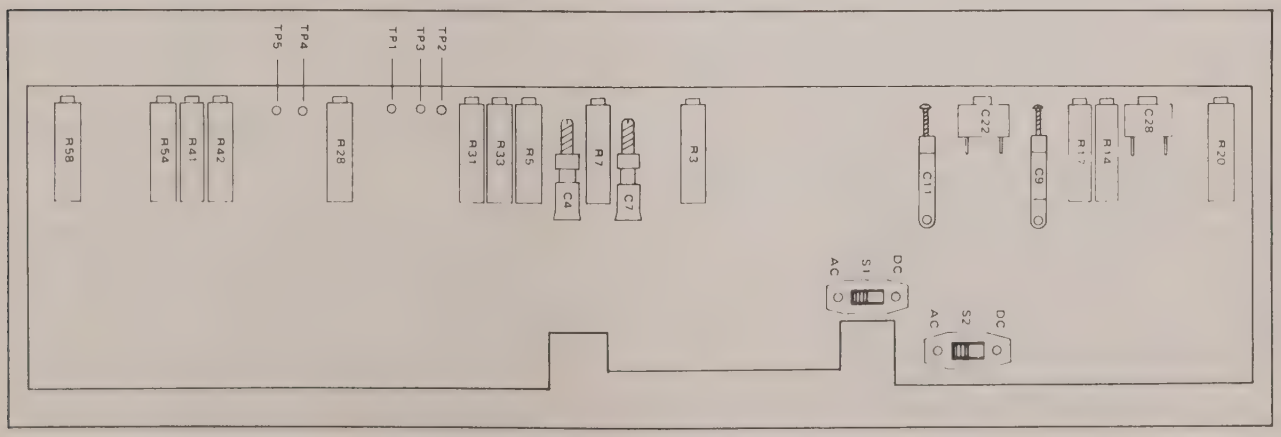

Figure 5.5 - Test Points – RMS AC Converter

5.35 TROUBLESHOOTING.

5.36 This procedure is designed to aid in the location of a malfunctioning component in the event of an instrument failure. The procedure consists of a timing diagram, signal descriptions, logic table, pertinent voltage points for the analog circuitry and troubleshooting guide. All signals described are referenced by the 100 series numbers in brackets located on the schematic drawings in Section 6 and the timing diagram (figure 5.6).

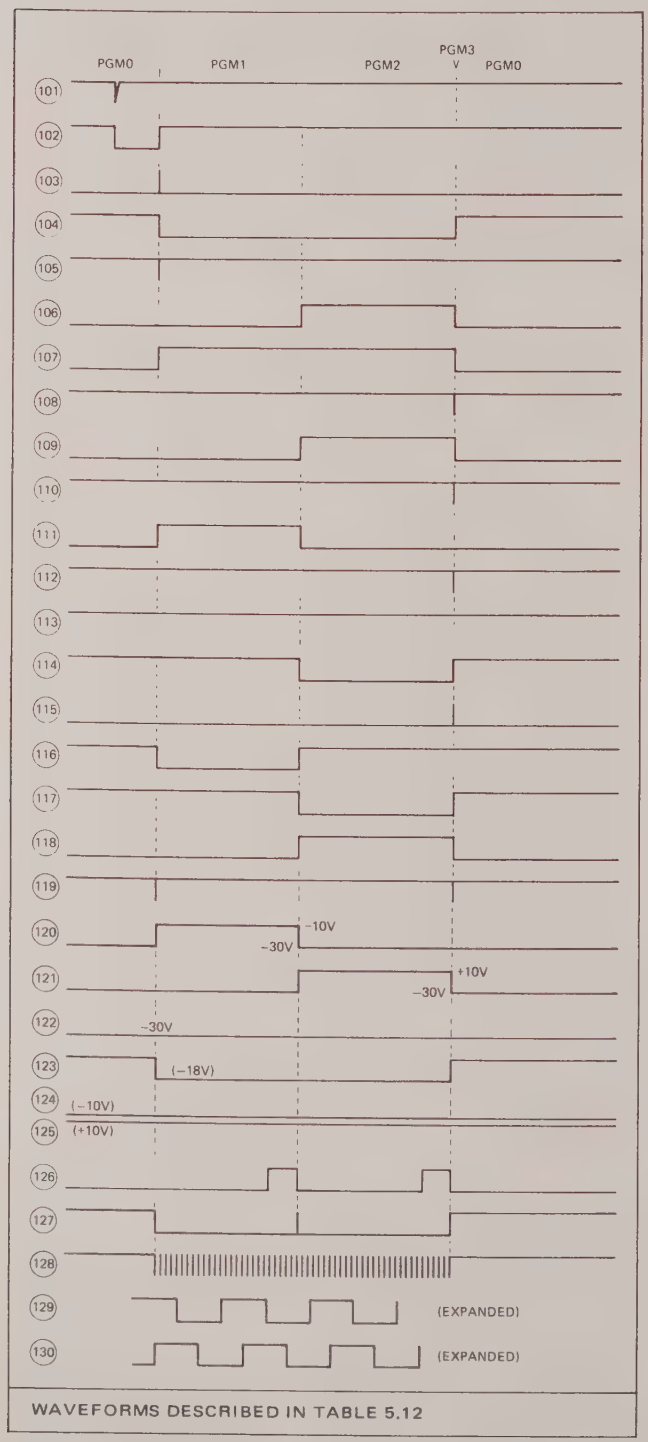

Figure 5.6 - Timing Diagram

CAUTION

Do not remove or replace PC Boards with power applied.

5.37 Preliminary Checks.

a. Remove the top cover and shield as described in the calibration procedure. Apply power to the instrument and check for the supply voltage as given in the table below. Nominal voltage check points are silk-screened on the Interconnect PC board.

+220V +5V −1V	Referenced to TP6 (Interconnect board)
+31V +18V −18V −31V	Referenced to − INPUT terminal on front panel

b. If all supply voltages are missing, check fuse, power cord and line voltage source. Correct any supply malfunctions.

c. If the instrument is equipped with a program board, eliminate it as a possible problem source by disconnecting J3 and J4 and rechecking for the symptoms. If the problem is isolated to the program board, refer to paragraph 5.43.

d. Perform the specification tests in Section 3 and determine the Functions and Ranges in which the malfunction occurs. When the problem is isolated to a particular portion of the instrument, review the circuit description in Section 4, then proceed to paragraph 5.38.

5.38 DC FUNCTION TROUBLESHOOTING PROCEDURE.

a. Select DC FUNCTION, 10V RANGE, and PERIODIC. Leave DATA OUTPUT, PROGRAM CONTROL, HOLD, RATIO, and FILTER out.

b. Apply +10 volts to the instrument input terminals. For errors relating to decimal position or range, refer to paragraphs 5.39, 5.40; for incorrect reading or incorrect instrument operation refer to table 5.10.

Table 5.10 - Troubleshooting the DC Function

SYMPTOM	Test Point	Location	Signal	Procedure (if Signal incorrect)
1. Erroneous Reading	1. M29-9	Interconnection Board	(129)	Check Clock and Oscillator Circuitry
	2. ANALOG OUTPUT	Rear Panel	+10 Volts	Refer to SYMPTOM 7, paragraph
	3. TP1, TP2	Interconnection Board	(107), (109)	Determine state of Program Counter and refer to SYMPTOMS 2, 3, 4, 5, and 6
2. TP1 = FALSE TP2 = FALSE (PGM-0)	1. M19-10		(101)	Check Display Rate Oscillator
	2. TP7		(102) Refer to: (103), (104), and (105)	If TRUE, check M19, M18; if FALSE, refer to figure 6.22 and check PROGRAM CONTROL LOGIC components M24, Q7, M18, M17, M11, and M5 for correct output logic levels for the input signals observed. Replace any malfunctioning component.
	3. M12-1		(128)	If Clock present, M12 is bad or M12-12 is shorted
	4. M24-2		(104)	If False, Check M24, M23
3. TP1 = TRUE TP2 = FALSE (PGM-1)	1. TP3		(111)	Replace M18
	2. M17-5		(106)	Check M3 on Display board. If (126) missing from M3-5, check M13, M14, M15, and M16 on Interconnection board
4. COUNTER LOCKED UP	M13-2		(127)	Check M3, Q12, Q13, M10, and M5 on Display Board
5. TP1 = TRUE TP2 = TRUE (PGM-2)	M6-6		(110)	Check M5, M6
6. TP1 = FALSE TP2 = TRUE (PGM-3)	M21-3		(108)	Replace M21
7. Erroneous Reading	1. M5-4		(112)	If pulse normal replace M5, if not perform test point check 7.2. If pulse normal, check Q26 and Q27 on Digitizer board and Q9 on Interconnection board
	2. TP3	Digitizer	(119)	Monitor TP2 on digitizer for −5.0V dual-slope ramp. If normal, check AR3, Q25, and AR5. If not, continue procedure

Table 5.10 - Troubleshooting the DC Function (continued)

SYMPTOM	Test Point	Location	Signal	Procedure (if Signal incorrect)
Erroneous Reading	3. TP4	Digitizer	(125)	Check RATIO relay K2 and relay drive transistor Q2 on Interconnection board. Check Q24 and AR2 on Digitizer
	4. TP5		(124)	Check AR4
	5. TP6		(116)	Check Q1, Q2. Check Q10, Q11 on Interconnection board
	6. M2-1		(117)	Check Q3, Q4. Check Q12, Q13, and M6 on Interconnection board
	7. Q14 Collector		(120)	Check Q6, Q14, M1, M2
	8. Q18 Collector		(121)	Check Q10, Q18, Q19, M1, M2
	9. Q16 Collector		(122)	Check Q8, Q16, M1, M2
	10. Collector Q12		(123)	Check Q12, Q11, M2
	11. J8-5		+10 Volts	Check Q9, Q17, Q7, Q15, Q5, Q13

NOTE

If instrument is locked up in a program state, the signal should be at the logic level required for the state indicated (e.g., during PGM-0, (104) should be true).

5.39 Range.

5.40 The routing of range logic throughout the instrument is shown in figure 5.8. The tables indicated in the blocks provide the output at important stages of the flow. (1's indicate logic true states, X's indicate the energizing of the component).

5.41 Auto Range.

5.42 The Autorange circuitry consists of an up/down counter M30, two full adders M29 and M31 and Logic circuitry consisting of portions of M18, M21, M25, M27, and M28. All of the components are located on the main board. The normal up and down range sequence for the ohms function are shown in figure 5.7. The upper and lower range limits are determined by the function selected, generating codes to the full adders. The codes for each function are shown in table 5.6.

5.43 Program.

5.44 The program circuit, when selected, disables the Function and Range switches and enables the external programming lines through the M1, M2, and M3 'AND' gates. The program board also generates delayed commands when HOLD and EXT DVM COMMAND (TIMEOUT) are used. The timeout periods are dependent on the function selected and shown in table 5.11. For troubleshooting, refer to table 5.22 and schematic, figure 6.22.

Table 5.11 - Timeouts

Function	Timeout
DC	30 ms
1 ohm to 10 Megohm	30 ms (with W-1 out) 300 ms (with W-1 in)
100 Megohm	300 ms
Filter	250 ms (plus Function Timeout)
AC	500 ms

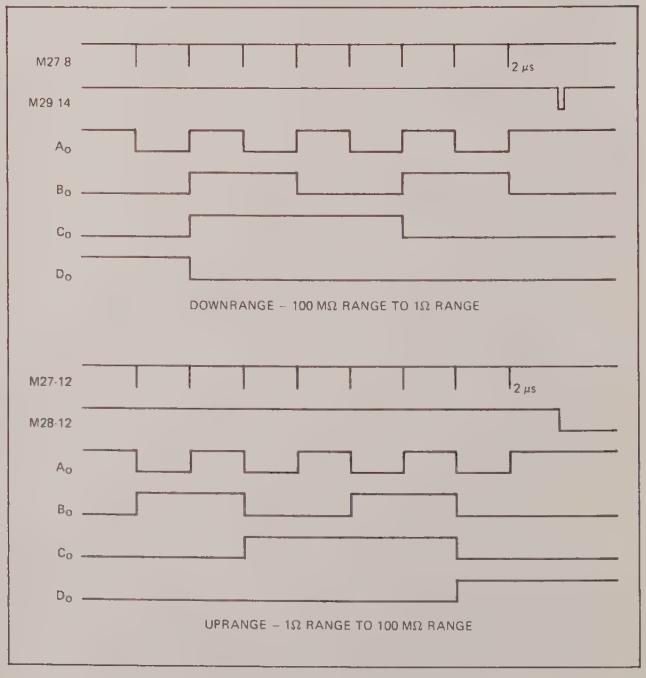

Figure 5.7 - Auto Range Sequence

Table 5.12 - Timing Diagram Signal Description

Fig. Designator	Circuit Name	Circuit Components	Output Signal Description	Circuit Input Signals	Purpose	Output	Routed to:
(101)	Display Rate Oscillator	Q26, Q27	Negative going ≃.5 ms pulse, 5V	Instrument in Periodic mode, PGM-0	Initiates a new reading at completion of a measurement cycle	Q27 Collector	M19-10
(102)	5 ms Delay Driver	M19, M18	Negative going 5 ms pulse, 3.8V	Periodic: display pulse (101); HOLD: PGM Com'd, DVM Com'd, or SINGLE	Negative going edge initiates 5 ms delay Generator	M18-4 (TP7)	M18-3, M6-1 5 ms delay Ckt.
(103)	Delayed Pulse Circuitry	M18, M24, Q7	Positive going 1 to 2 μs pulse, 4V	(102)	Advances Program Counter to PGM-1	M18-1	M17-9
(104)	PGM-0 Decoder	M23, M24	Negative going 33-1/3 ms pulse, 4V	M12-9, M12-12	Premeasurement state of program logic	M24-2	Display Rate Osc, M17-10, M23-2, M21-5 M29-13
(105)	Nand Gate	M17	Negative going 1 to 2 μs pulse, 4V	(103) & (104)	Allows command pulse during PGM-0 only	M17-8	M5-13
(106)	Q1 Overflow	M3 (display board)	Positive going 16-2/3 ms pulse, 4V	Counter overflow (126)	Advance Program Counter to PGM-2	M3-9	M17-5, M6-12
(107)	Program F/F A	M12	Positive going 33-1/3 ms pulse, 4V	M11-1	Determines state of measurement cycle	M12-12 (TP1)	M17-1, M23-6, M12-7
(108)	PGM-3 Decoder	M21	Negative going 2 μs pulse, 4V	M12-9, M12-13	Generates latch strobe pulse	M21-3	M17-13, M18-11, M22-2, 13
(109)	Program F/F B	M12	Positive going 16-2/3 ms pulse, 4V	M11-1	Determines state of measurement cycle	M12-9 (TP2)	M12-3, M21-1, M18-9, M23-5, M6-4
(110)	Axis crossing memory	M6, M5	Negative going 3.4 μs pulse, 4V	M6-11, Q8, Q9 (113) (114)	Advances program counter to PGM-3	M6-6	M5-1

Table 5.12 - Timing Diagram Signal Description (continued)

Fig. Designator	Circuit Name	Circuit Components	Output Signal Description	Circuit Input Signals	Purpose	Output	Routed to:
(111)	PGM-1 Decoder	M18	Positive going 16-2/3 ms pulse, 4V	M12-9, M12-13	Signal integrate period	M18-10 (TP3)	Base Q10, Q11, M17-4
(112)	Axis & Polarity Amplifier (1/2) (used in positive polarity inputs)	Q9	Negative going 100 ns pulse, 4V	Axis crossing detector output (digitizer board)	Clear polarity f/f (M26), reset axis crossing memory (M5, M6)	Q9 Collector	M26-1, M5-4
(113)	Axis & Polarity Amplifier (1/2)	Q8	Same as (112) (with negative polarity inputs)	Same as (112)	Set polarity f/f, reset axis crossing memory	Q8 Collector	M26-4, M5-5
(114)	Q2 Overflow	M3 (on display board)	Negative going 16-2/3 ms pulse, 4V	(106)	Indicates an overload when 50 ms in duration	M3-13 (display board)	M2-12 (display board) M6-13, M27-2, M11-5
(115)	Strobe B	M22	Positive going 2 μs pulse, 4V	M21-3 (108)	Strobes latch for 1 K's digit & polarity F/F (M26)	M22-6	M10-4-13, M26-11 M23-11 (display board)
(116)	Signal Integrate De-Code Circuit	Q1, Q2 (digitizer board)	Negative going 16-2/3 ms pulse, 4V	M18-10 (111)	Controls signal switch drive circuit on digitizer	Q1 Collector (TP6)	Q6 emitter through R14, M2-5 (digitizer board)
(117)	Reset Decode Circuit (Q)	Q3, Q4 (digitizer board)	Negative going 16-2/3 ms pulse, 4V	M6-3	Enables polarity change	Q4 Collector	M2-1-4-13 (digitizer board)
(118)	Reset Decode Circuit (Q)	Same as (117)	Positive going 16-2/3 ms pulse, 4V	Same as (117)	Enables reference drive circuit	Q3 Collector	M1-2-5 (digitizer board)
(119)	Axis Crossing Detector	AR5 (digitizer board)	2-Negative going pulses: #1 14 μs, 4V #2 70 μs, 4V	AR3, Q25 on digitizer board	Indicates polarity and axis crossing	AR5-9 (TP3)	Base of Q26, Q27, M2-10-12 (digitizer board)

Table 5.12 - Timing Diagram Signal Description (continued)

Fig. Designator	Circuit Name	Circuit Components	Output Signal Description	Circuit Input Signals	Purpose	Output	Routed to:
(120)	Signal Switch Drive Circuit	Q6, Q14 (digitizer board)	Positive going 16-2/3 ms pulse, 40V (–30V to +10V)	(116)	Controls gate of signal switch (Q13 on digitizer board)	Q14 Collector	Gate of Q13 (digitizer board)
(121)	– Reference Switch Drive Circuit	Q10, Q18 (digitizer board)	Positive going 16-2/3 ms pulse, 20V (–30 to –10)	M1-3	Controls – Reference switch FET (Q17 on digitizer board)	Q18 Collector	Gate of Q17 (digitizer board)
(122)	+ Reference Switch Drive Circuit	Q8, Q16 (digitizer board	–30 volt level (positive signal input)	M1-6	Controls + Reference switch FET (Q15 on digitizer board)	Q16 Collector	Gate of Q15 on digitizer board
(123)	Internal Reset Circuit	M2, Q11, Q12 (digitizer board)	Negative going 33-1/3 ms pulse, –18V	(117), (118)	Activates FET switches Q20 and Q28 during non-measurement period to reset integrator	Q12	Gates of Q20, Q28 (on digitizer board)
(124)	Negative Reference	AR4 (digitizer board)	–10 volt level	(125) through R61	Used for measurement of positive input signals	AR4-6 (TP5)	Source of Q17
(125)	Positive Reference	AR2 (digitizer board)	+10 volt level	CR10 reference zener	Used for measurement of negative input signals	Q24 emitter (TP4)	Source of Q15, J9-C (ohms conv.)
(126)	Counter Overflow	M16	2-positive going 3.3 ms pulses, 4V	M15-11	Drives overflow F/Fs (M3 on Readout board)	M16-11 (8-bit)	M3-5 (on display board)
(127)	Counter Reset	M5 (on display board)	2-negative going 16-2/3 ms pulse, 4V, 16-2/3 μs a part	M10-10 (display board) M23-13	Resets counter to zero during PGM-0 and during integrator crossover	M5-3	M13-2, M14-2, M15-2, M16-2
(128)	Count Circuit	M17	Negative going 600 KHz square wave, 33-1/3 ms, 4V	Clock (129), (107)	Advance counter	M17-3	M13-14
(129)	Clock	M20	600 KHz square wave, 4V	M24-6, 2.4 MHz oscillator	Master timing	M20-9	M17-2

Table 5.12 - Timing Diagram Signal Description (continued)

Fig. Designator	Circuit Name	Circuit Components	Output Signal Description	Circuit Input Signals	Purpose	Output	Routed to:
(130)	Clock (X)	M20	600 KHz square wave, 4V, leads clock by 90°	Same as (129)	Ranging circuitry	M20-13	M18-12, M25-9

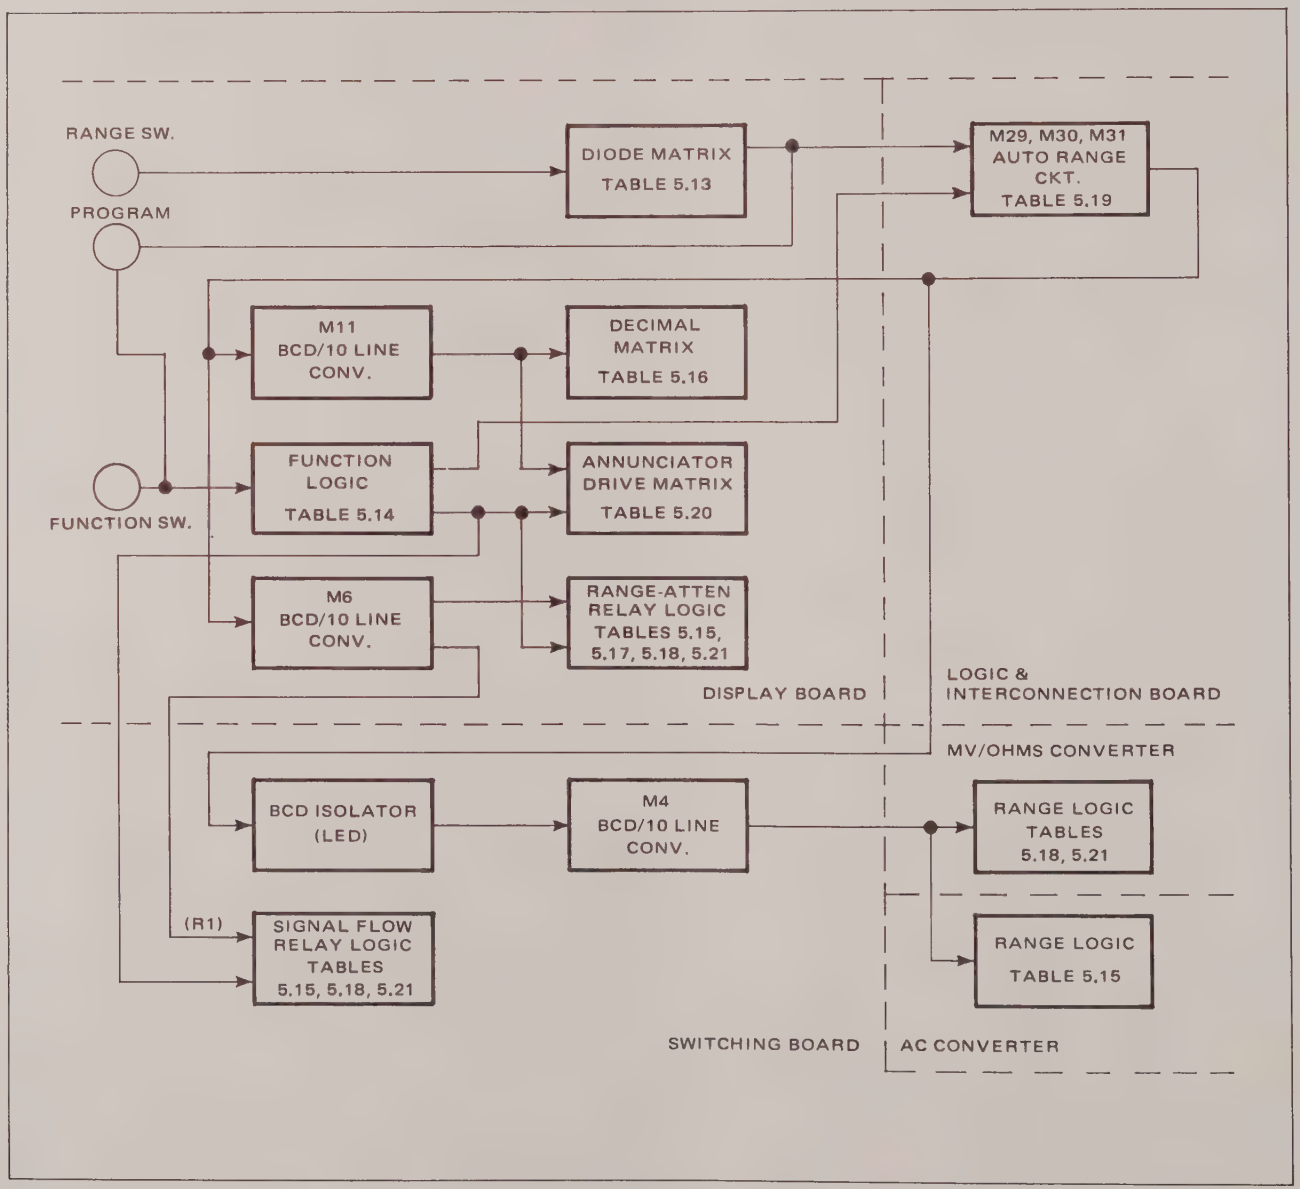

Figure 5.8 - Signal Flow Diagram

Table 5.13 - BCD Coding

Range Switch (Input)	Diode Matrix Output Code			
	A	B	C	D
1	1	0	0	0
10	0	1	0	0
100	1	1	0	0
1	0	0	1	0
10	1	0	1	0
100	0	1	1	0
1000	1	1	1	0
10M	0	0	0	1
100M	1	0	0	1
Auto	1	1	1	0

Table 5.14 - mV Function Coding

Jumper (W2)	INPUT		OUTPUT	
	$\overline{DCMV}$	$\overline{DC}$	$\overline{DC}$'	$\overline{DCMV}$'
Short	1	1	1	1
Short	0	1	0	1
Short	1	0	0	1
Open	1	1	1	1
Open	0	1	1	0
Open	1	0	0	1

Table 5.15 - AC Mode

Range	ISO*			SW. BD.			DIAC** CONVERTER			
	K1	K3	K4	K1	K2	K3	K1	K2	K3	Q5
100 mV		X			X					X
1	X				X					X
10	X				X				X	
100	X				X			X	X	
1000	X				X		X		X	

*Gain & Attenuation relays on the Interconnection Board used in conjunction with the Isolator Board

**RMS Code given in figure 4.9

Table 5.16 - Decimal Point Code

BCD Input				Decimal	Range	Mode
A	B	C	D			
1	0	0	0	0.0000	1	Ohms
0	1	0	0	00.000	10	mV Ohms
1	1	0	0	.00000	100	
0	0	1	0	0.0000	1	Volts Kohms
1	0	1	0	00.000	10	
0	1	1	0	000.00	100	
1	1	1	0	0000.0	1000	
0	0	0	1	00.000	10M	Mohms
1	0	0	1	000.00	100M	

Table 5.17 - DC Mode

Range	ISO*		
	K1	K3	K4
100 mV		X	
1	X		
10			
100	X		X
1000			X

*Gain & Attenuation relays on the Interconnection Board used in conjunction with the Isolator Board

Table 5.18 - mV-DC Mode

Range	ISO*			SW. BD.		
	K1	K3	K4	K1	K2	K3
10 mV	X			X		
100 mV				X		
1	X					
10						
100	X		X			
1000			X			

*Gain & Attenuation relays on the Interconnection Board used in conjunction with the Isolator Board

Table 5.19 - Function Limit Codes

Range BCD Code (Input)				FUNCTION															
				Ohms				DC/mV				DC				AC			
1	2	4	8	1	2	4	8	1	2	4	8	1	2	4	8	1	2	4	8
1	0	0	0	0	1	1	1												
0	1	0	0					1	0	1	1								
1	1	0	0									0	0	1	1	0	0	1	1
0	0	1	0																
1	0	1	0					(Legal Range Area)											
0	1	1	0																
1	1	1	0					0	0	0	1	0	0	0	1	0	0	0	1
0	0	0	1																
1	0	0	1	0	1	1	0												
Impossible Range Area																			

Table 5.20 - Annunciator Coding

Inputs		MΩ		KΩ				Ω		1 mV		Ratio		AC		+ Pol		– Pol		NO			
		DS1		DS2				DS3		DS4		DS5, 6		DS7		DS8		DS9		DS10			
M1 Output Code	1						X		X														
	2					X		X		X													
	8		X		X																		
	9	X		X																			
$\overline{\Omega}$				X	X	X	X	X	X														
$\overline{\Omega}$										X											X		
$\overline{\text{Ratio}}$												X											
$\overline{\text{AC}}$														X						X			
+ Polarity																X							
– Polarity																		X					
W-1 Short																				X			
W-3 Short																					X		
Overload																						X	
Q2 $\overline{\text{Overflow}}$																							X

Table 5.21 - Ohms Mode

Range	ISO*			SW. BD			OHMS CONVERTER						
	K1	K3	K4	K1	K2	K3	K1	K2	K3	K4	K5	Q1	Q12
1	X			X		X	X	X					
10				X		X	X	X					
100				X		X	X						
1				X		X			X				
10						X	X					X	
100						X			X				X
1000						X				X			
10000						X					X		
*Gain & Attenuation relays on the Interconnection Board used in conjunction with the Isolator Board													

Table 5.22 - Program Troubleshooting

Symptom (Inoperative)	Input (J202)	Name	Output	Components Used
Program	Pin 21	Ext. Program Control	P3-8	M5, M3, & Q1
Function	Pin 14	Ext. DC	P3-7	M5, M2
	Pin 19	Ext. DC/mV	P3-9	M5, M3
	Pin 26	Ext. AC	P3-1	M4, M1
	Pin 24	Ext. Ω	P3-2	M4, M1
Range	Pin 16	Ext. Auto	P4-8	M4, M2
	Pin 12	Ext. A_{in}	P3-13	M5, M2
	Pin 18	Ext. B_{in}	P3-6	M4, M2
	Pin 15	Ext. C_{in}	P3-12	M5, M3
	Pin 17	Ext. D_{in}	P3-10	M5, M3
Ratio	Pin 22	Ext. Ratio	P3-3	M4, M1
Filter	Pin 20	Ext. Filter	P3-4	M4, M1
Hold	Pin 28	Ext. Hold	P4-11	M7, M6
Command (FAST)	Pin 29	Ext. DVM Command (FAST)	P4-6	M7, M6
Command (TIMEOUT)	Pin 27	Ext. DVM Command (TIMEOUT)		M7, M6, Q6, Q7, Q8, Q5, Q4, Q3, Q2, M10

5.45 ANALOG TROUBLESHOOTING.

5.46 The analog portions of the instrument are located on the ISOLATOR, MILLIVOLT, OHMS Converter/ MILLIVOLT, AC Converter and AC PRESCALER boards. The following paragraphs and tables provide pertinent operating information and voltage levels at various points in the circuitry. The voltage levels are keyed to designators on the schematics in Section 6. All voltage levels in the analog circuitry unless otherwise noted are referenced to the – INPUT terminal on the front panel of the instrument.

5.47 Isolator.

5.48 The Isolator amplifier (figure 6.17) accepts inputs of approximately ± 24 volts, limited by the input clamp network (Q15, Q16, Q5, Q6, CR1, and CR2). The output swing is approximately ± 26 volts.

5.49 Voltage levels of major points on the amplifier for various inputs are shown in table 5.23.

Table 5.23 - Isolator Voltage Levels

Input	TEST POINT						
	A	B	C	D	E	F	G
0 Volts	+5	0	–5	–1.0	0	+0.5	+2.7
+10 Volts	+15	+10	+5	+9.0	+10	+0.5	+12.7
–10 Volts	–5	–10	–15	–11.0	–10	+0.5	–7.3

5.50 Millivolts.

5.51 The Millivolts amplifier is provided either as a single unit (figure 6.7) or combined with the OHMS converter board (figure 6.9). The Millivolts amplifier has a fixed gain of 100 when used for the mV function on a gain of 99 when used with the Ohms converter for low ohms measurements. The difference in gain is due to the routing of the input signal to the amplifier; not to any change in the gain determining resistors of the amplifier. Output voltage swing is approximately ± 24 volts. Voltage levels at various points of the amplifier are given in table 5.24.

Table 5.24 - Millivolts Voltage Levels

Input	TEST POINT					
	A	B	C	D	E	F
0	–1.3V	0V	+2.2V	+3 mV	+5V	–5V
+10 mV	–1.3V	+1V	–3.7V	+13mV	+5V	–5V
–10 mV	–1.3V	–1V	+7.6V	–7 mV	+5V	-5V

5.52 Ohms Converter.

5.53 The Ohms converter amplifier is an operational amplifier with a dual F.E.T. input. The operation of the amplifier and ranging circuit is described in the Theory of Operation section. Voltage levels are given in table 5.25.

Table 5.25 - Ohms Converter Voltage Levels

Input	TEST POINT		
	G	H	I
Short	+1V	+4.3V	0V
1 Kohm	+1V	+4.3V	–100 mV

5.54 DIAC Scaling Amplifier.

5.55 The Scaling amplifier is an operational amplifier with feedback supplied through the ranging circuits. Voltage points are supplied on the schematic (figure 6.11).

5.56 DIAC Converter.

5.57 The AC converter consists of three active rectifiers and a summing amplifier. Voltage levels and wave forms are provided on figure 6.13.

5.58 RMS AC Converter.

5.59 The RMS Converter consists of a scaling amplifier and operates in essentially the same manner as the DIAC scaling amplifier except on the .1 volt range. On this range the scaling amplifier has a gain of 10 causing the output signal of the scaling amplifier to be at a 1 volt level for a full scale 0.1 volt input. The remainder of the circuit consists of an active full wave rectifier, a log amplifier and an antilog and summing amplifier circuitry. A divide-by-10 attenuator circuit at the output of the converter reduces the dc equivalent output by a factor of 10 on the .1 volt range. Typical waveforms for a sinusoidal input are shown in figure 4.9; the schematic, indicating the actual components found on the circuit board, is provided in figure 6.15.

5.60 BOARD REVISION.

5.61 Every effort is made to keep the manual concurrent with the instrument despite changes to the design, which are an inevitable adjunct of the manufacturing process. The manual is updated and periodically reprinted throughout the year. In between printings, Addendums and Errata Sheets are added to the manual if required to implement the reprinted copy.

5.62 Any design change is accompanied by an updating of a board revision. Such change could be as simple as a revised hole size or as complex as major modifications of the circuitry. The revision of a board is indicated by the letter preceding the assembly number stamped on the board; the revision of the assembly drawing in Section 6 or on an Errata Sheet is indicated by the letter following the assembly number, located below the drawing. Comparing the revision letters can indicate how closely the drawing corresponds to the board.

SECTION 6 DRAWINGS

Figure	Title	Page
6.1	Schematic, Interconnection and Logic	6-2
6.2	Layout, Interconnection and Logic	6-6
6.3	Schematic, Power Supply	6-7
6.4	Layout, Switching	6-8
6.5	Schematic, Switching	6-9
6.6	Layout, Preamp (mV)	6-10
6.7	Schematic, Preamp (mV)	6-11
6.8	Layout, Preamp/Ohms Converter	6-12
6.9	Schematic, Preamp/Ohms Converter	6-13
6.10	Layout, Scaling Amplifier	6-14
6.11	Schematic, Scaling Amplifier	6-15
6.12	Layout, DIAC Converter	6-16
6.13	Schematic, DIAC Converter	6-17
6.14	Layout, RMS AC Converter	6-18
6.15	Schematic, RMS AC Converter	6-19
6.16	Layout, Isolator	6-20
6.17	Schematic, Isolator	6-21
6.18	Layout, Digitizer	6-22
6.19	Schematic, Digitizer	6-23
6.20	Layout, Display	6-24
6.21	Schematic, Display	6-25
6.22	Layout, Program	6-26
6.23	Schematic, Program	6-27
6.24	Integrated Circuits	6-28

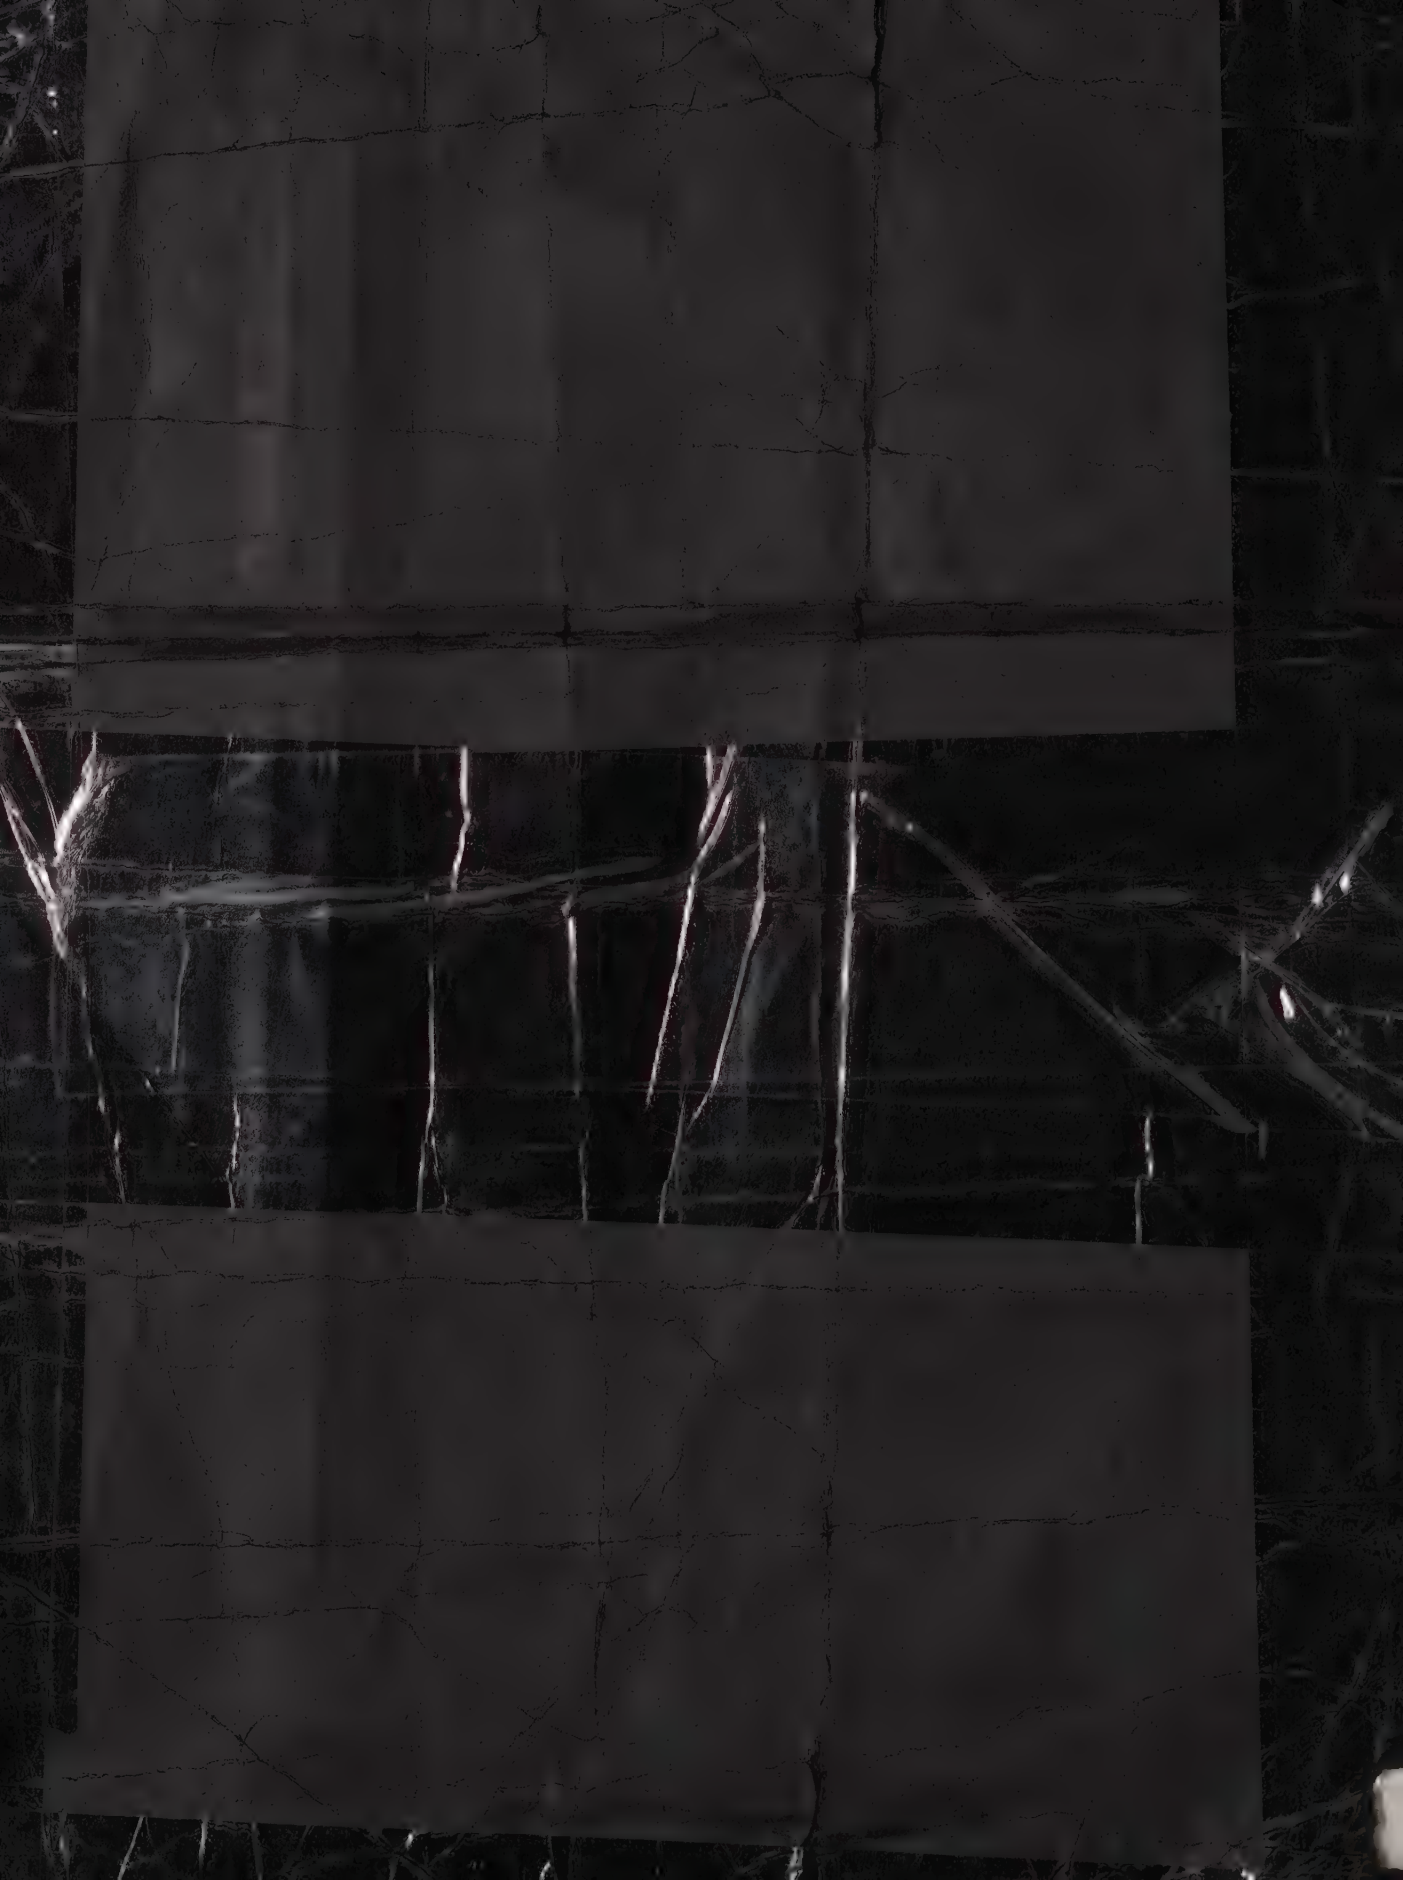

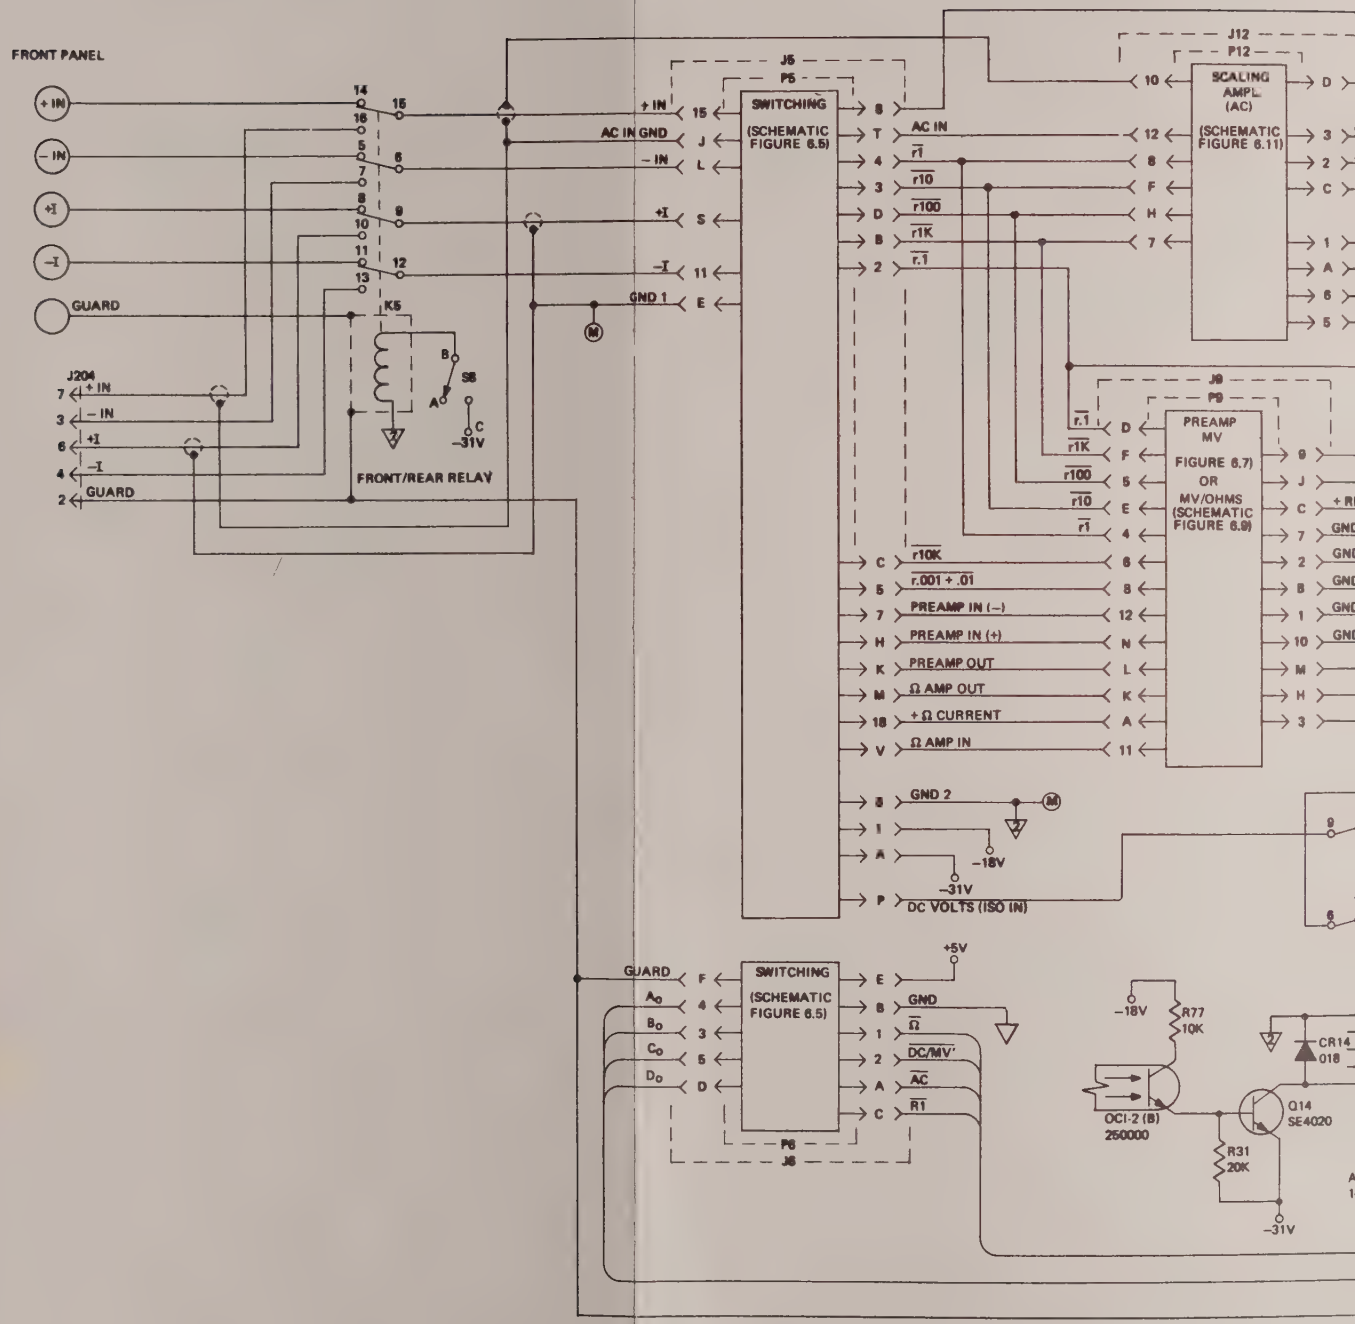
FRONT PANEL
+ IN
– IN
+I
–I
GUARD
K5
S8
FRONT/REAR RELAY
–31V
J204
+ IN
– IN
+I
–I
GUARD
J5
P5
SWITCHING
(SCHEMATIC FIGURE 6.5)
+ IN
AC IN GND
– IN
+I
–I
GND 1
AC IN
r1
r10
r100
r1K
r.1
J12
P12
SCALING AMPL (AC)
(SCHEMATIC FIGURE 6.11)
J9
P9
PREAMP MV
FIGURE 6.7)
OR
MV/OHMS
(SCHEMATIC FIGURE 6.9)
r10K
r.001 + .01
PREAMP IN (–)
PREAMP IN (+)
PREAMP OUT
Ω AMP OUT
+ Ω CURRENT
Ω AMP IN
GND 2
–18V
–31V
DC VOLTS (ISO IN)
+5V
GUARD
SWITCHING
(SCHEMATIC FIGURE 6.5)
GND
Ω
DC/MV'
AC
R1
P6
J6
–18V
R77
10K
CR14
018
OCI-2 (8)
250000
Q14
SE4020
R31
20K
–31V

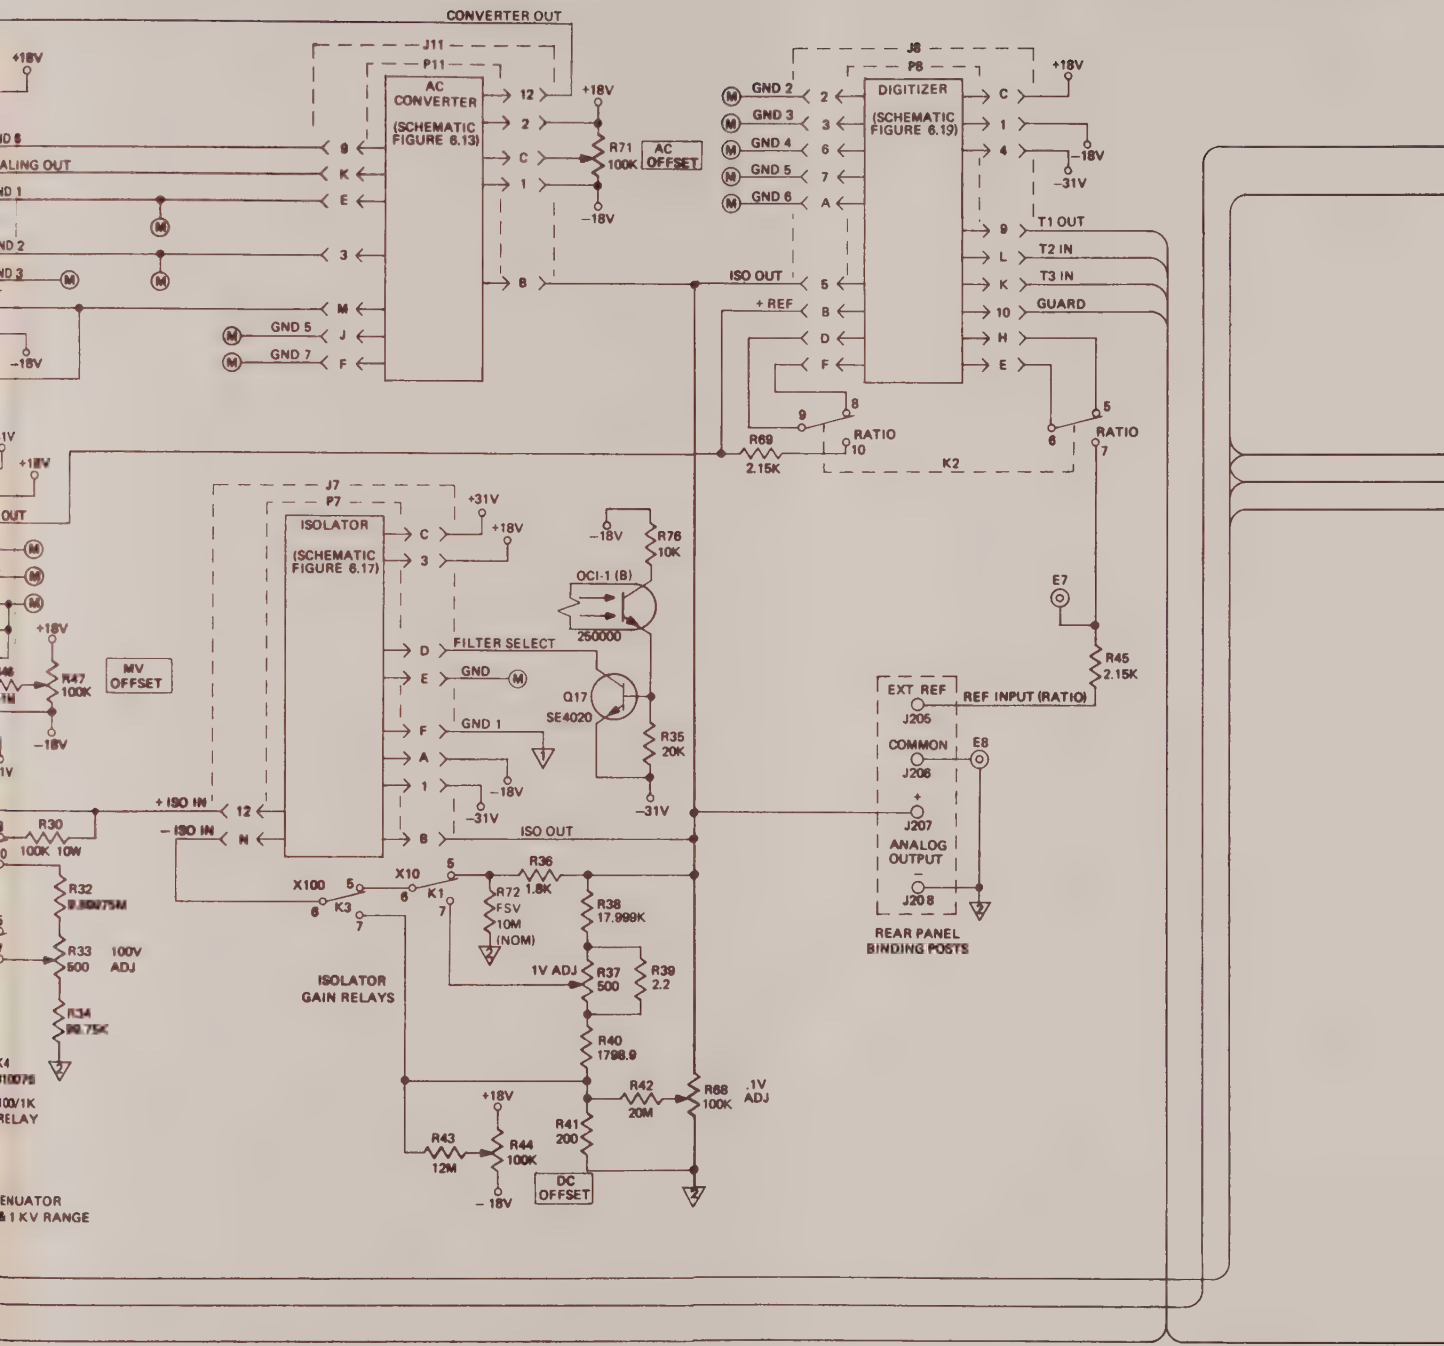
CONVERTER OUT
J11
P11
AC CONVERTER
(SCHEMATIC FIGURE 6.13)
+18V
R71 100K
AC OFFSET
-18V
GND 5
GND 7
J8
P8
DIGITIZER
(SCHEMATIC FIGURE 6.19)
GND 2
GND 3
GND 4
GND 5
GND 6
-31V
T1 OUT
T2 IN
T3 IN
GUARD
ISO OUT
+ REF
R69 2.15K
RATIO 10
RATIO 7
K2
J7
P7
ISOLATOR
(SCHEMATIC FIGURE 6.17)
+31V
R76 10K
OCI-1 (B)
250000
FILTER SELECT
GND
Q17 SE4020
GND 1
R35 20K
E7
R45 2.15K
EXT REF
REF INPUT (RATIO)
J205
COMMON
J206
E8
J207
ANALOG OUTPUT
J208
REAR PANEL BINDING POSTS
MV OFFSET
R47 100K
+ ISO IN
- ISO IN
R30 100K 10W
R32
R33 500 100V ADJ
R34
X100
X10
K1
K3
R36 1.8K
R72 FSV 10M (NOM)
R38 17.999K
1V ADJ
R37 500
R39 2.2
R40 1798.9
R42 20M
R68 100K .1V ADJ
R41 200
R43 12M
R44 100K
DC OFFSET
ISOLATOR GAIN RELAYS
ENUATOR
1 KV RANGE

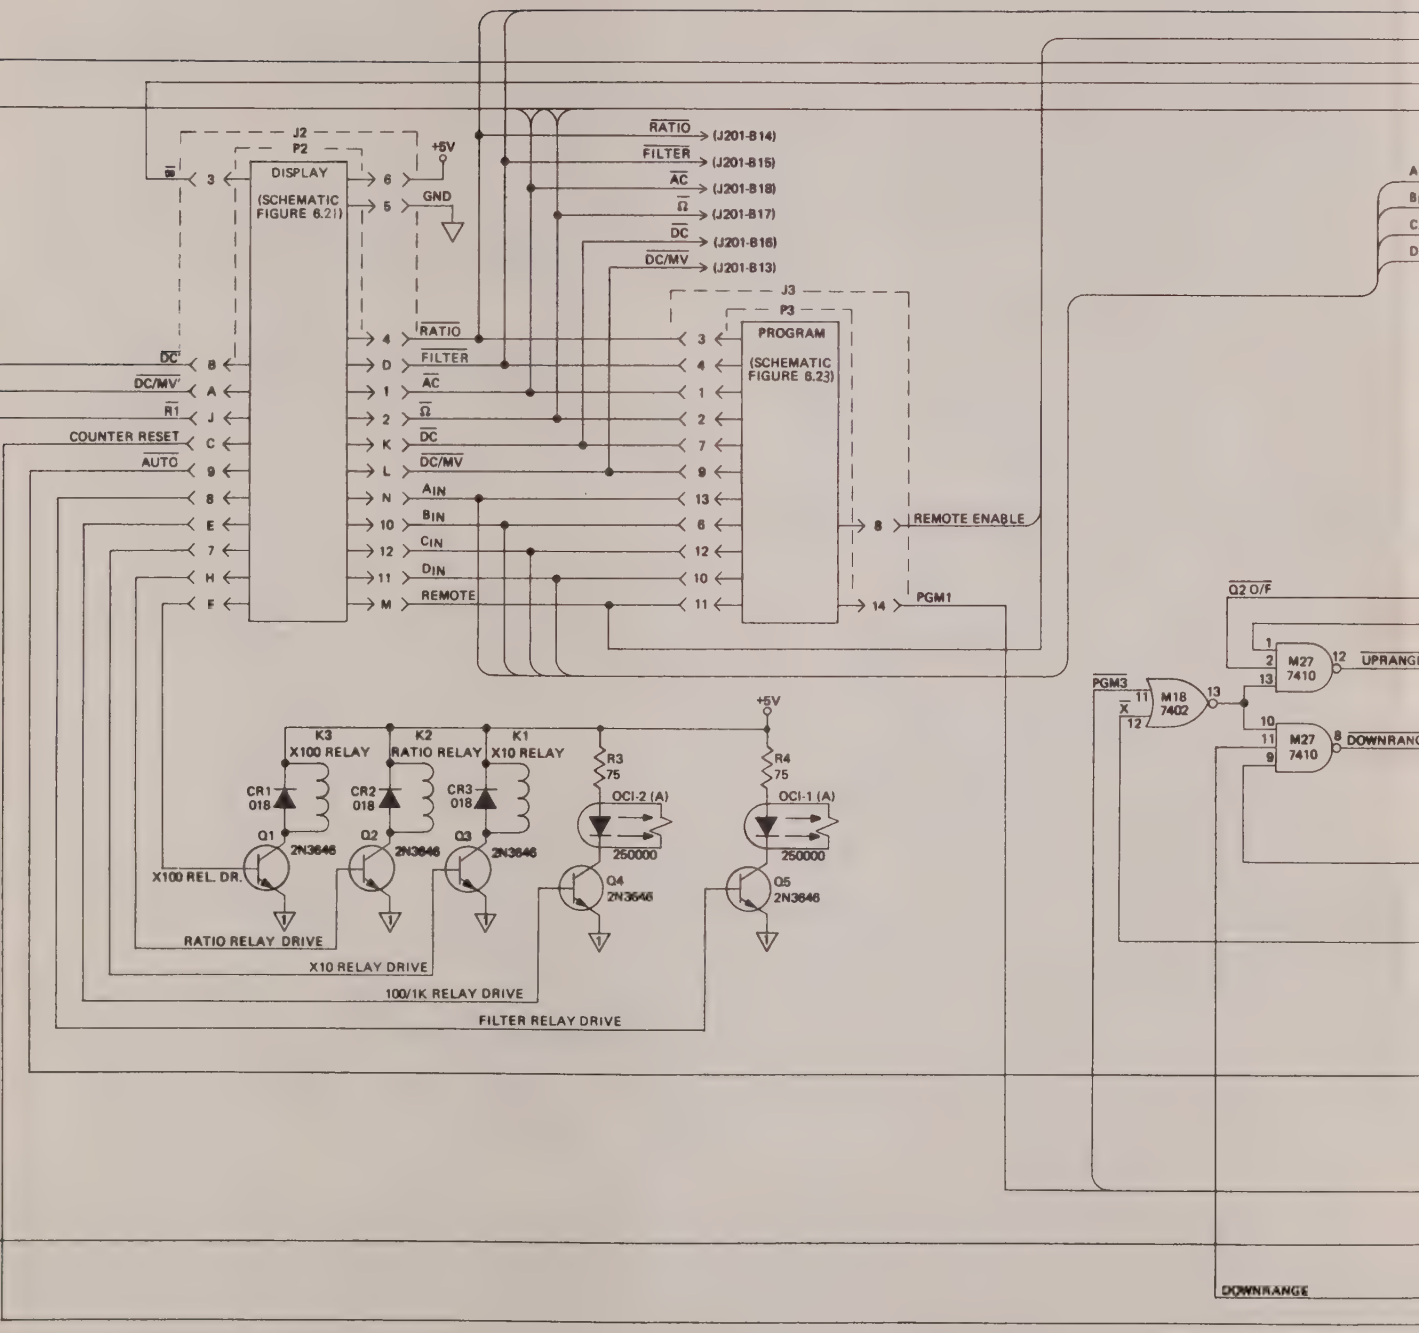
J2
P2
DISPLAY
(SCHEMATIC FIGURE 6.21)
+5V
GND
RATIO → (J201-B14)
FILTER → (J201-B15)
AC → (J201-B18)
Ω → (J201-B17)
DC → (J201-B16)
DC/MV → (J201-B13)
J3
P3
PROGRAM
(SCHEMATIC FIGURE 6.23)
REMOTE ENABLE
PGM1
COUNTER RESET
AUTO
R1
REMOTE
Q2 O/F
PGM3
M27 7410
M18 7402
UPRANGE
DOWNRANGE
K3 X100 RELAY
K2 RATIO RELAY
K1 X10 RELAY
CR1 018
CR2 018
CR3 018
Q1 2N3646
Q2 2N3646
Q3 2N3646
Q4 2N3646
Q5 2N3646
R3 75
R4 75
OCI-2 (A)
OCI-1 (A)
250000
X100 REL. DR.
RATIO RELAY DRIVE
X10 RELAY DRIVE
100/1K RELAY DRIVE
FILTER RELAY DRIVE

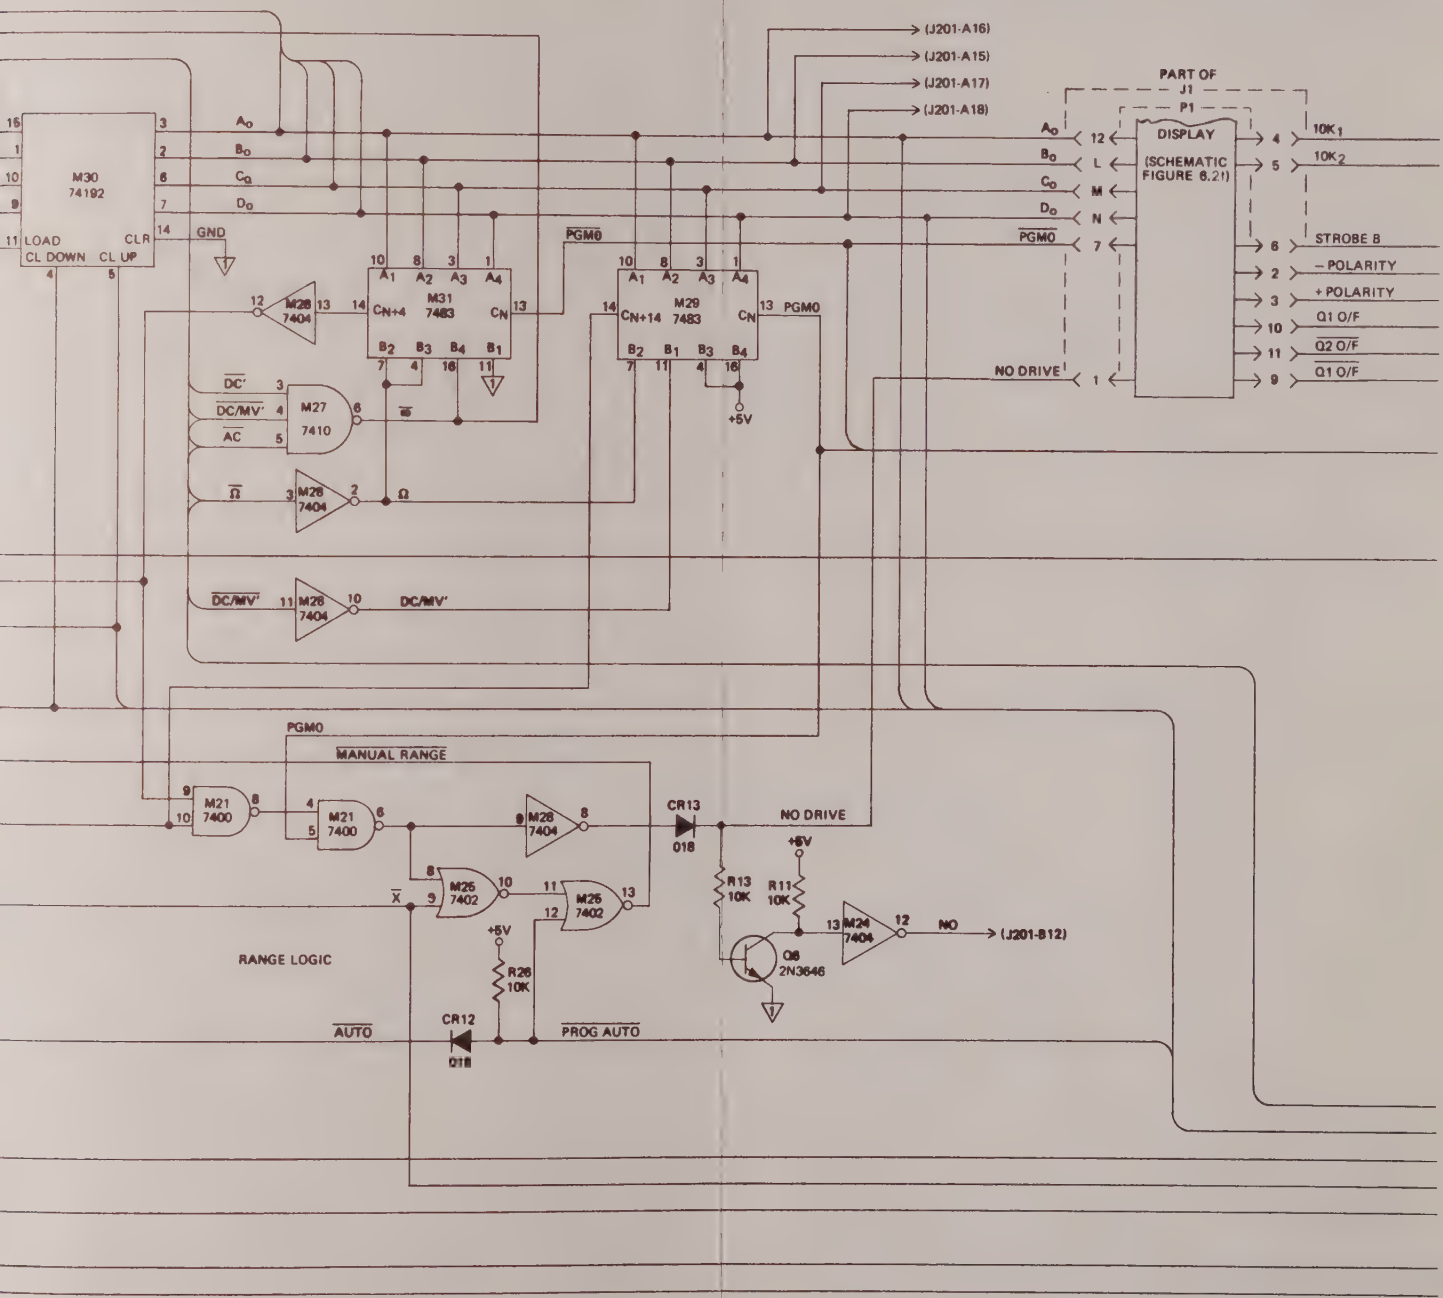

Figure 6.1 - Schematic, Interconnection & Logic

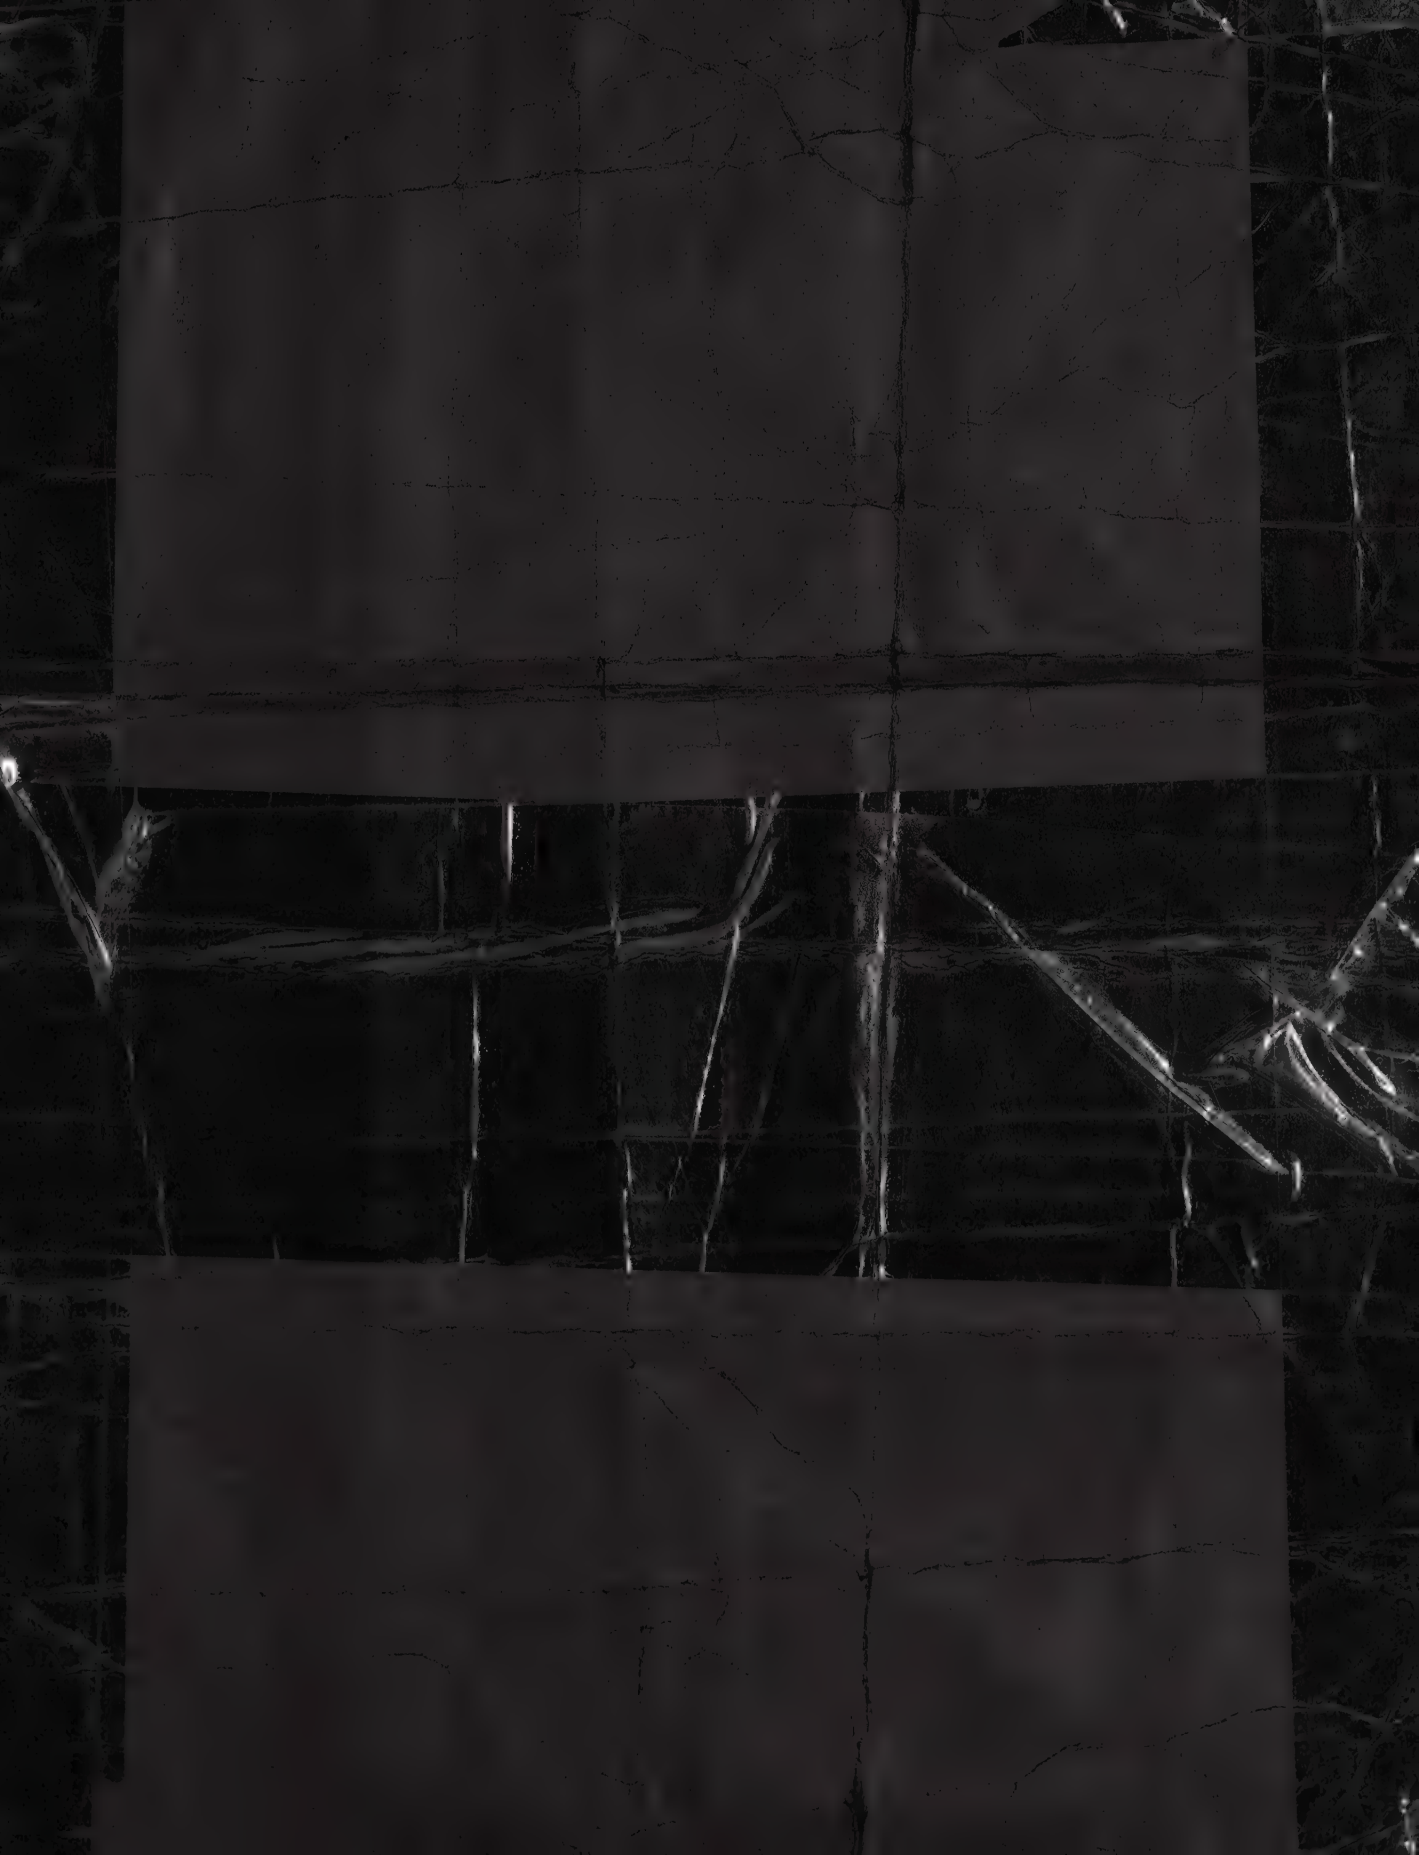

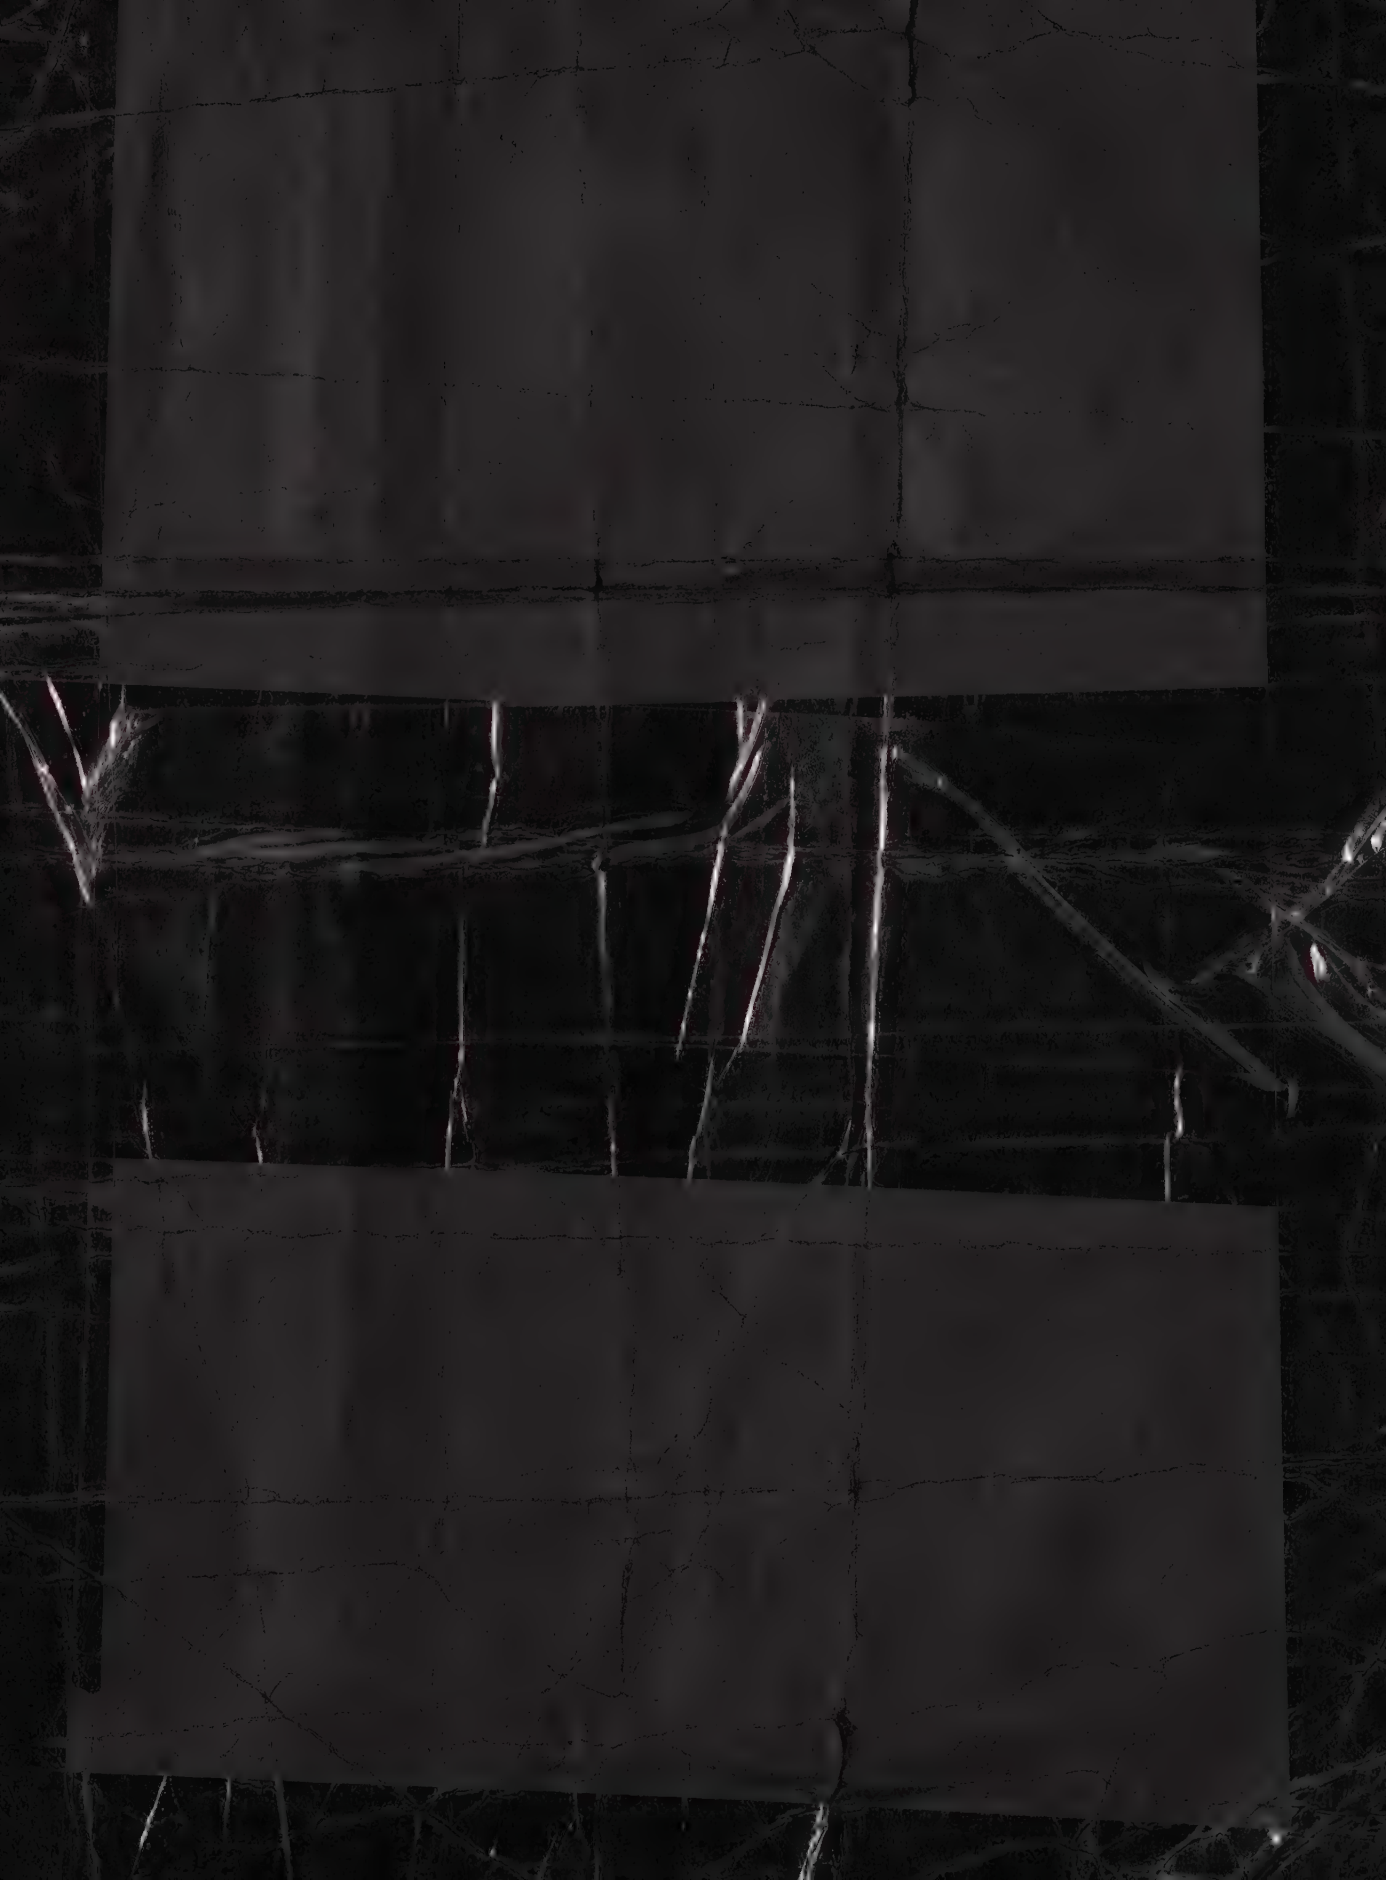

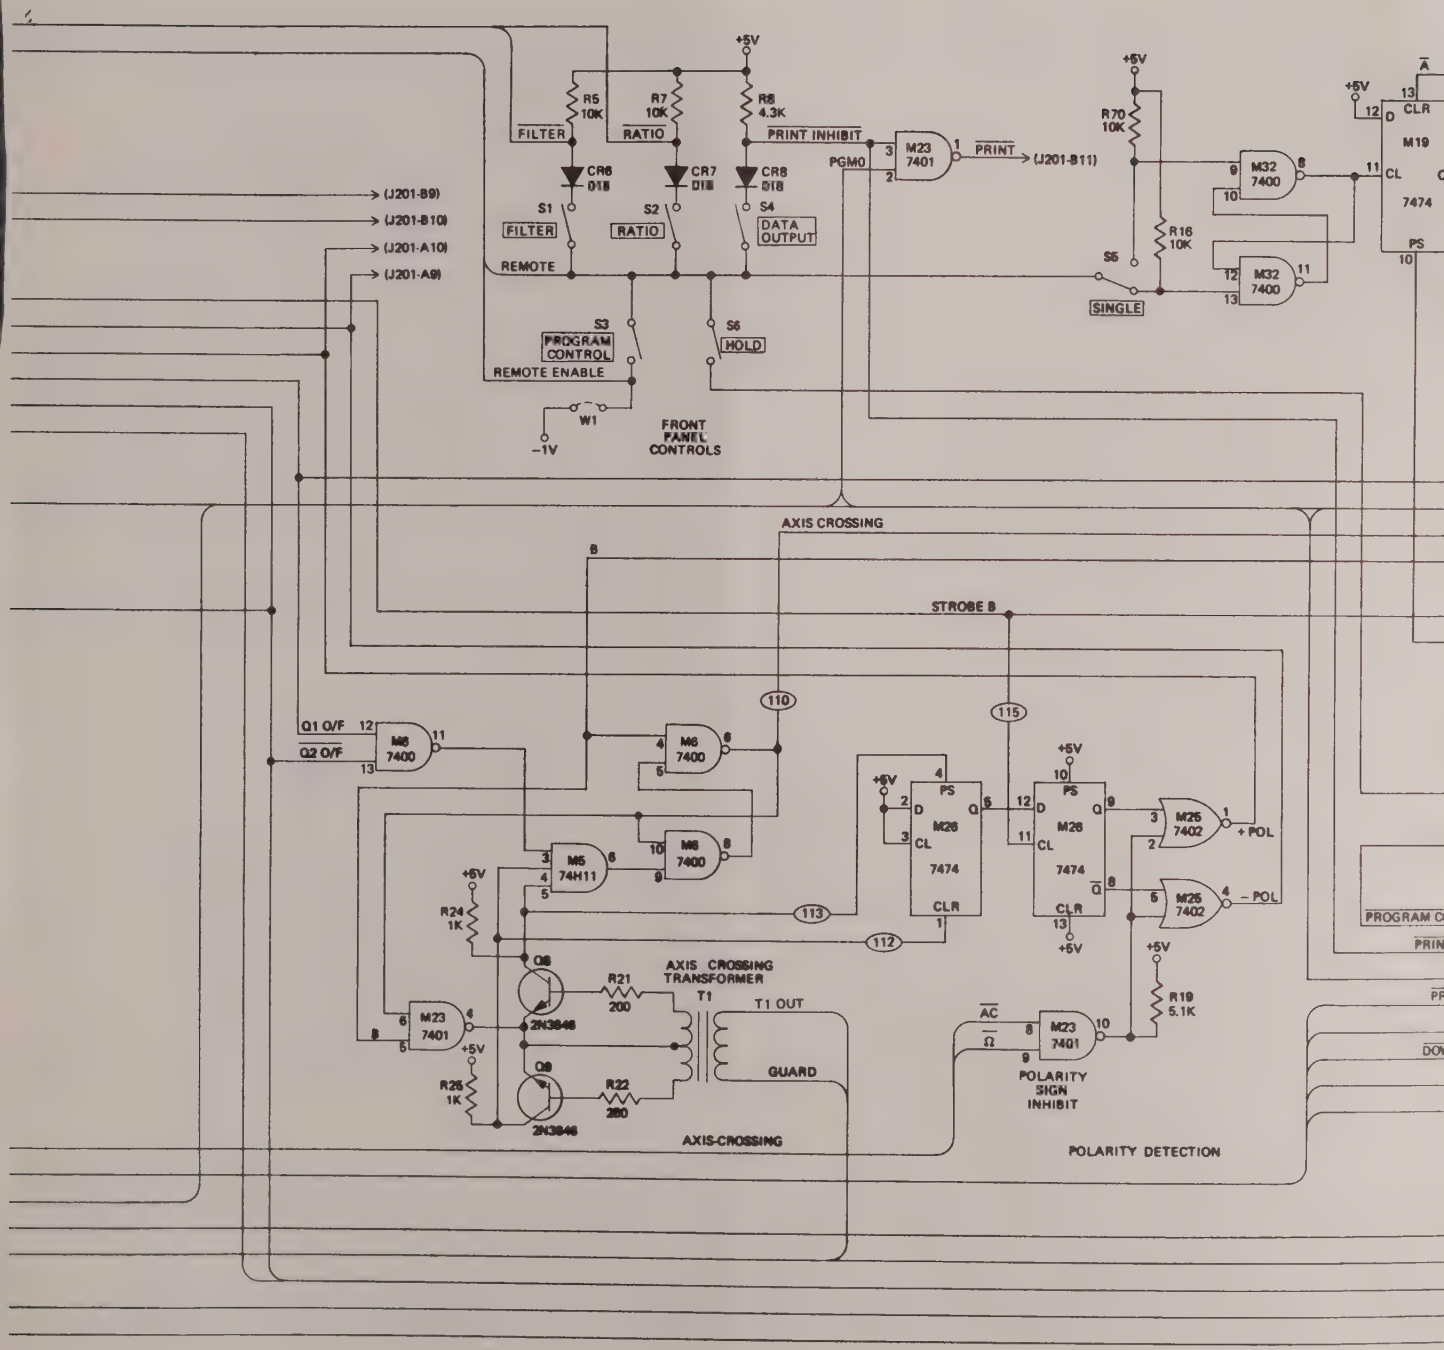
+5V
R5 10K
R7 10K
R8 4.3K
FILTER
RATIO
PRINT INHIBIT
PGM0
M23 7401
PRINT
(J201-B11)
CR6 D18
CR7 D18
CR8 D18
S1
S2
S4
DATA OUTPUT
(J201-B9)
(J201-B10)
(J201-A10)
(J201-A9)
REMOTE
S3
PROGRAM CONTROL
REMOTE ENABLE
S6
HOLD
W1
-1V
FRONT PANEL CONTROLS
R70 10K
R16 10K
S5
SINGLE
M32 7400
M19
7474
AXIS CROSSING
STROBE B
110
115
Q1 O/F
Q2 O/F
M6 7400
M5 74H11
R24 1K
113
112
Q8
Q9
2N3646
R21 200
R22 280
AXIS CROSSING TRANSFORMER
T1
T1 OUT
GUARD
AXIS-CROSSING
M26 7474
M25 7402
+ POL
- POL
R19 5.1K
AC
Ω
POLARITY SIGN INHIBIT
POLARITY DETECTION

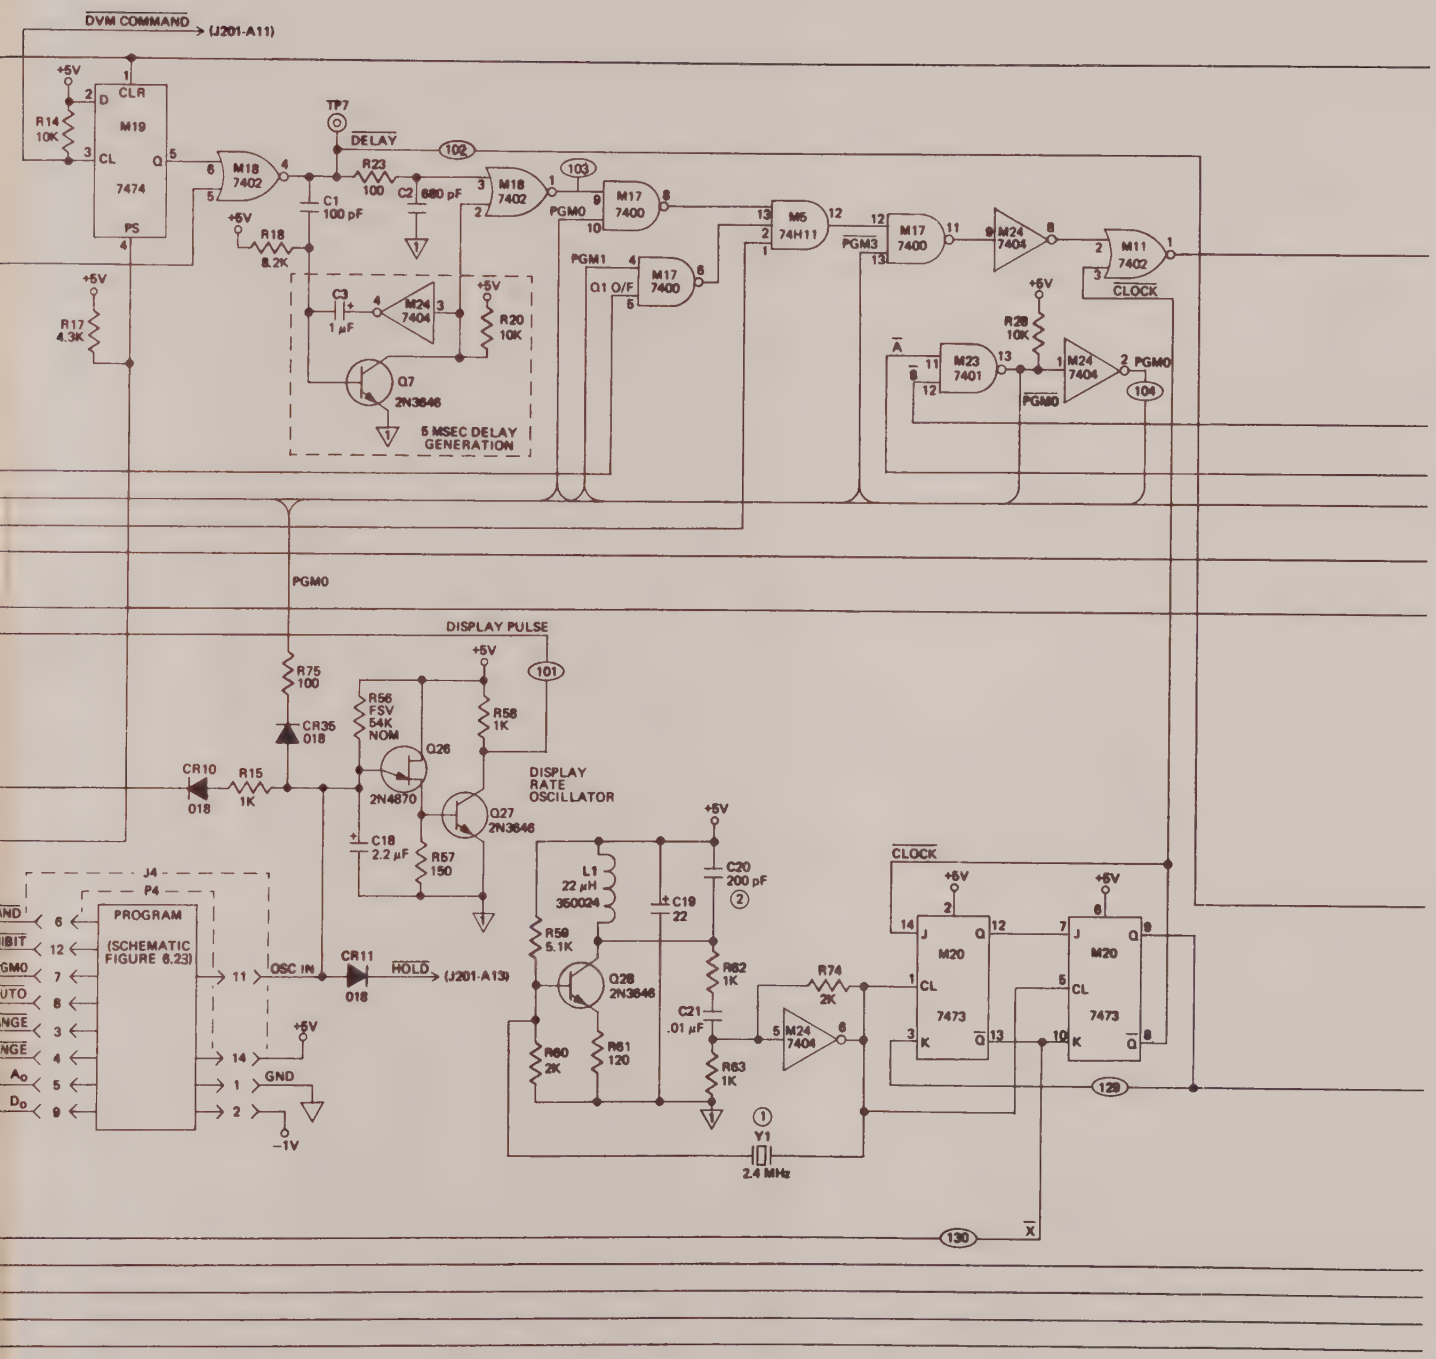
DVM COMMAND → (J201-A11)
+5V
R14 10K
CLR
M19
CL
Q
PS
7474
TP7
DELAY
102
M18 7402
R23 100
C2 680 pF
C1 100 pF
R18 8.2K
103
M18 7402
M17 7400
PGM0
PGM1
Q1 O/F
M17 7400
M5 74H11
PGM3
M17 7400
M24 7404
M11 7402
CLOCK
R17 4.3K
C3 1 µF
M24 7404
R20 10K
Q7 2N3646
5 MSEC DELAY GENERATION
A
M23 7401
R28 10K
M24 7404
PGM0
104
PGM0
DISPLAY PULSE
101
R75 100
CR35 018
R56 FSV 54K NOM
R58 1K
Q26 2N4870
CR10 018
R15 1K
DISPLAY RATE OSCILLATOR
Q27 2N3646
C18 2.2 µF
R57 150
J4
P4
PROGRAM
(SCHEMATIC FIGURE 6.23)
OSC IN
CR11 018
HOLD → (J201-A13)
GND
-1V
L1 22 µH 350024
C19 22
C20 200 pF
R59 5.1K
Q28 2N3646
R62 1K
C21 .01 µF
R63 1K
R60 2K
R61 120
R74 2K
M24 7404
CLOCK
M20 7473
M20 7473
128
Y1 2.4 MHz
130
X

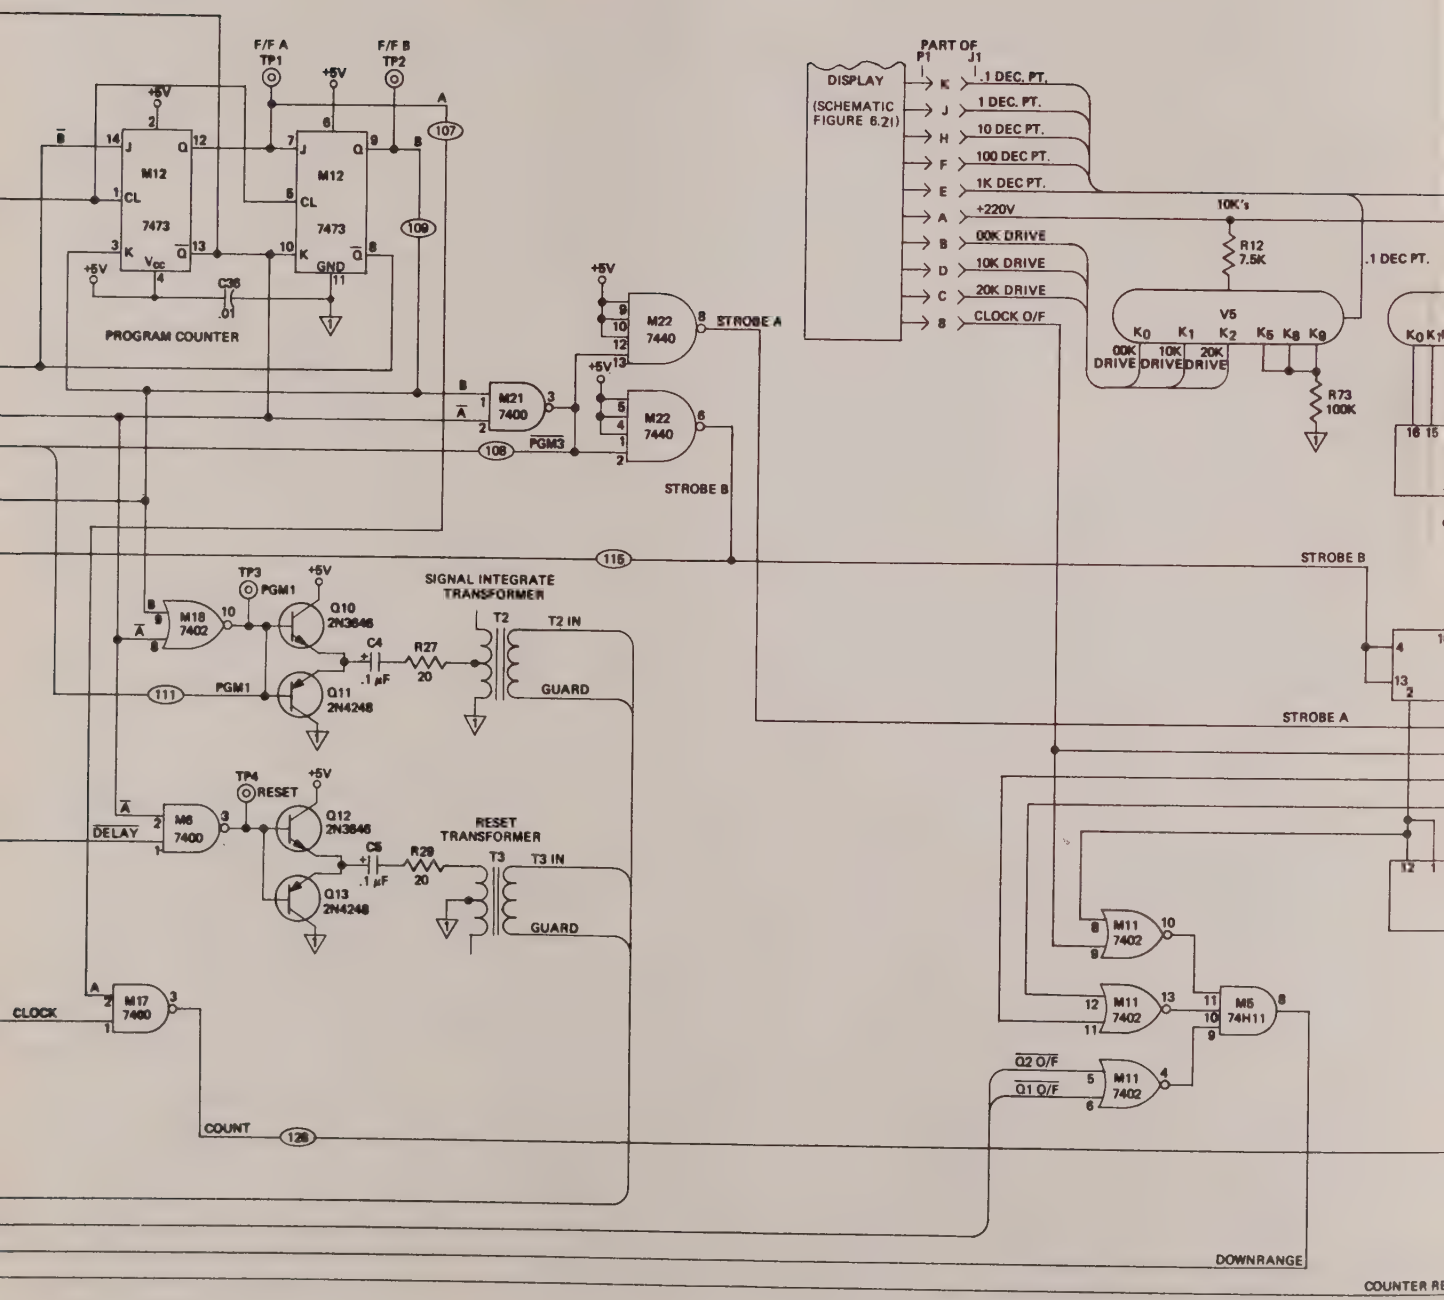
F/F A
TP1
F/F B
TP2
+5V
M12
7473
PROGRAM COUNTER
C36
.01
107
109
108
M21
7400
PGM3
M22
7440
STROBE A
STROBE B
116
PART OF
P1
J1
DISPLAY
(SCHEMATIC
FIGURE 6.21)
.1 DEC. PT.
1 DEC. PT.
10 DEC PT.
100 DEC PT.
1K DEC PT.
+220V
00K DRIVE
10K DRIVE
20K DRIVE
CLOCK O/F
10K's
R12
7.5K
V5
R73
100K
TP3
PGM1
M18
7402
Q10
2N3646
Q11
2N4248
C4
.1 μF
R27
20
SIGNAL INTEGRATE
TRANSFORMER
T2
T2 IN
GUARD
111
TP4
RESET
M6
7400
DELAY
Q12
2N3646
Q13
2N4248
C5
R29
RESET
TRANSFORMER
T3
T3 IN
M17
7400
CLOCK
COUNT
126
M11
7402
M5
74H11
Q2 O/F
Q1 O/F
DOWNRANGE

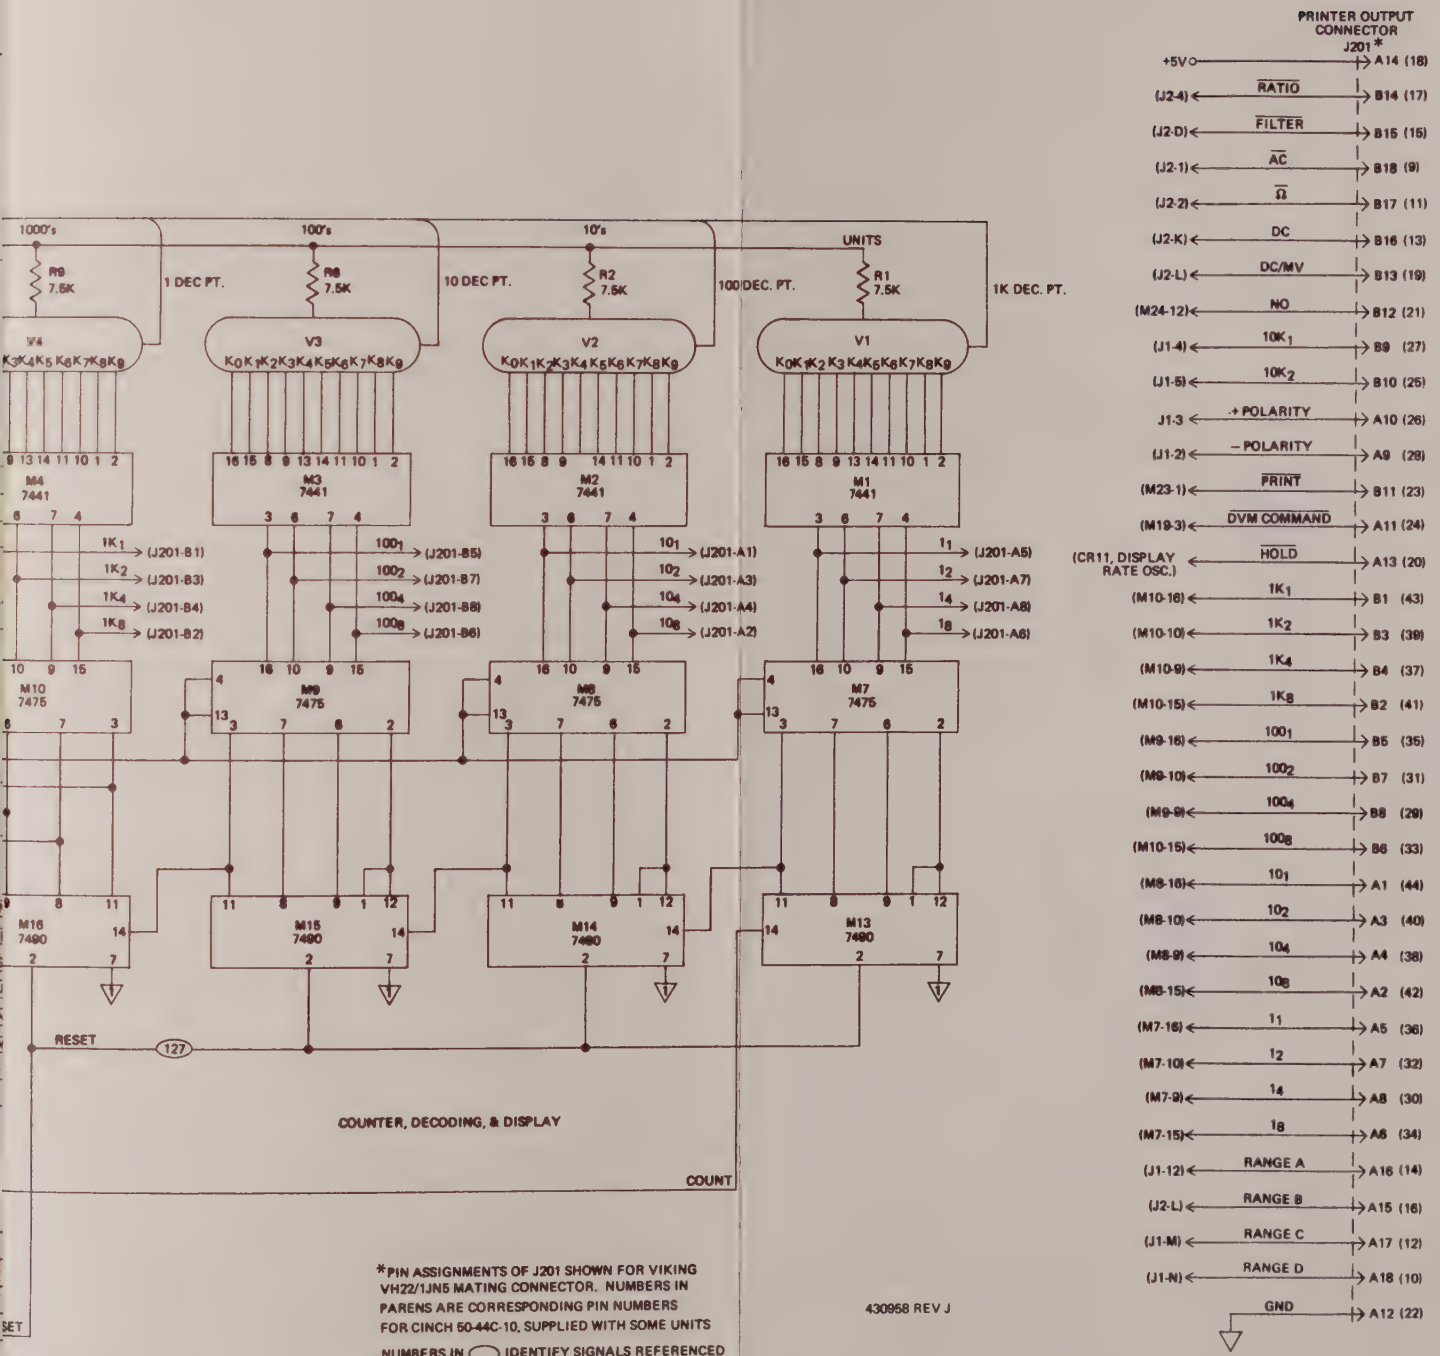

*PIN ASSIGNMENTS OF J201 SHOWN FOR VIKING VH22/1JN5 MATING CONNECTOR. NUMBERS IN PARENS ARE CORRESPONDING PIN NUMBERS FOR CINCH 50-44C-10, SUPPLIED WITH SOME UNITS

NUMBERS IN ◯ IDENTIFY SIGNALS REFERENCED IN THE TROUBLESHOOTING CHARTS AND TIMING DIAGRAM (SECTION 5).

(1) ON 50 Hz INSTRUMENTS, 2.4 MHz CRYSTAL Y1 IS REPLACED WITH 2 MHz CRYSTAL.

(2) ON 50 Hz INSTRUMENTS, C20 (200 pF) IS REPLACED WITH 270 pF CAPACITOR.

430958 REV J

Figure 6.1 - Schematic, Interconnection & Logic continued

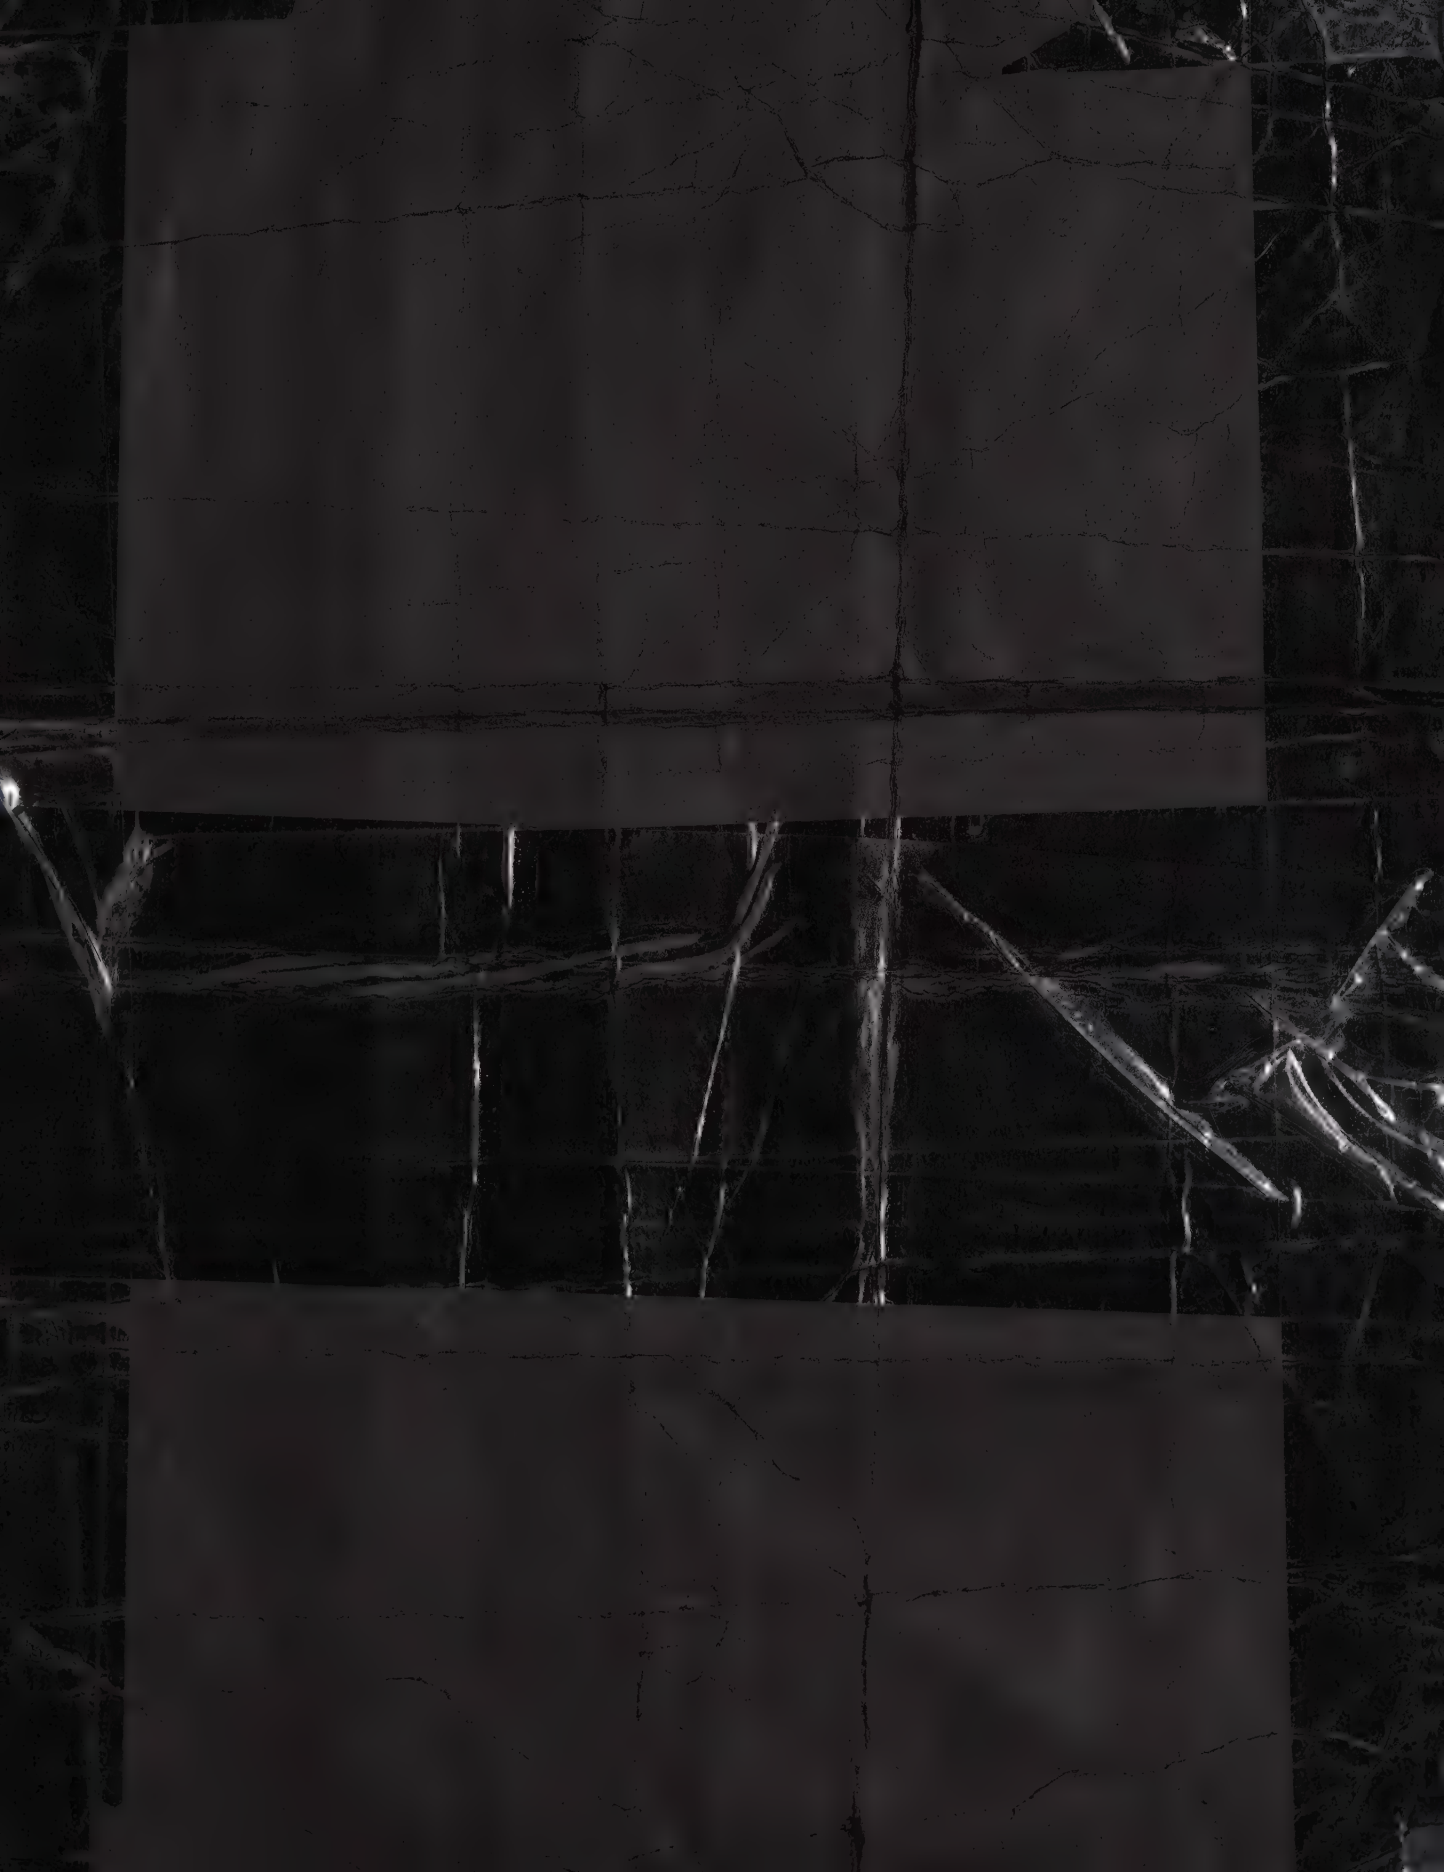

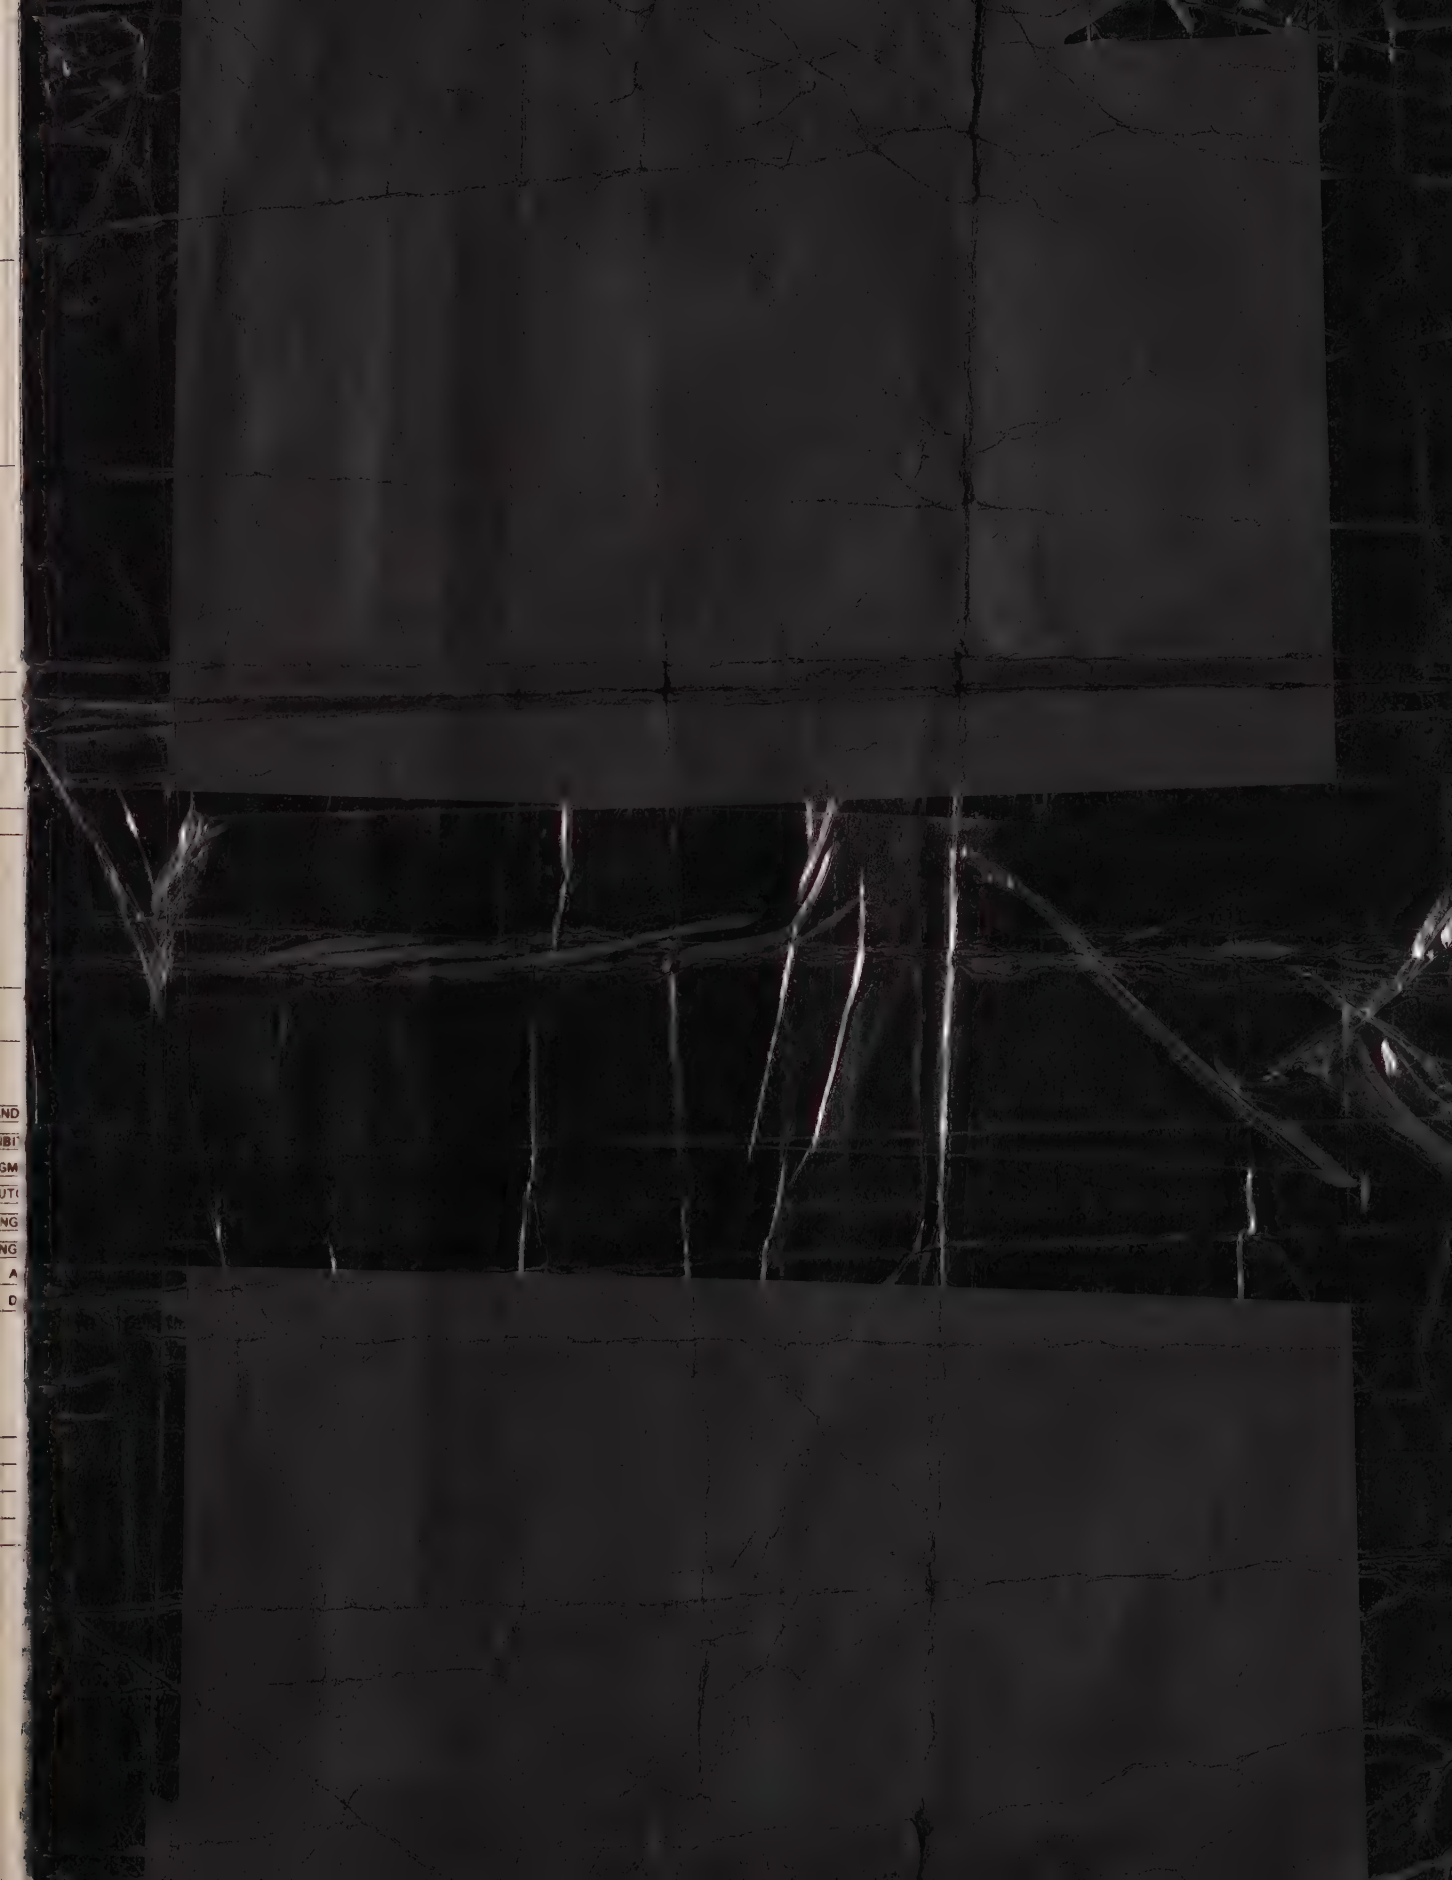

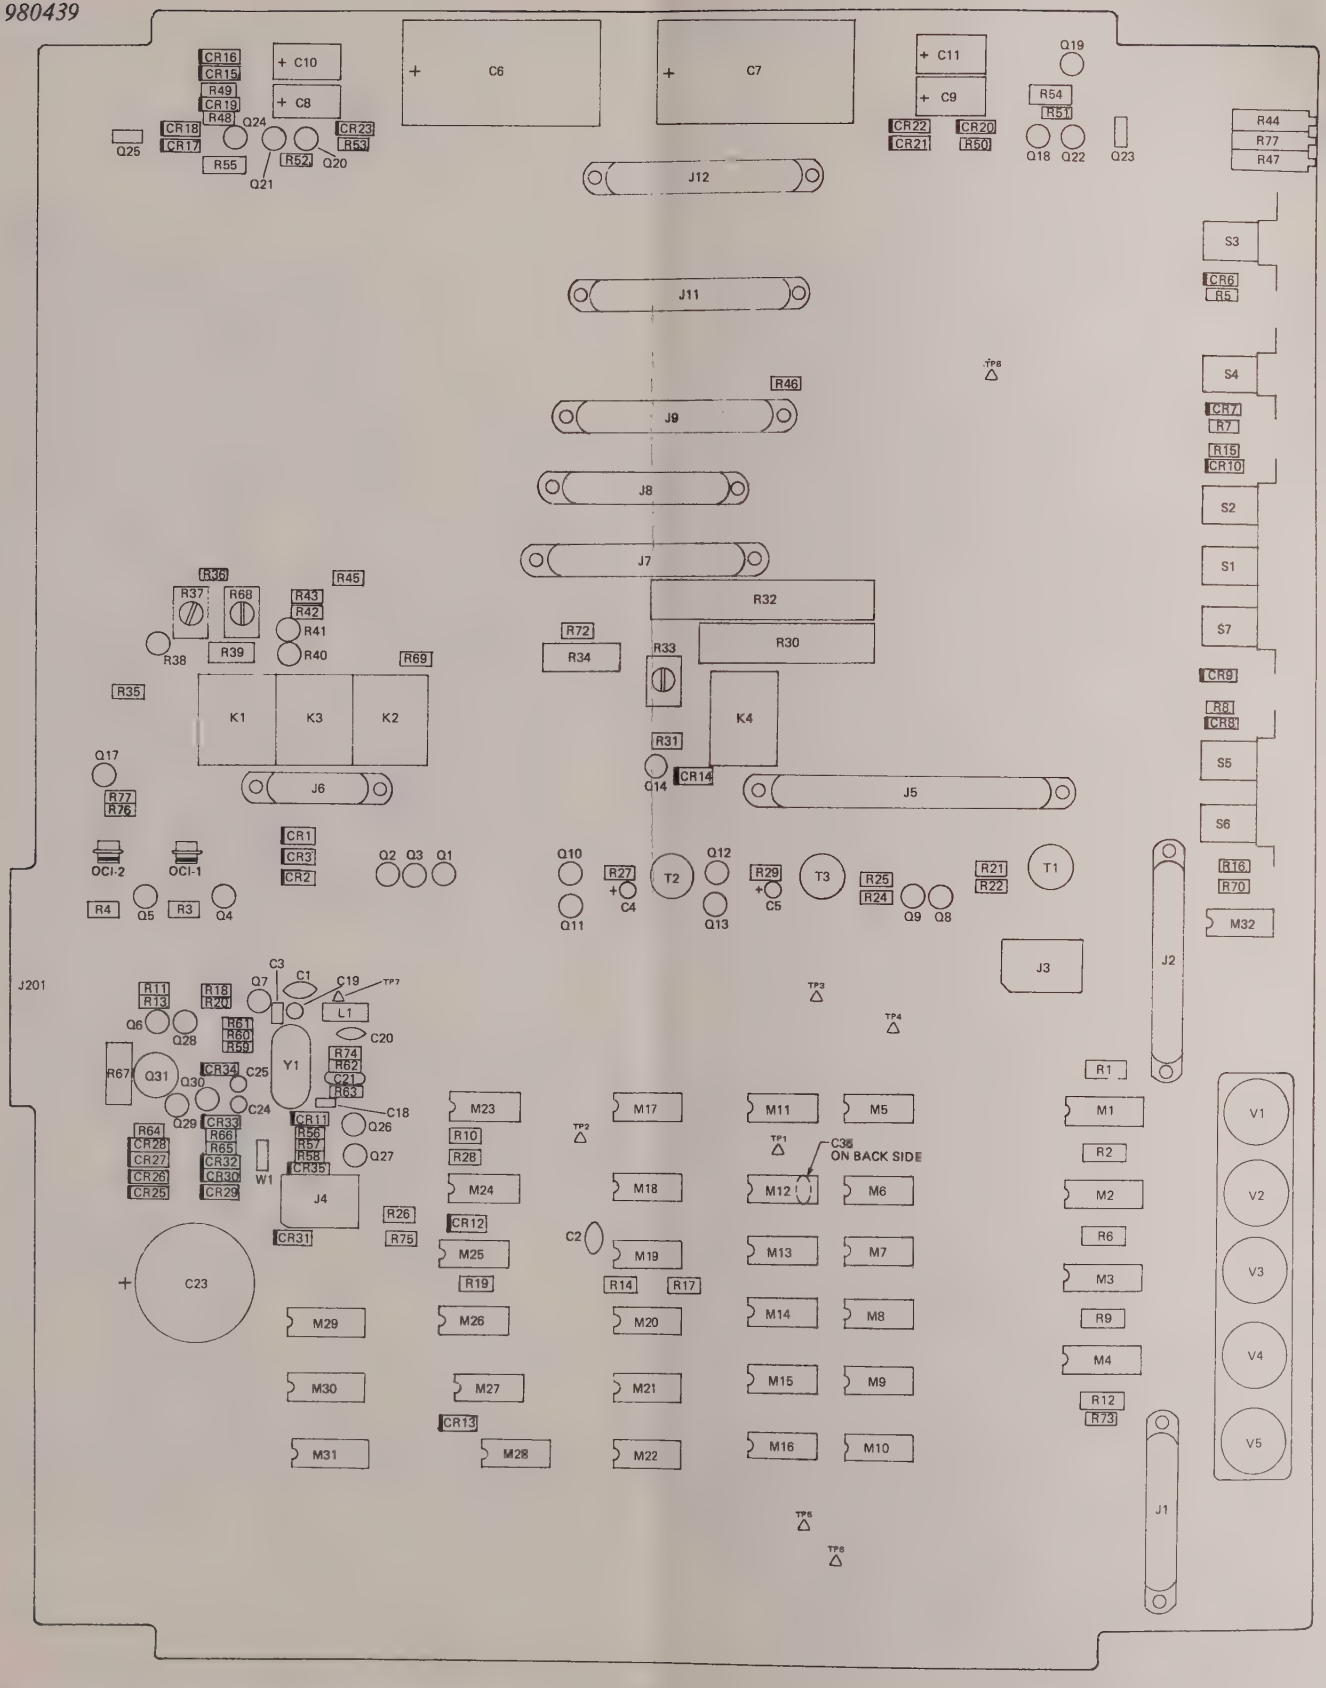

Figure 6.2 - Layout, Interconnection and Logic

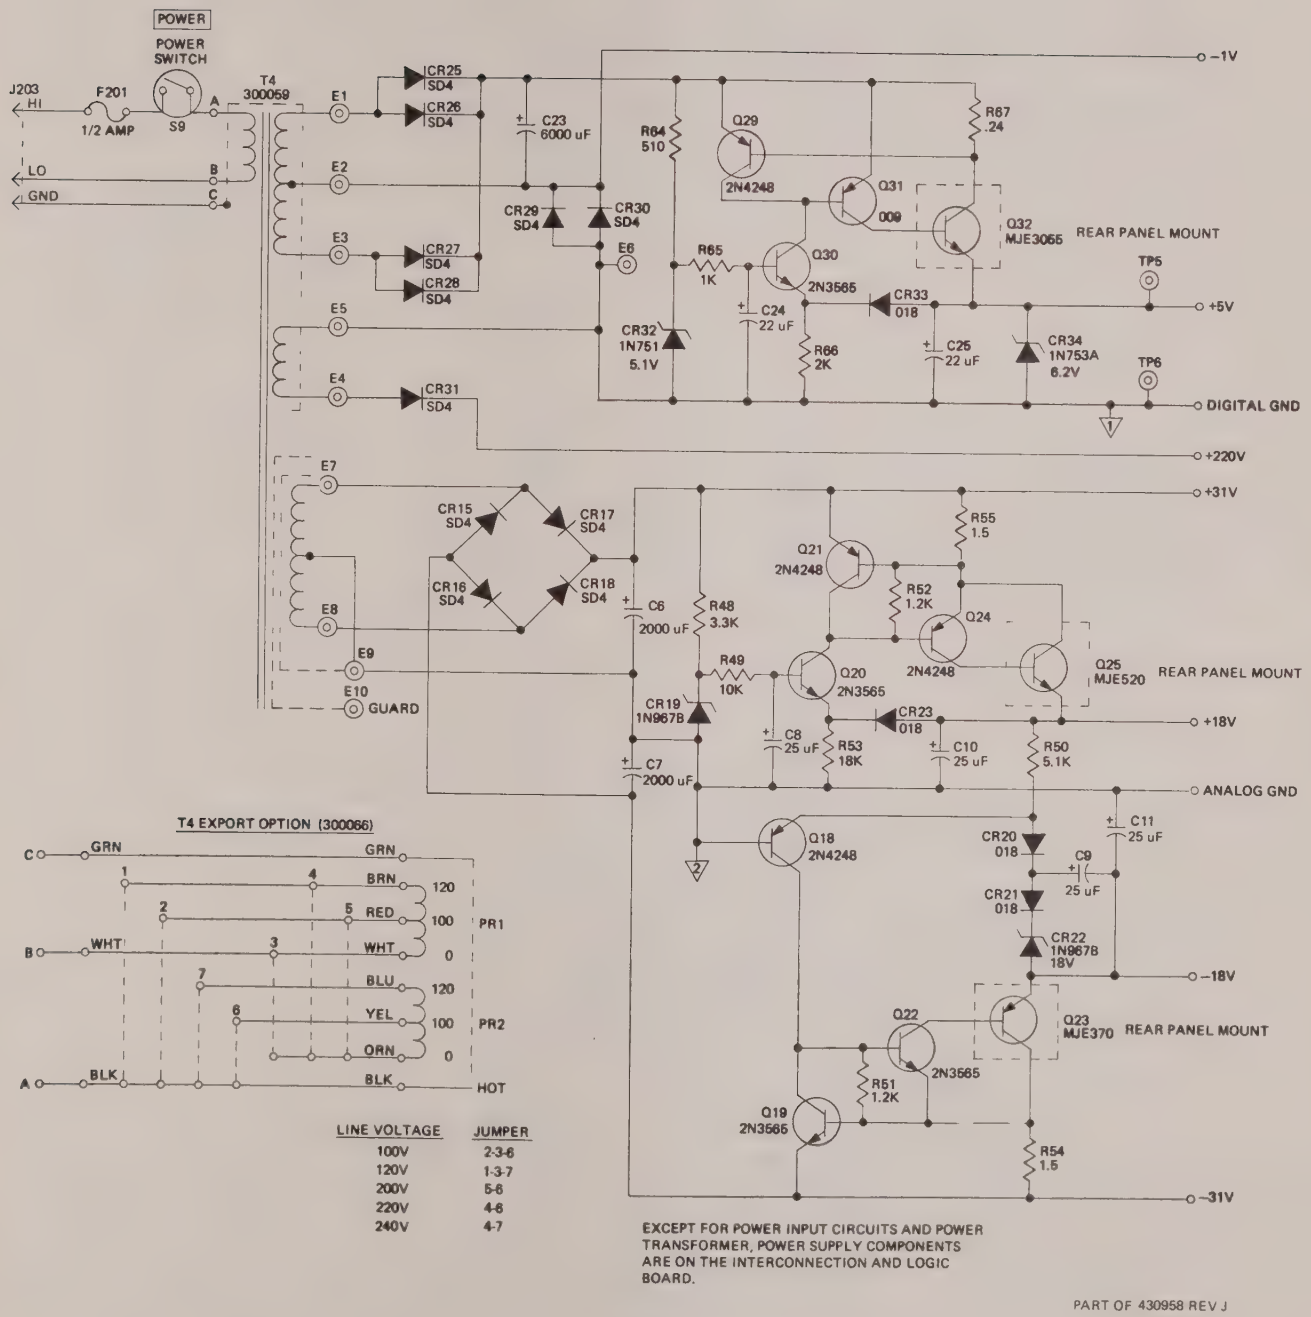

Figure 6.3 - Schematic, Power Supply

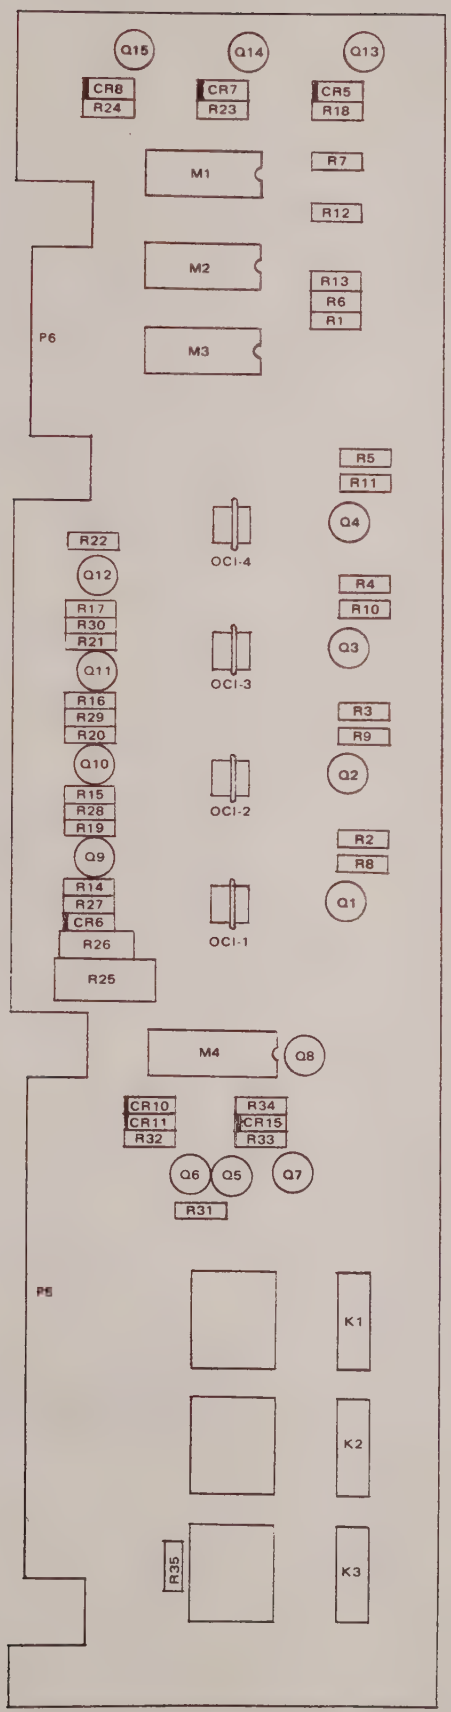

ASSY 403431 REV N

Figure 6.4 - Layout, Switching

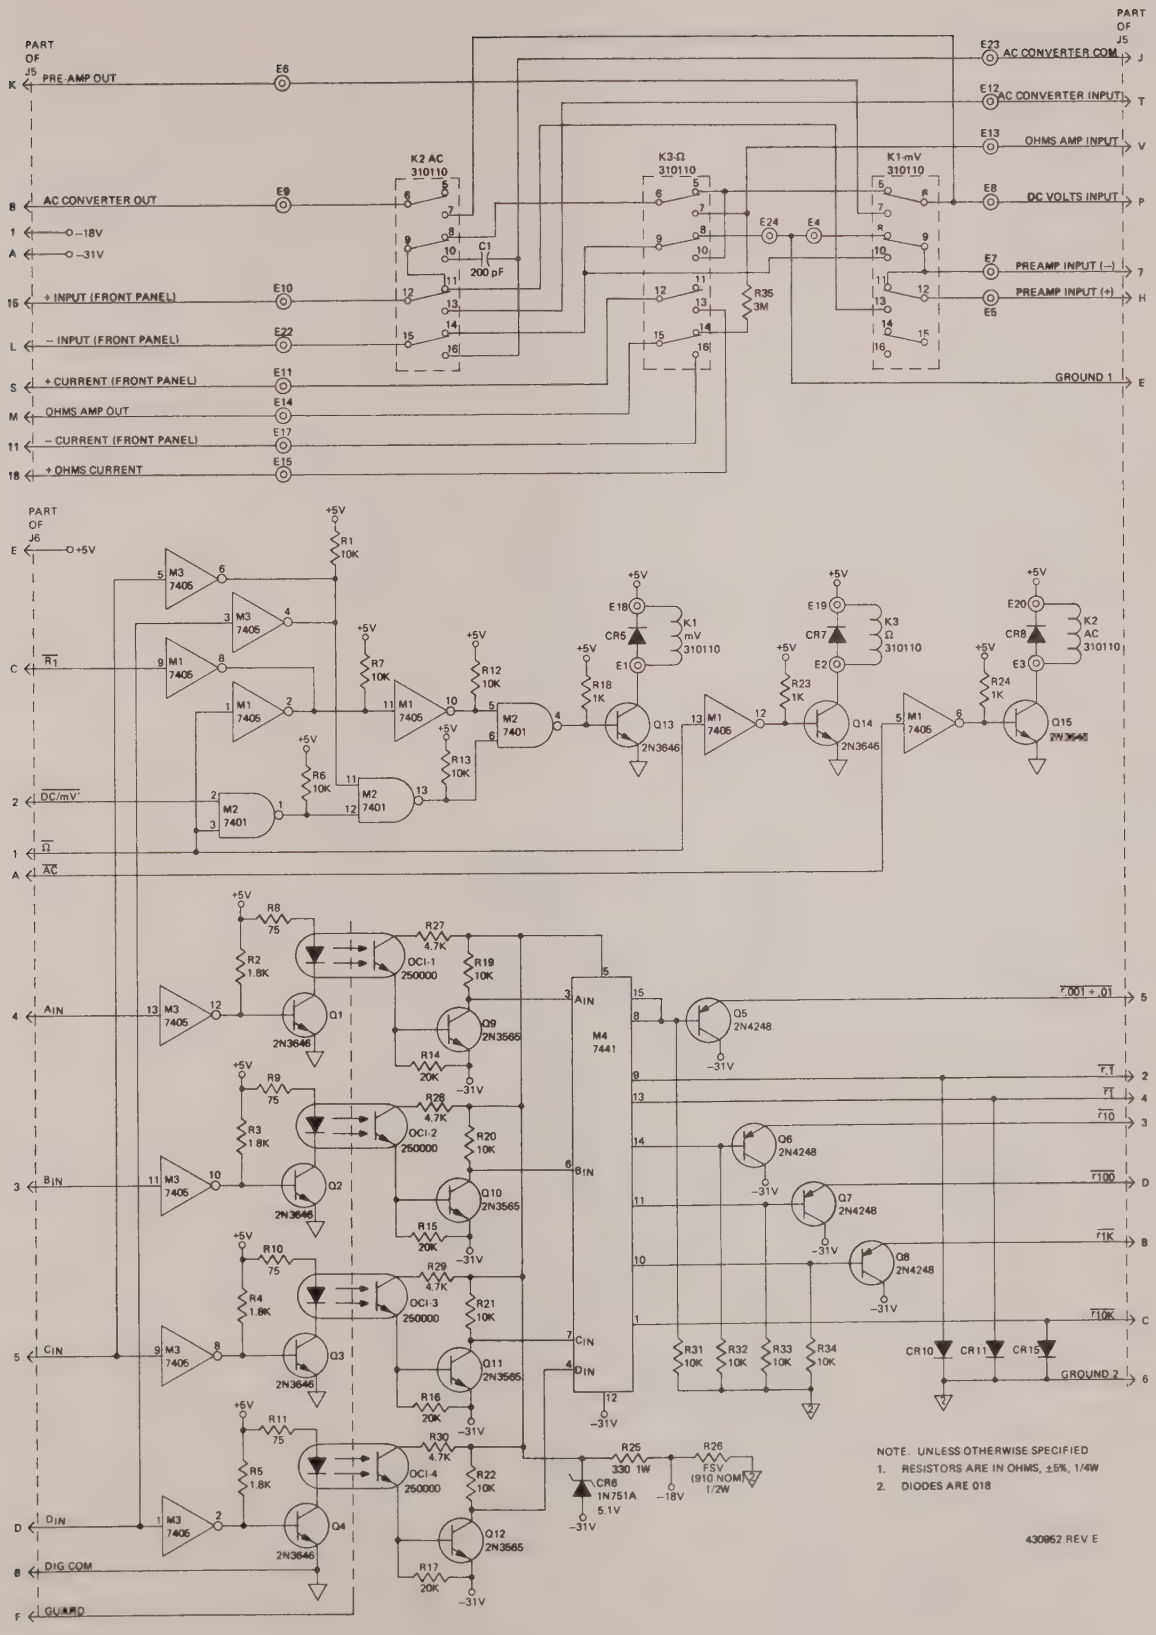

Figure 6.5 - Schematic, Switching

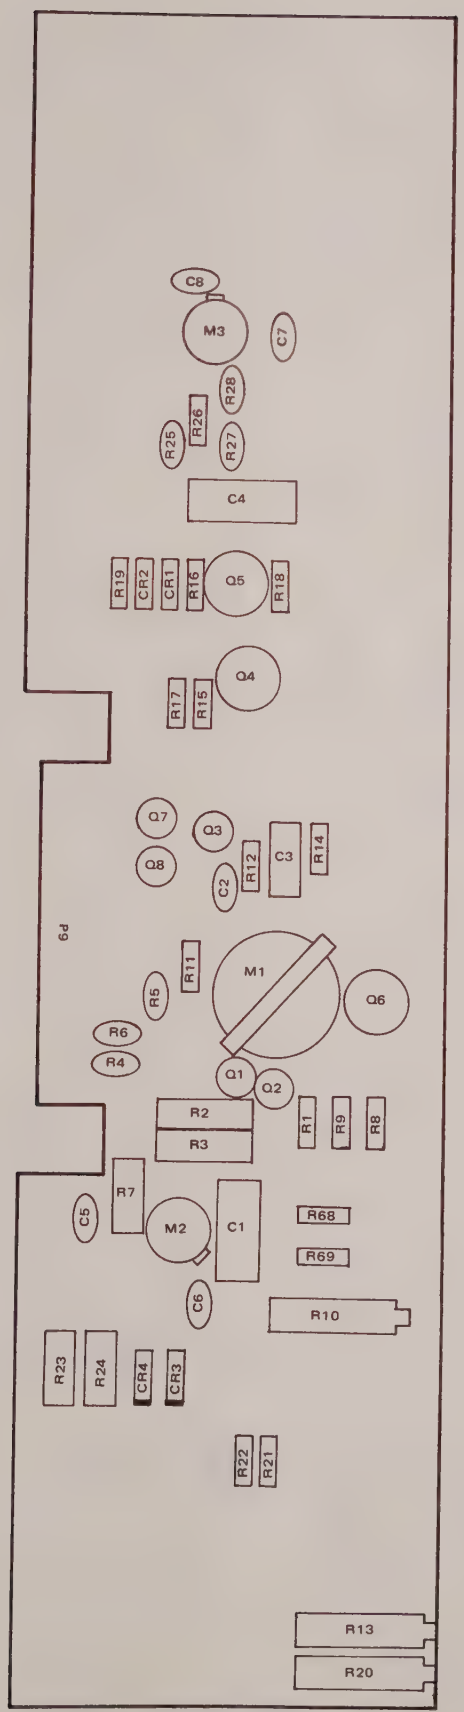

ASSY 403464 REV E

Figure 6.6 - Layout, Preamp (mV)

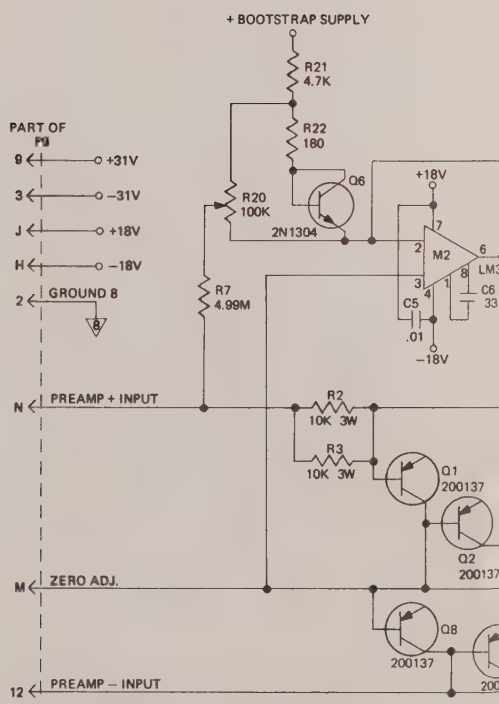
+ BOOTSTRAP SUPPLY
R21
4.7K
R22
180
PART OF
P9
9
+31V
3
–31V
J
+18V
H
–18V
2
GROUND 8
R20
100K
Q6
2N1304
+18V
R7
4.99M
M2
C5
.01
–18V
N
PREAMP + INPUT
R2
10K 3W
R3
10K 3W
Q1
200137
Q2
200137
M
ZERO ADJ.
Q8
200137
12
PREAMP – INPUT

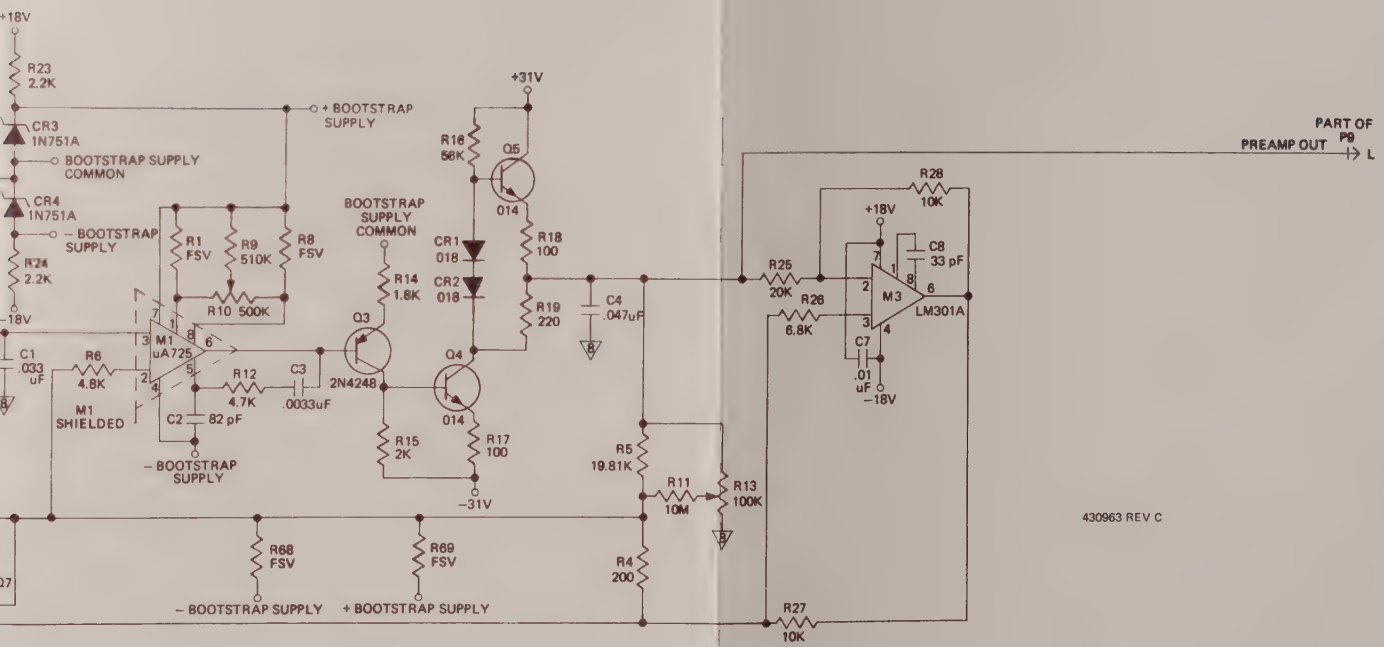

Figure 6.7 - Schematic, Preamp (mV)

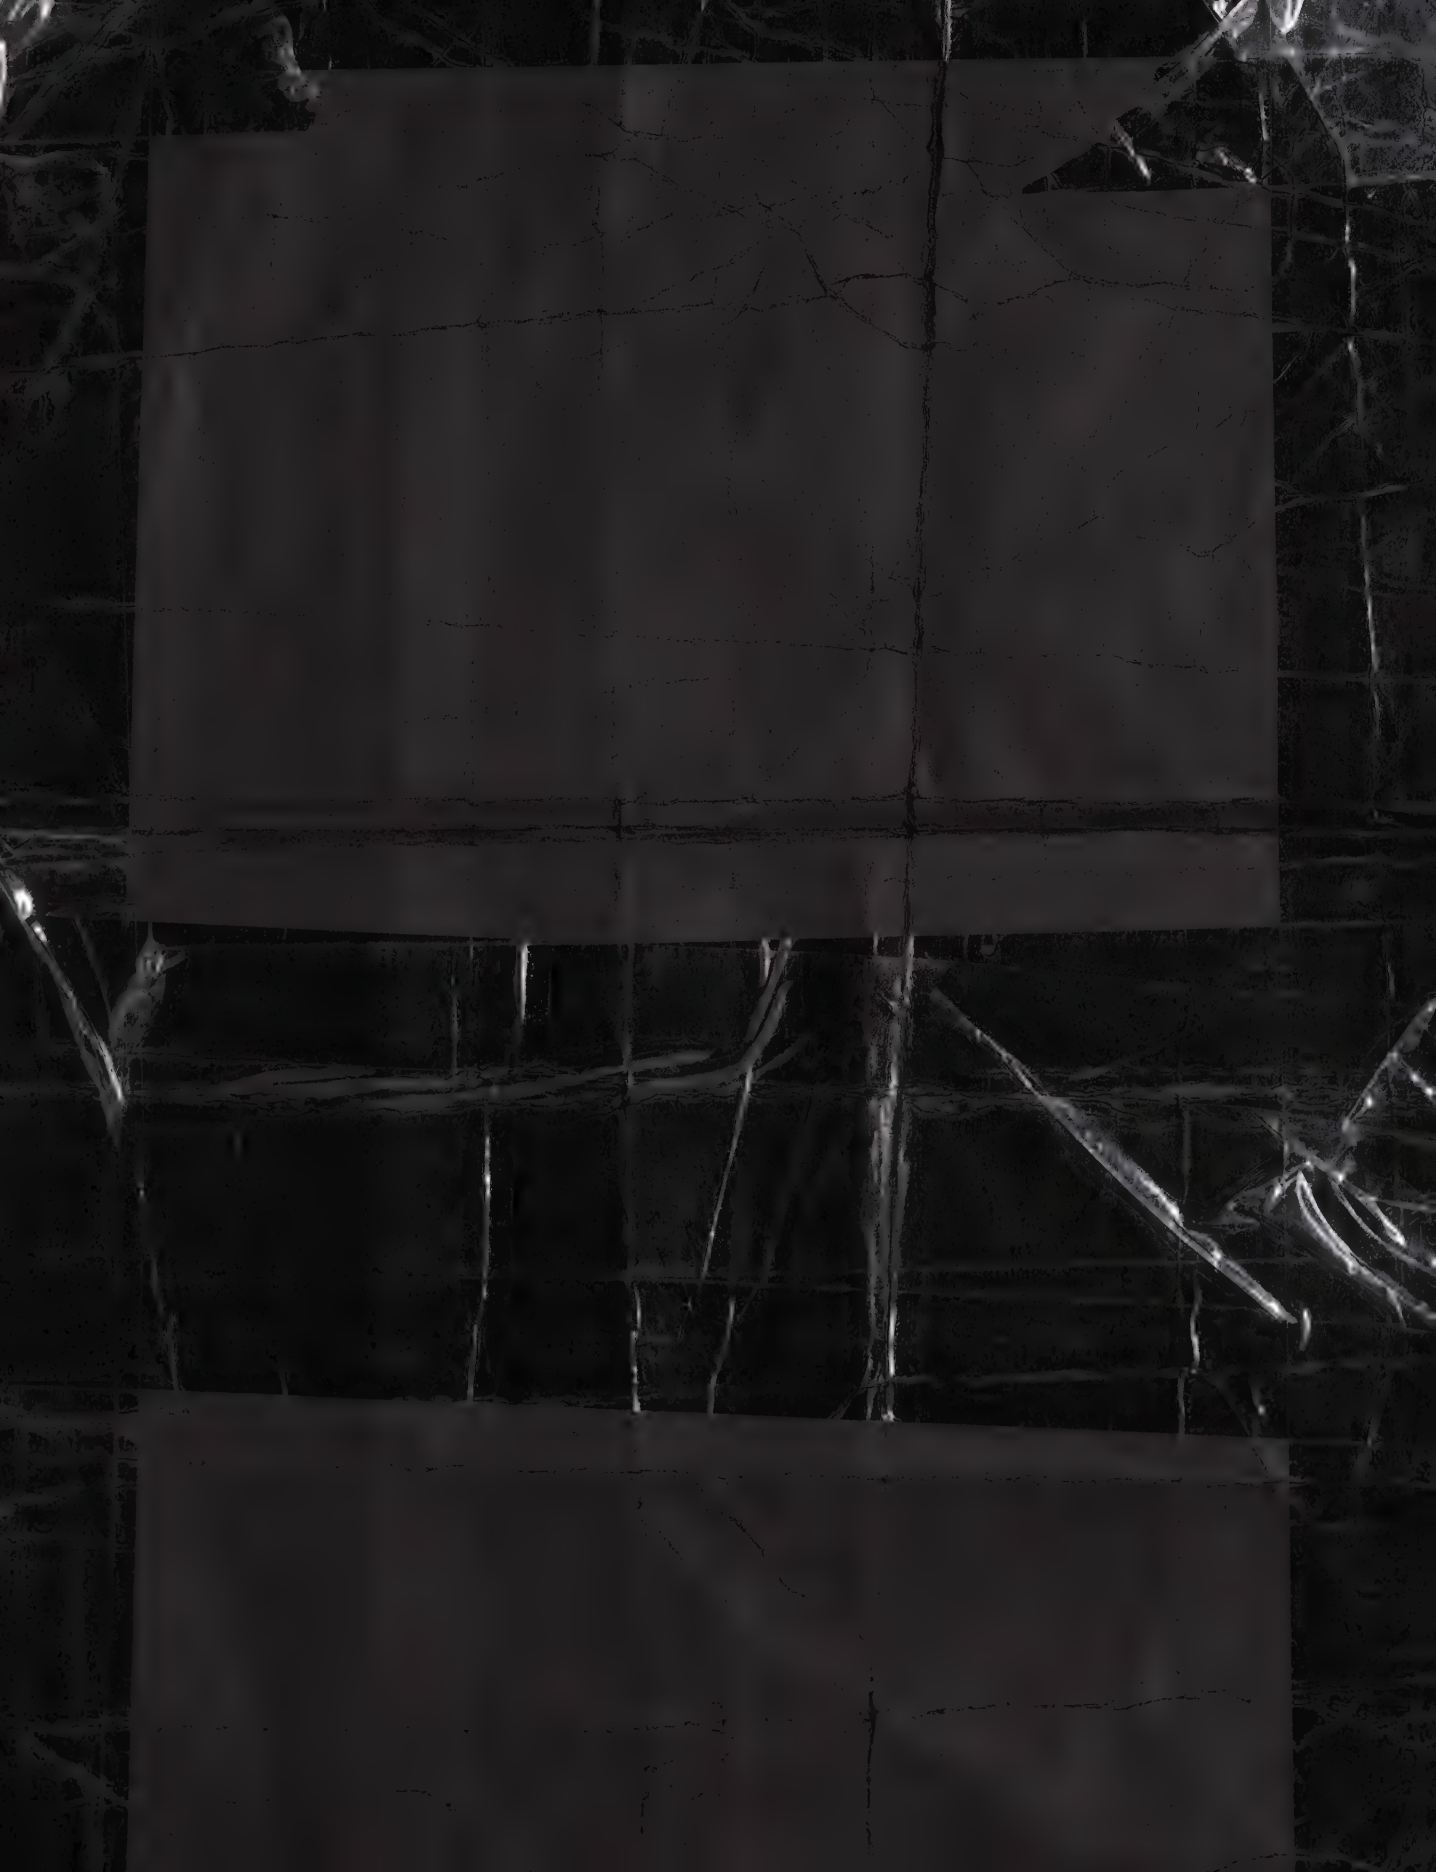

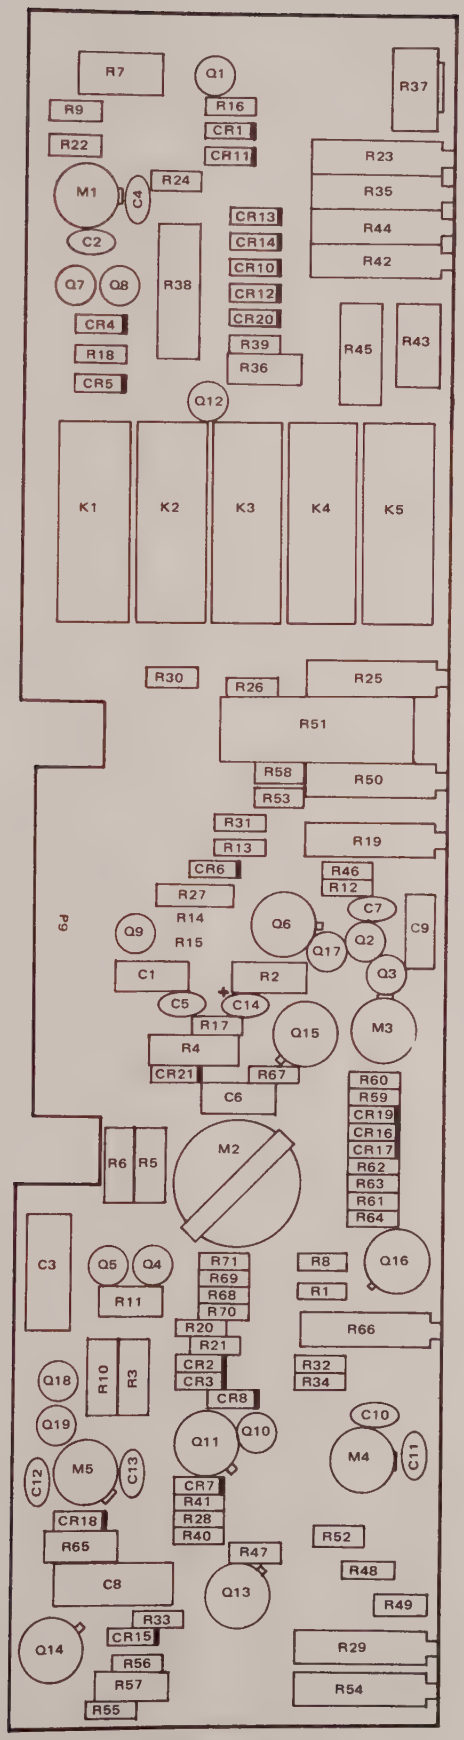

ASSY 403435 REV U

Figure 6.8 - Layout, Preamp/Ohms Converter

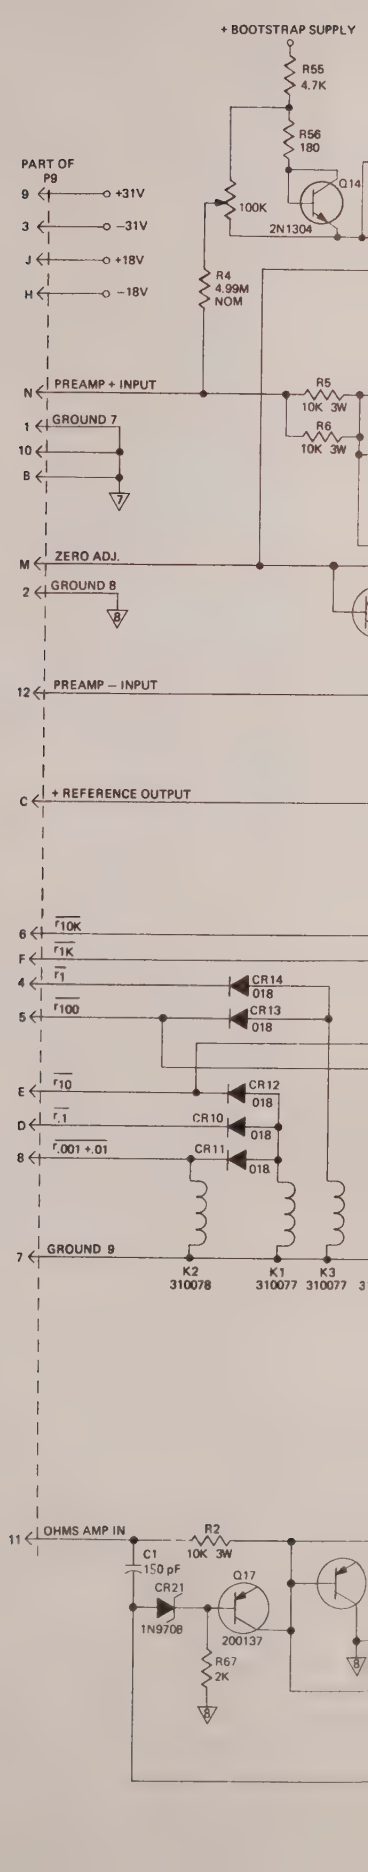
+ BOOTSTRAP SUPPLY
R55
4.7K
R56
180
Q14
PART OF
P9
9 +31V
3 −31V
J +18V
H −18V
100K
2N1304
R4
4.99M
NOM
N PREAMP + INPUT
R5
10K 3W
R6
10K 3W
1 GROUND 7
10
B
M ZERO ADJ.
2 GROUND 8
12 PREAMP − INPUT
C + REFERENCE OUTPUT
6 r10K
F r1K
4 r1
5 r100
CR14
018
CR13
018
E r10
D r.1
8 r.001 +.01
CR12
018
CR10
018
CR11
018
7 GROUND 9
K2
310078
K1
310077
K3
310077
11 OHMS AMP IN
R2
10K 3W
C1
150 pF
CR21
1N9708
Q17
200137
R67
2K

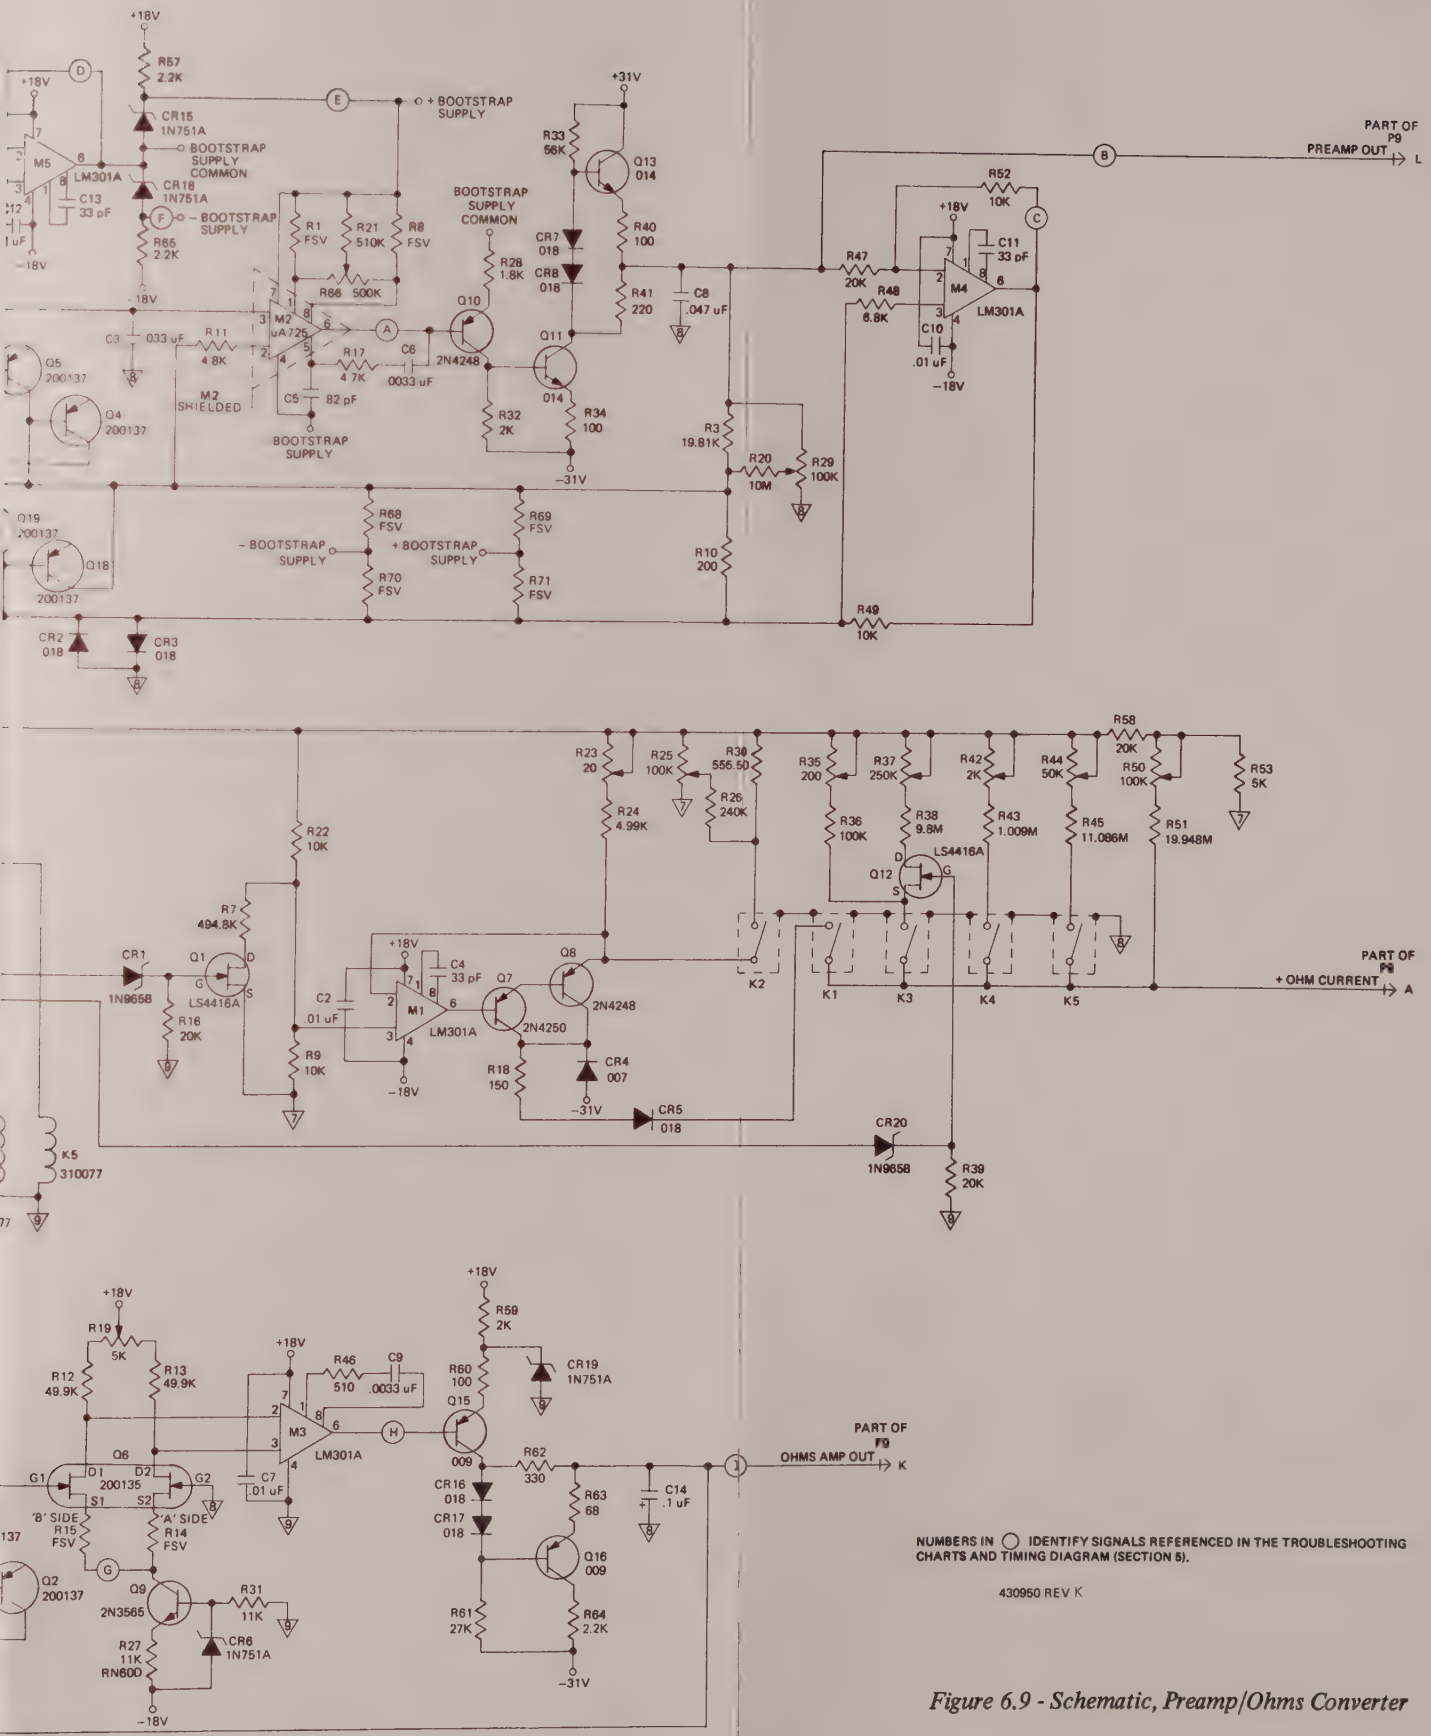

Figure 6.9 - Schematic, Preamp/Ohms Converter

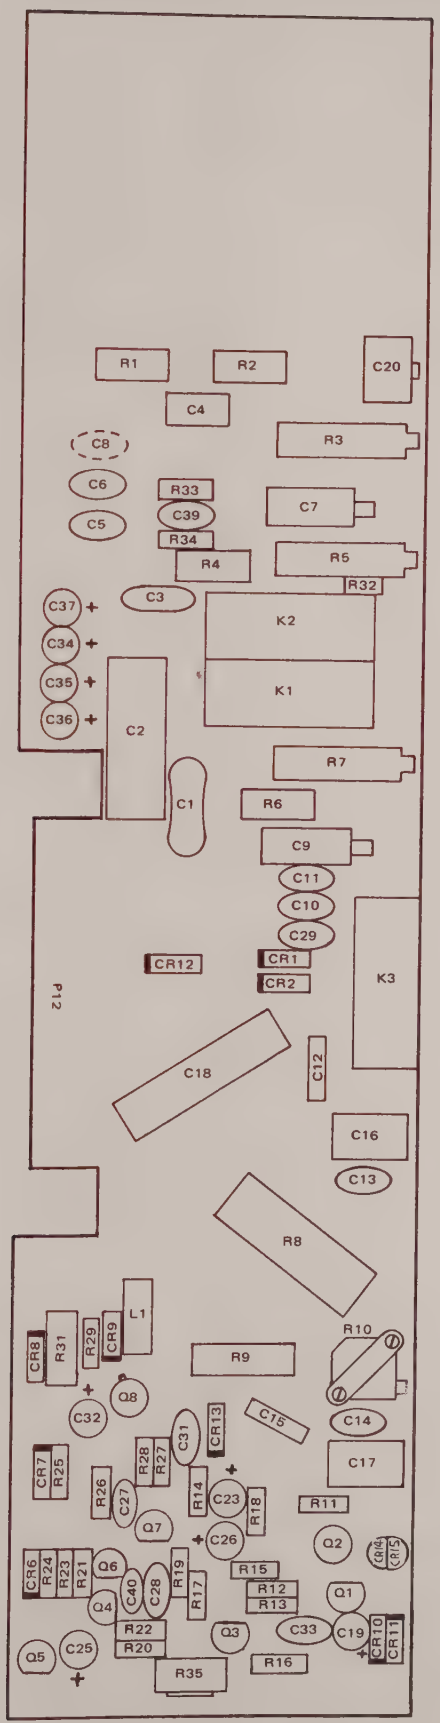

ASSY 403472 REV T

Figure 6.10 - Layout, Scaling Amplifier

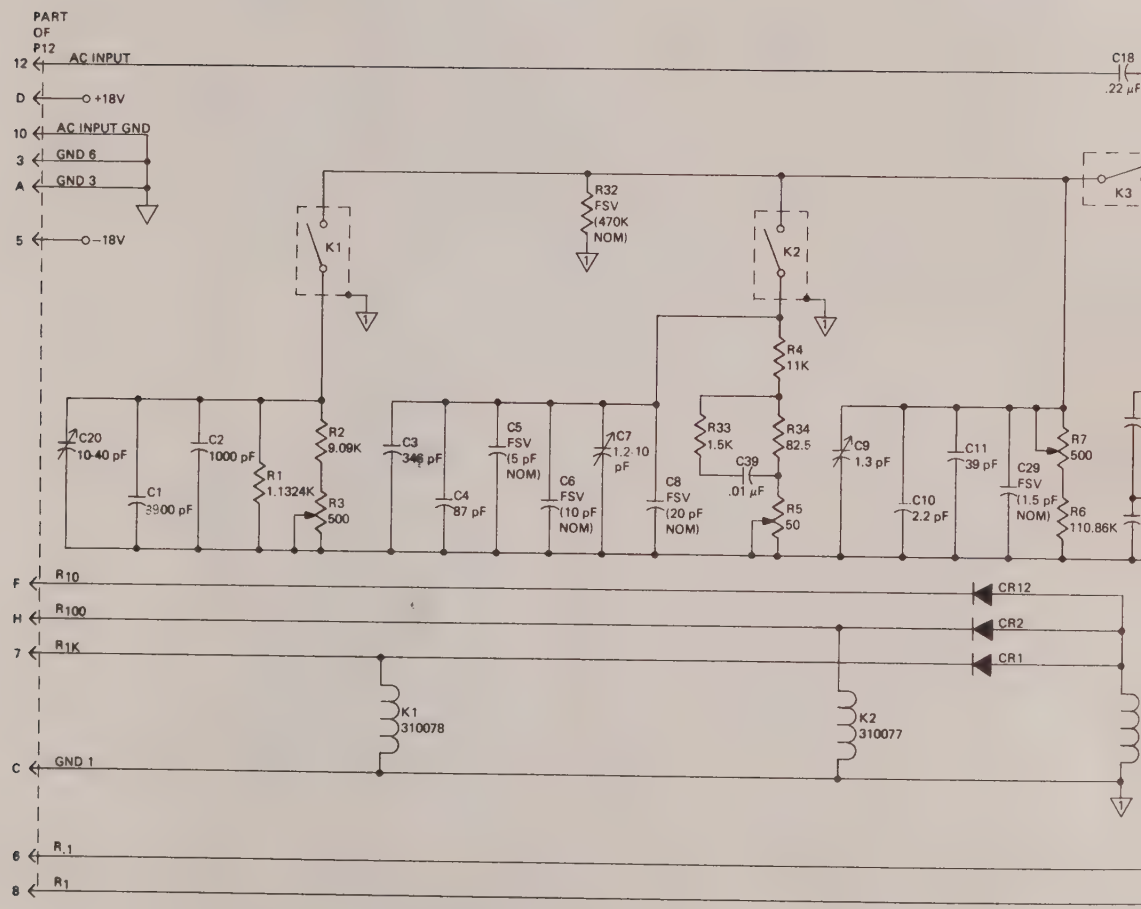
PART
OF
P12
12
AC INPUT
D
+18V
10
AC INPUT GND
3
GND 6
A
GND 3
5
−18V
C18
.22 μF
K3
K1
K2
R32
FSV
(470K
NOM)
R4
11K
C20
10-40 pF
C1
3900 pF
C2
1000 pF
R1
1.1324K
R2
9.09K
R3
500
C3
346 pF
C4
87 pF
C5
FSV
(5 pF
NOM)
C6
FSV
(10 pF
NOM)
C7
1.2-10
pF
C8
FSV
(20 pF
NOM)
R33
1.5K
C39
.01 μF
R34
82.5
R5
50
C9
1.3 pF
C10
2.2 pF
C11
39 pF
C29
FSV
(1.5 pF
NOM)
R7
500
R6
110.86K
F
R10
H
R100
7
R1K
CR12
CR2
CR1
K1
310078
K2
310077
C
GND 1
6
R.1
8
R1

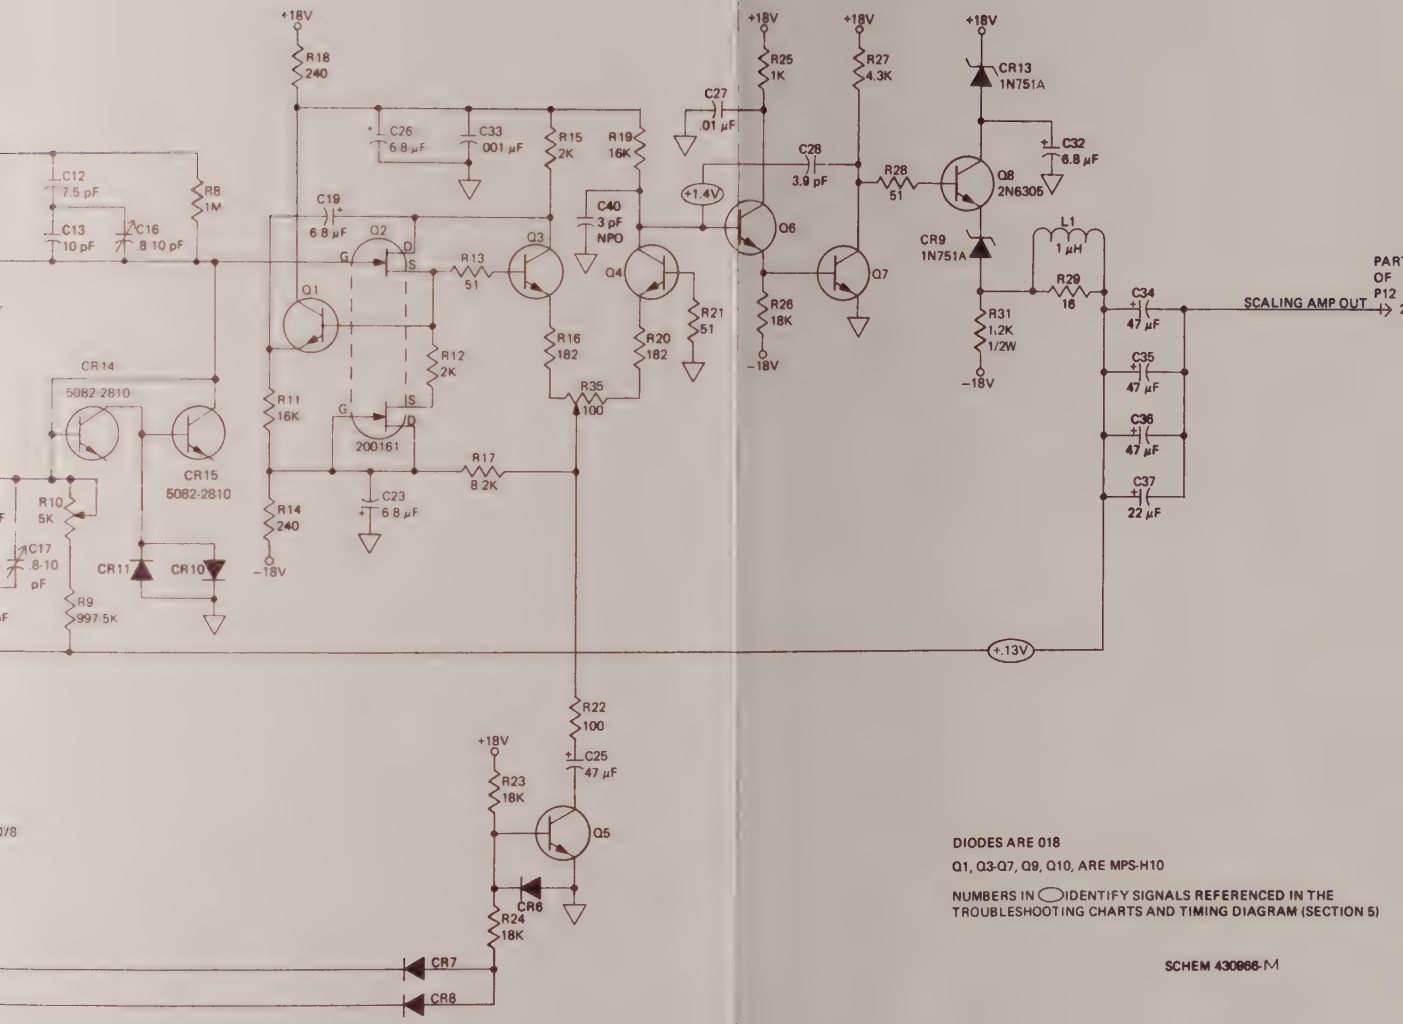

DIODES ARE 018

Q1, Q3-Q7, Q9, Q10, ARE MPS-H10

NUMBERS IN ◯ IDENTIFY SIGNALS REFERENCED IN THE TROUBLESHOOTING CHARTS AND TIMING DIAGRAM (SECTION 5)

SCHEM 430866-M

Figure 6.11 - Schematic, Scaling Amplifier

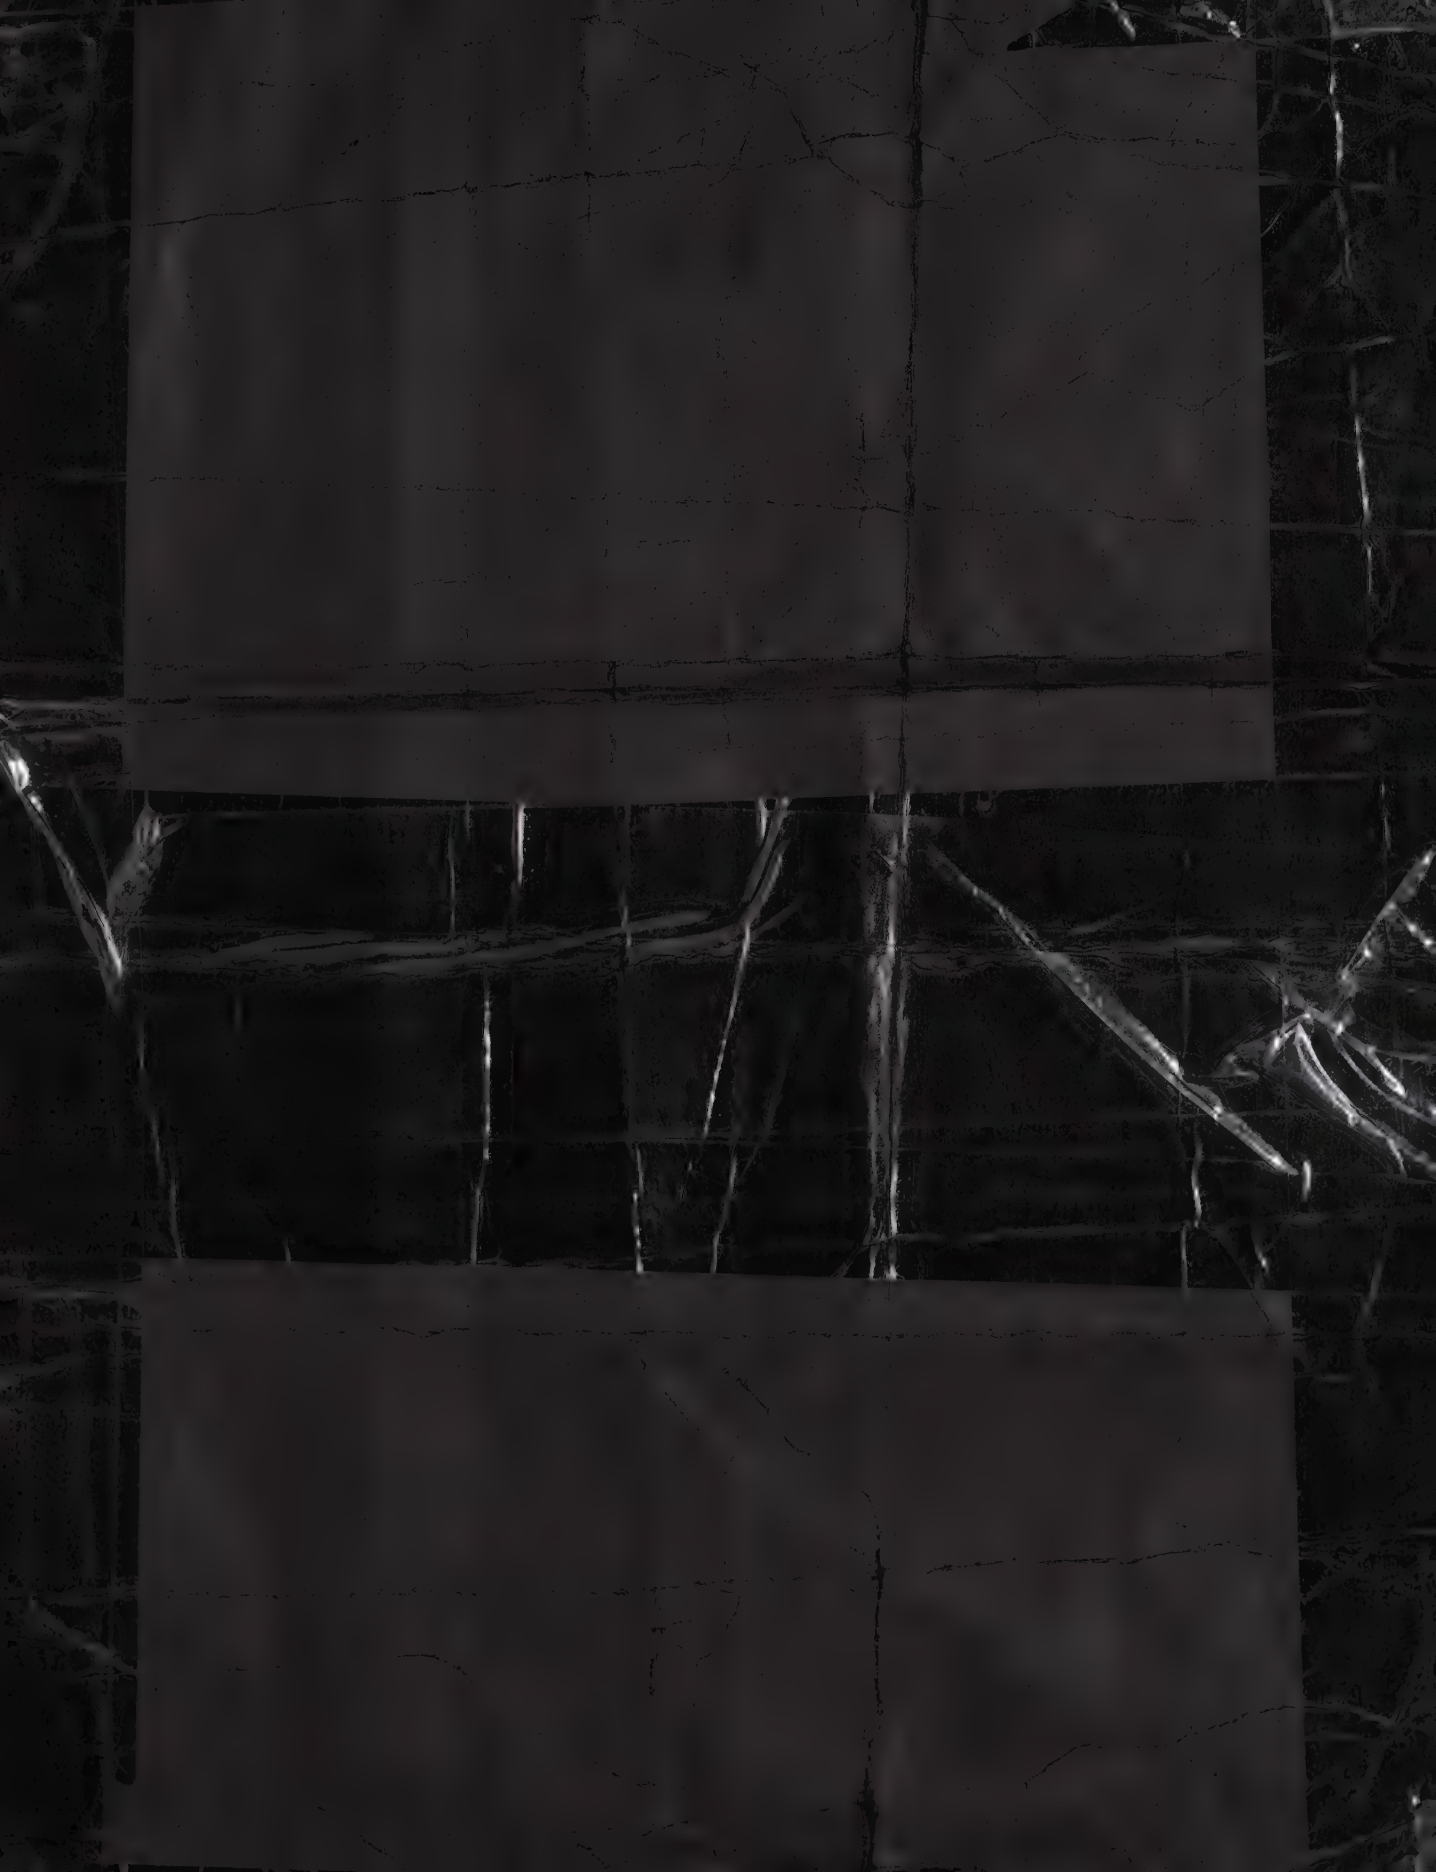

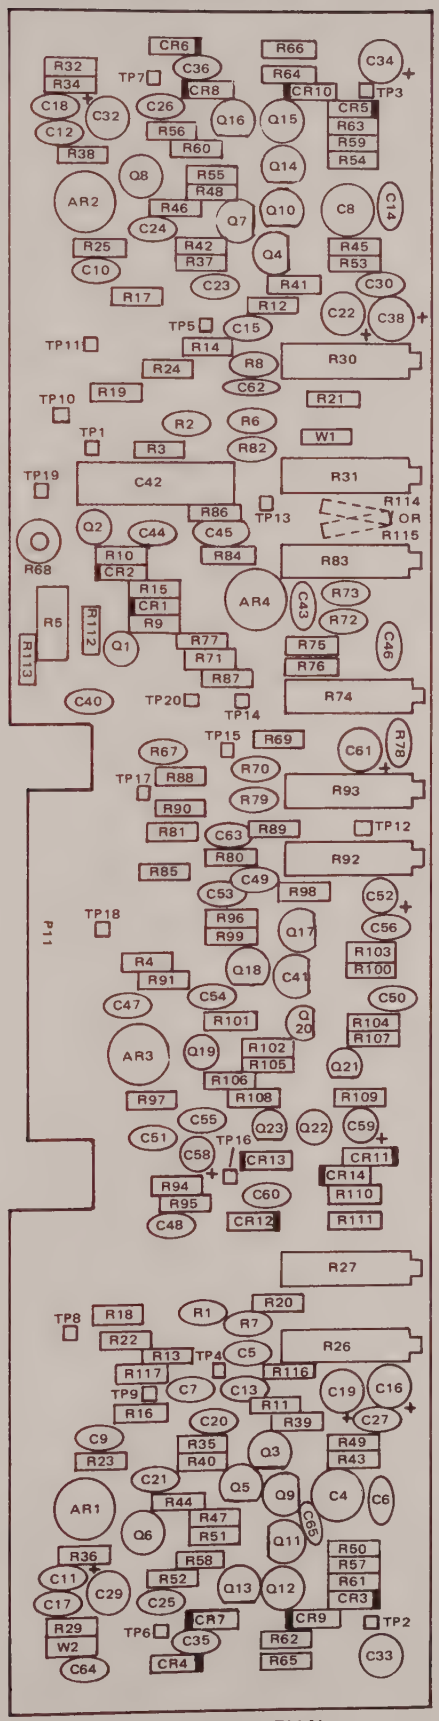

ASSY 403470 REV N

Figure 6.12 - Layout, DIAC Converter

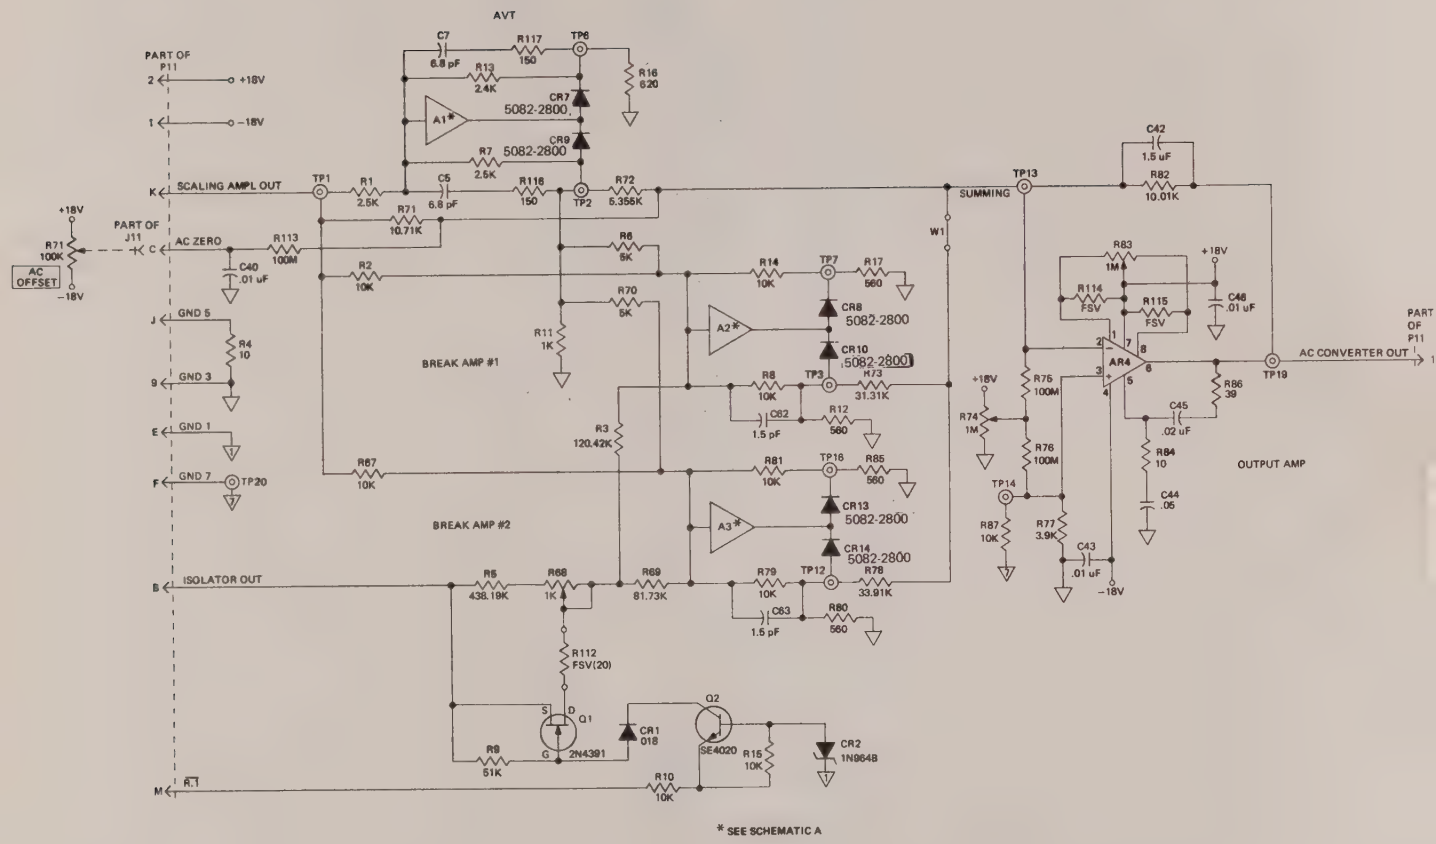

* SEE SCHEMATIC A

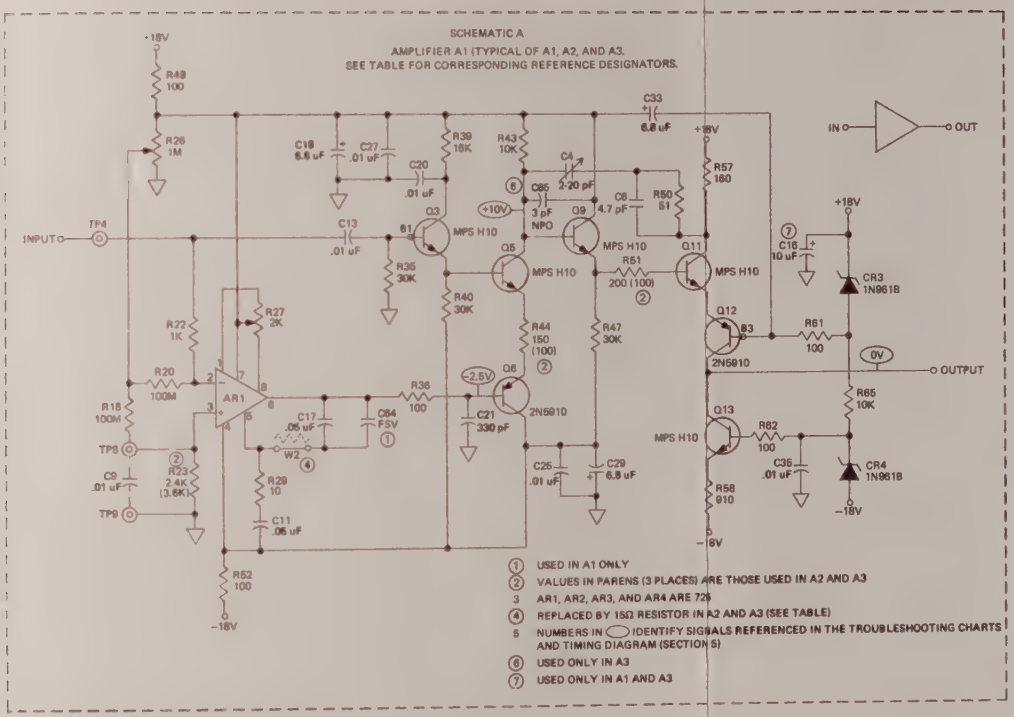

A1	A2	A3
AR1	AR2	AR3
B1	B2	B5
B3	B4	B6
C4	C8	C41
C6	C14	C50
C9	C10	C47
C11	C12	C48
C13	C15	C49
C16	—	C61
C17	C18	C51
C19	C22	C52
C20	C23	C53
C21	C24	C54
C25	C26	C55
C27	C30	C56
C29	C32	C58
C33	C34	C59
C35	C36	C60
C84	–	–
C85	–	–
CR3	CR5	CR11
CR4	CR6	CR12
Q3	Q4	Q17
Q5	Q7	Q18
Q6	Q8	Q19
Q9	Q10	Q20
Q11	Q14	Q21
Q12	Q15	Q22
Q13	Q16	Q23
R18	R19	R88
R20	R21	R89
R22	R24	R90
R23	R25	R91
R26	R30	R92
R27	R31	R93
R29	R34	R95
R35	R37	R96
R36	R38	R97
R39	R41	R98
R40	R42	R99
R43	R45	R100
R44	R46	R101
R47	R48	R102
R49	R53	R103
R50	R54	R104
R51	R55	R105
R52	R56	R106
R57	R59	R107
R58	R60	R108
R61	R63	R109
R62	R64	R110
R65	R66	R111
TP4	TP5	TP15
TP8	TP10	TP17
TP9	TP11	TP18
W2	R32	R94

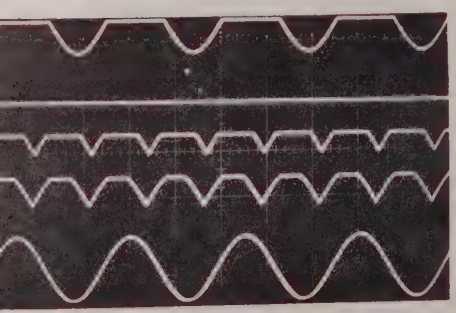

Figure 6.13 - Schematic, DIAC Converter

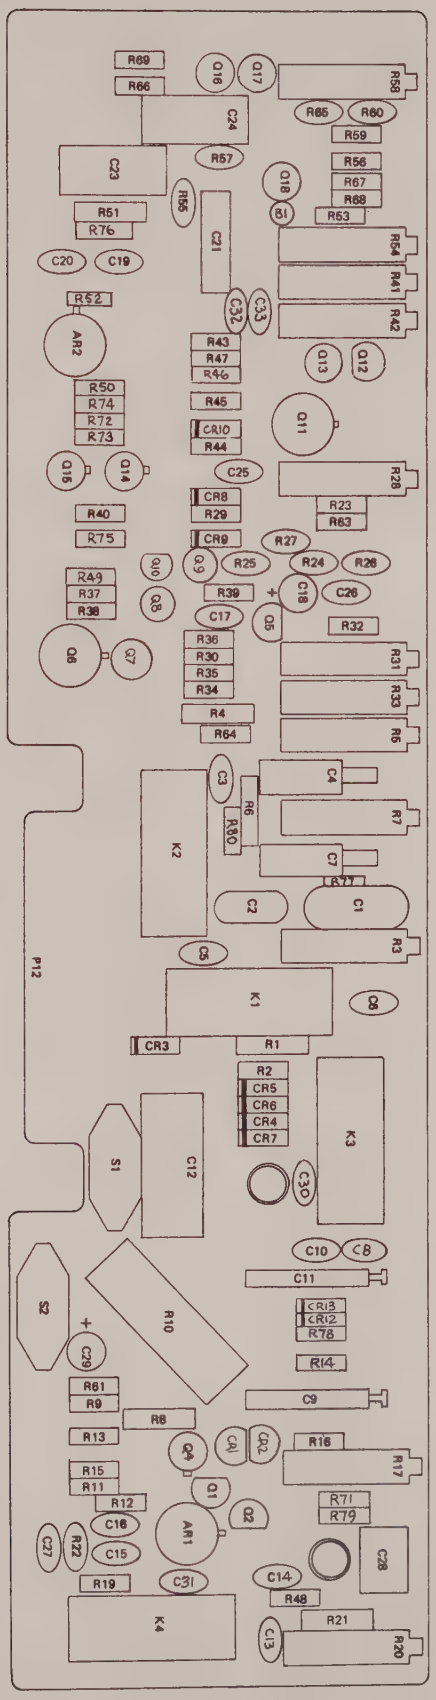

ASSY 403773 REV K

Figure 6.14 - Layout, RMS AC Converter

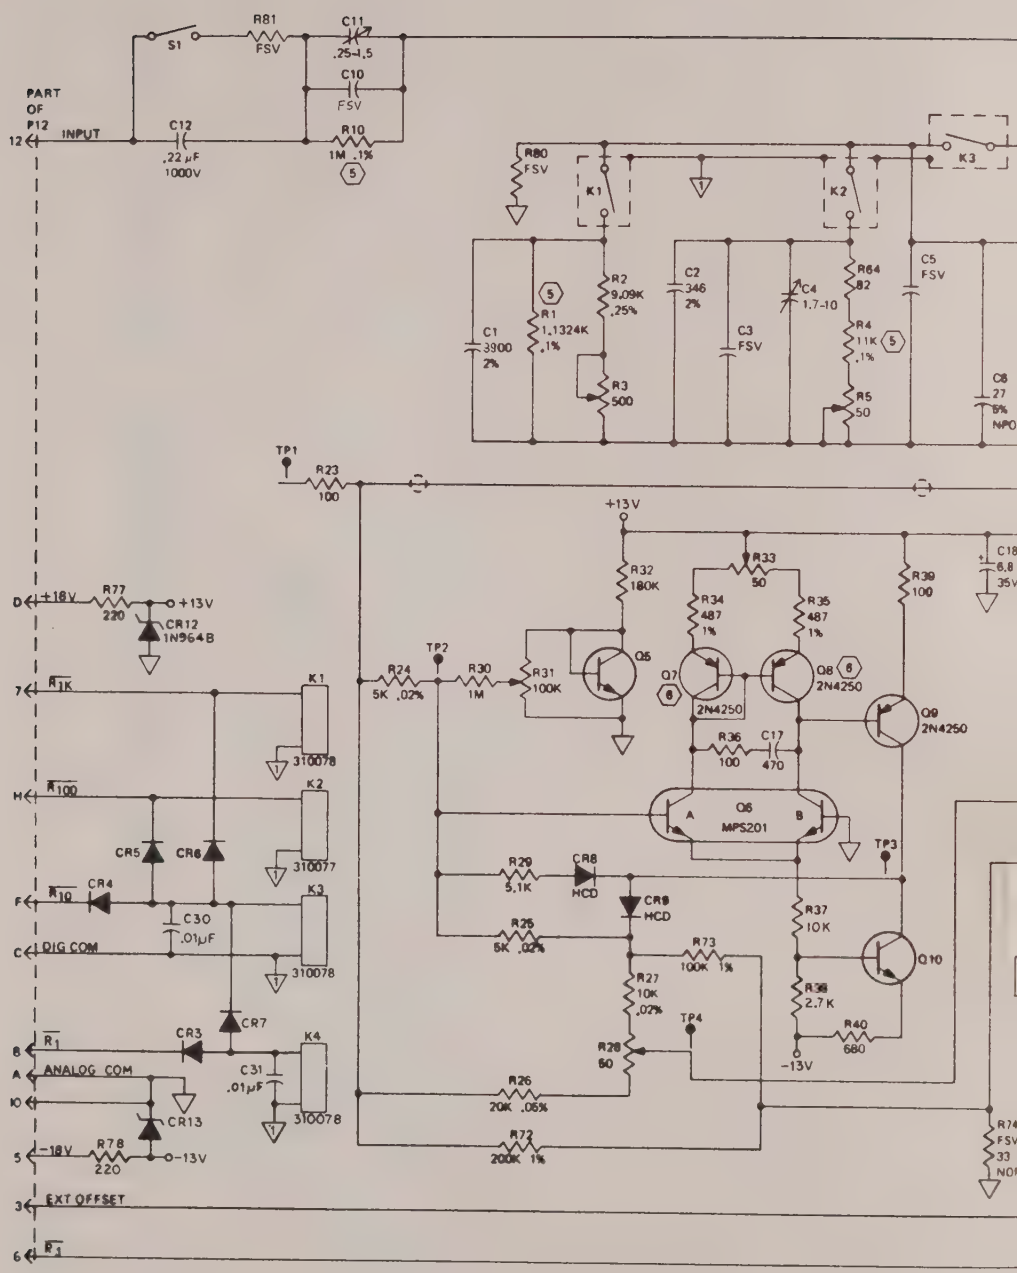

(7) Q14 AND Q15, R74 AND R75, ARE LOG TRANSISTOR KIT 403865

(6) Q7 AND Q8 ARE MATCHED PAIR 200112

(5) R1, R4, R6, R8, AND R10 ARE RESISTOR SET 010721

4 TRANSISTORS ARE 200200

3 DIODES ARE 018

2 CAPACITORS ARE IN pF

1 RESISTORS ARE IN OHMS, ±5%, 1/4W

NOTES: UNLESS OTHERWISE SPECIFIED

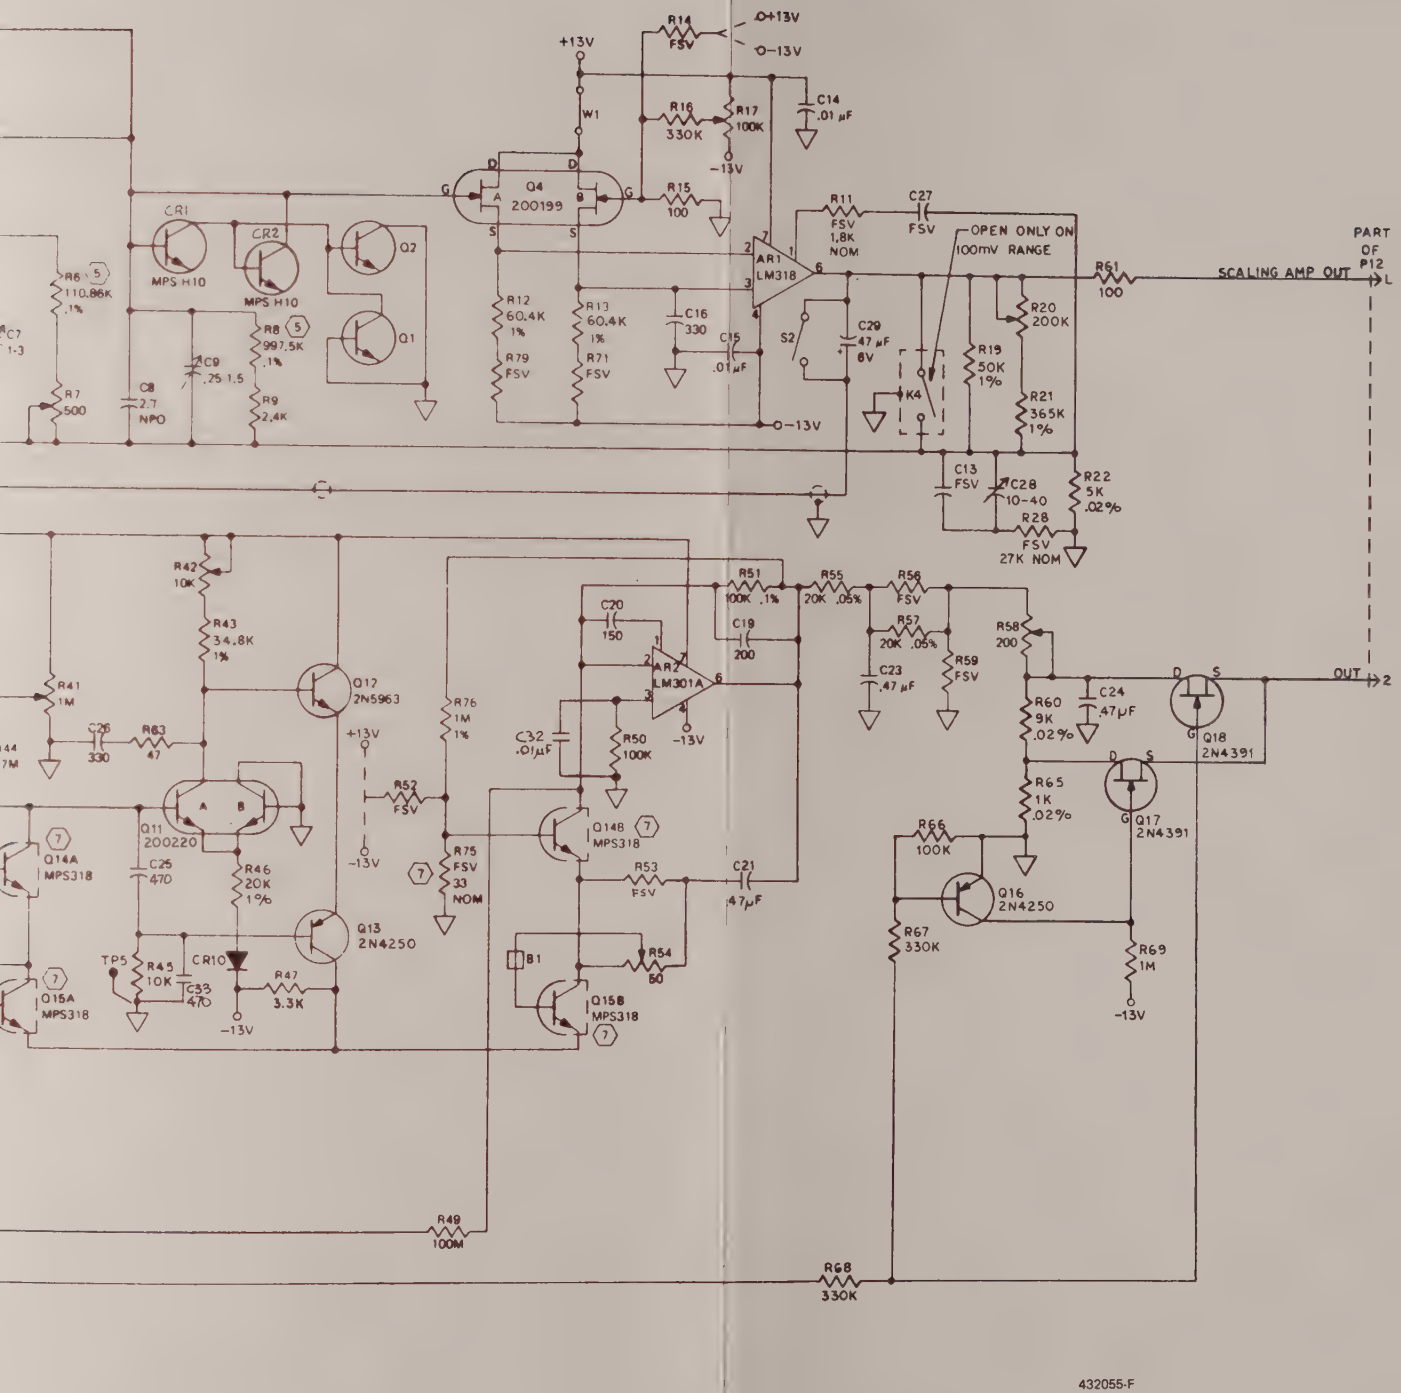

432055-F

Figure 6.15 - Schematic, RMS AC Converter

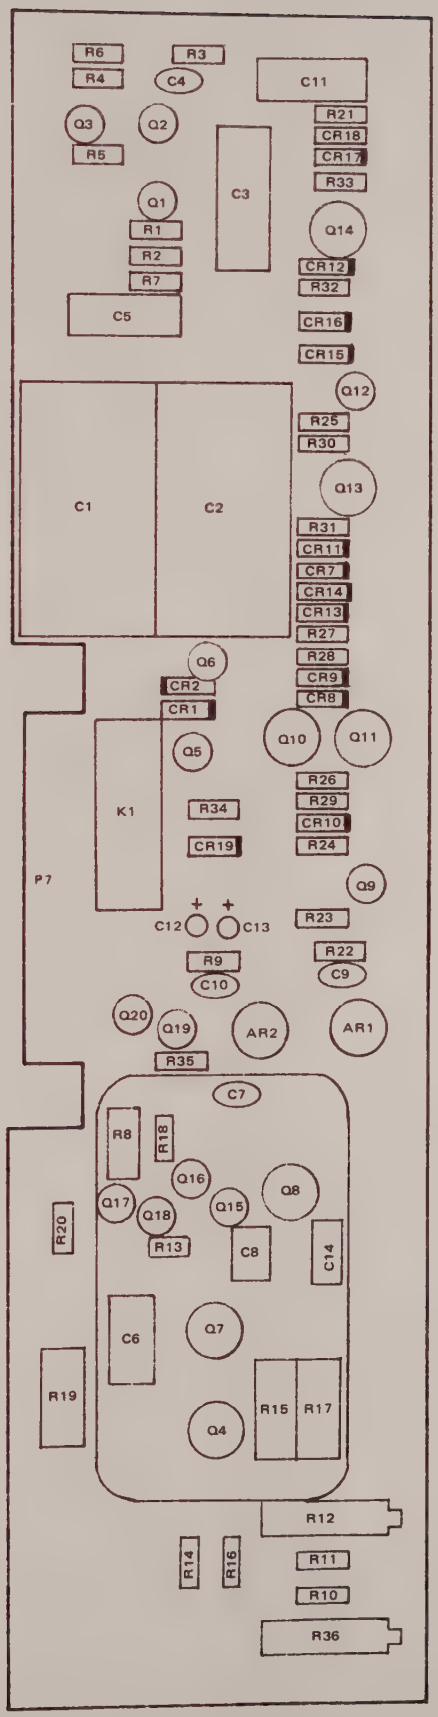

ASSY 403434 REV N

Figure 6.16 - Layout, Isolator

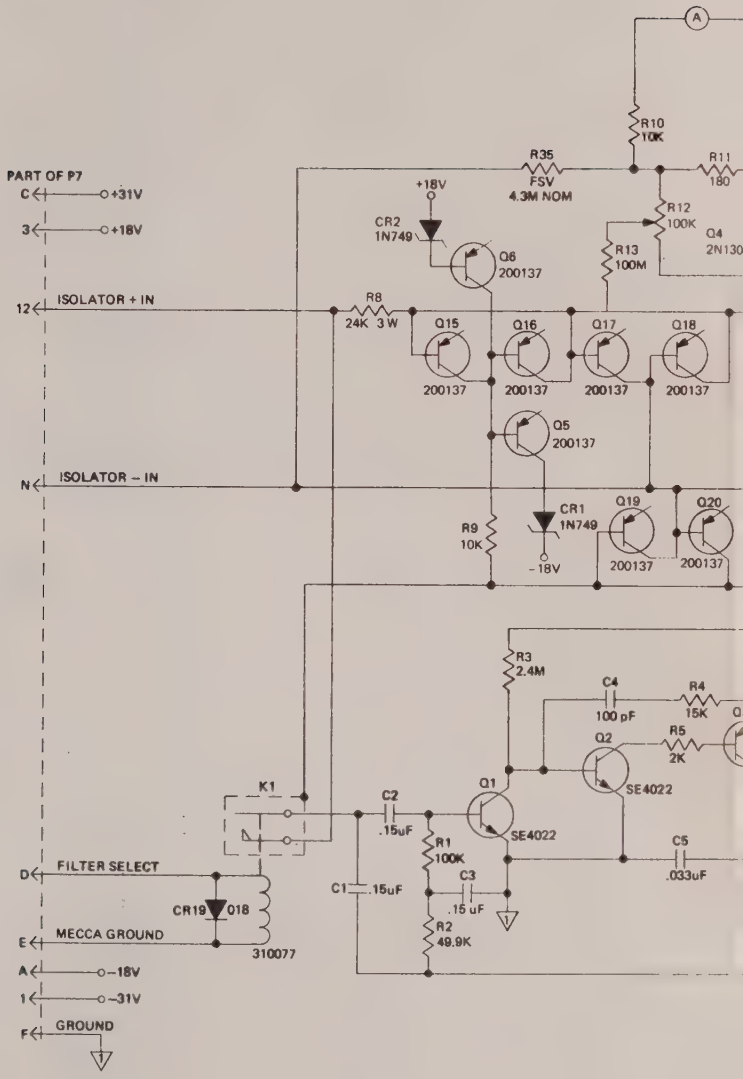
A
R10
10K
R35
FSV
4.3M NOM
R11
180
PART OF P7
C
+31V
3
+18V
+18V
CR2
1N749
Q6
200137
R12
100K
Q4
2N130
R13
100M
12
ISOLATOR + IN
R8
24K 3W
Q15
Q16
Q17
Q18
200137
200137
200137
200137
Q5
200137
N
ISOLATOR – IN
CR1
1N749
Q19
Q20
R9
10K
-18V
200137
200137
R3
2.4M
C4
100 pF
R4
15K
R5
2K
Q2
SE4022
K1
C2
.15uF
Q1
SE4022
R1
100K
C5
.033uF
D
FILTER SELECT
C1
.15uF
C3
.15 uF
CR19
Q18
E
MECCA GROUND
R2
49.9K
310077
A
-18V
1
-31V
F
GROUND

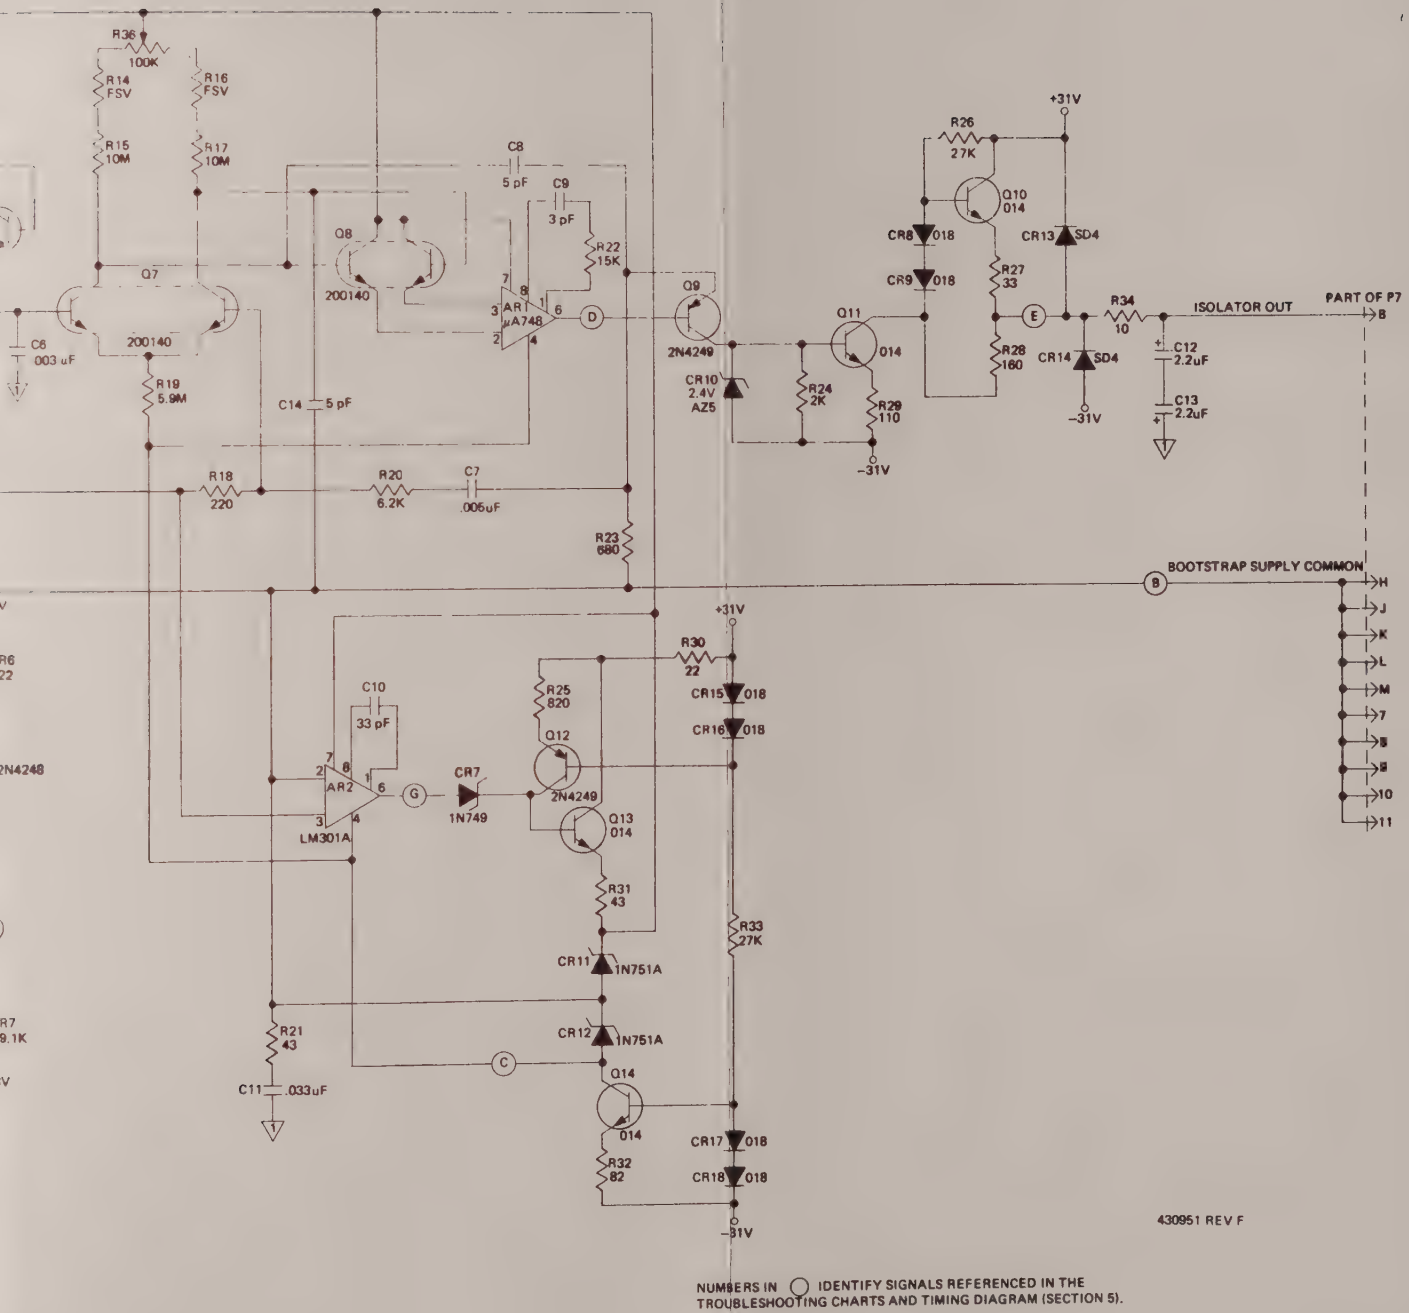

NUMBERS IN ◯ IDENTIFY SIGNALS REFERENCED IN THE TROUBLESHOOTING CHARTS AND TIMING DIAGRAM (SECTION 5).

Figure 6.17 - Schematic, Isolator

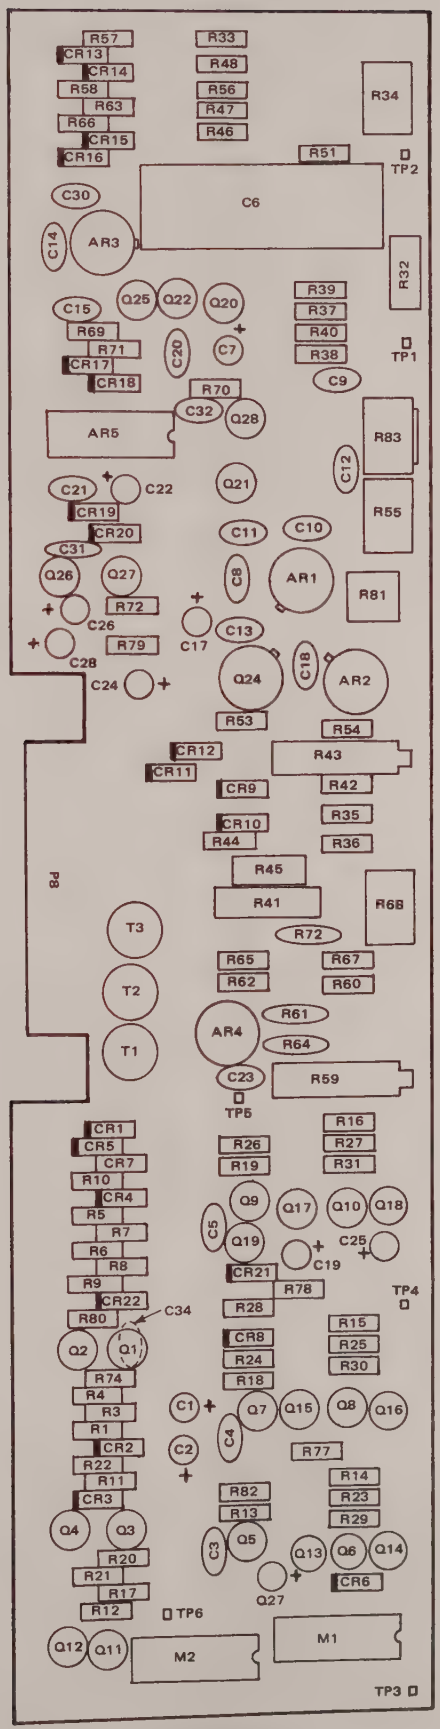

ASSY 403432 REV Y

Figure 6.18 - Layout, Digitizer

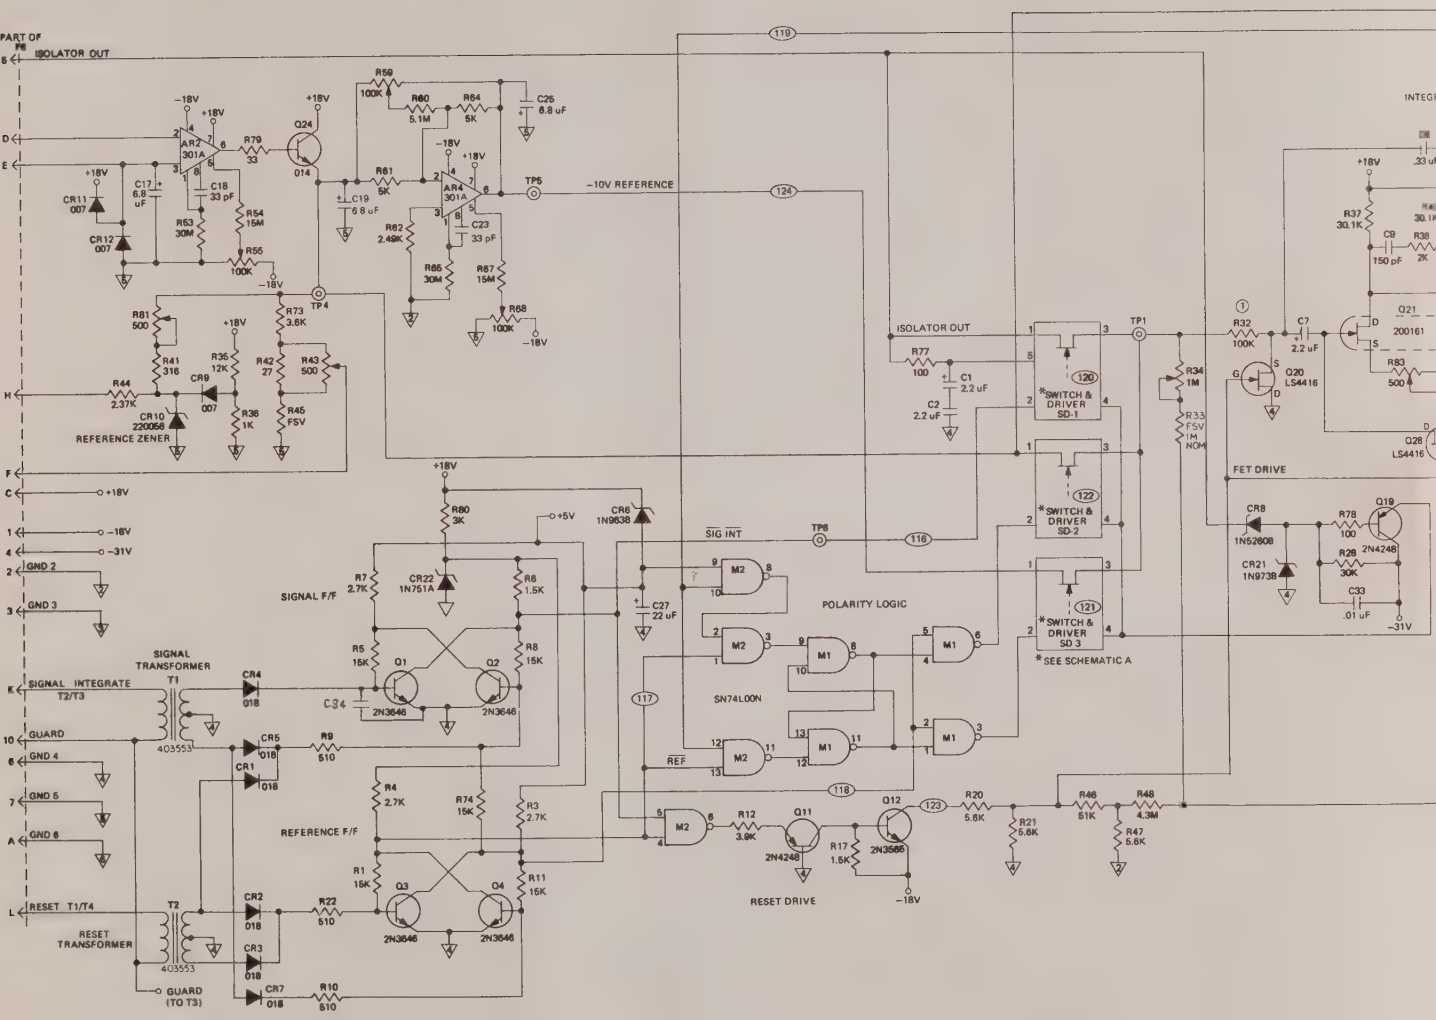
PART OF P6
ISOLATOR OUT
-10V REFERENCE
REFERENCE ZENER
SIGNAL F/F
SIGNAL TRANSFORMER
SIGNAL INTEGRATE T2/T3
GUARD
GND 2
GND 3
GND 4
GND 5
GND 6
RESET T1/T4
RESET TRANSFORMER
GUARD (TO T3)
REFERENCE F/F
RESET DRIVE
POLARITY LOGIC
SN74L00N
SIG INT
REF
SWITCH & DRIVER SD-1
SWITCH & DRIVER SD-2
SWITCH & DRIVER SD 3
*SEE SCHEMATIC A
FET DRIVE
2N3646
2N4248
2N3566
LS4416
200161
403553

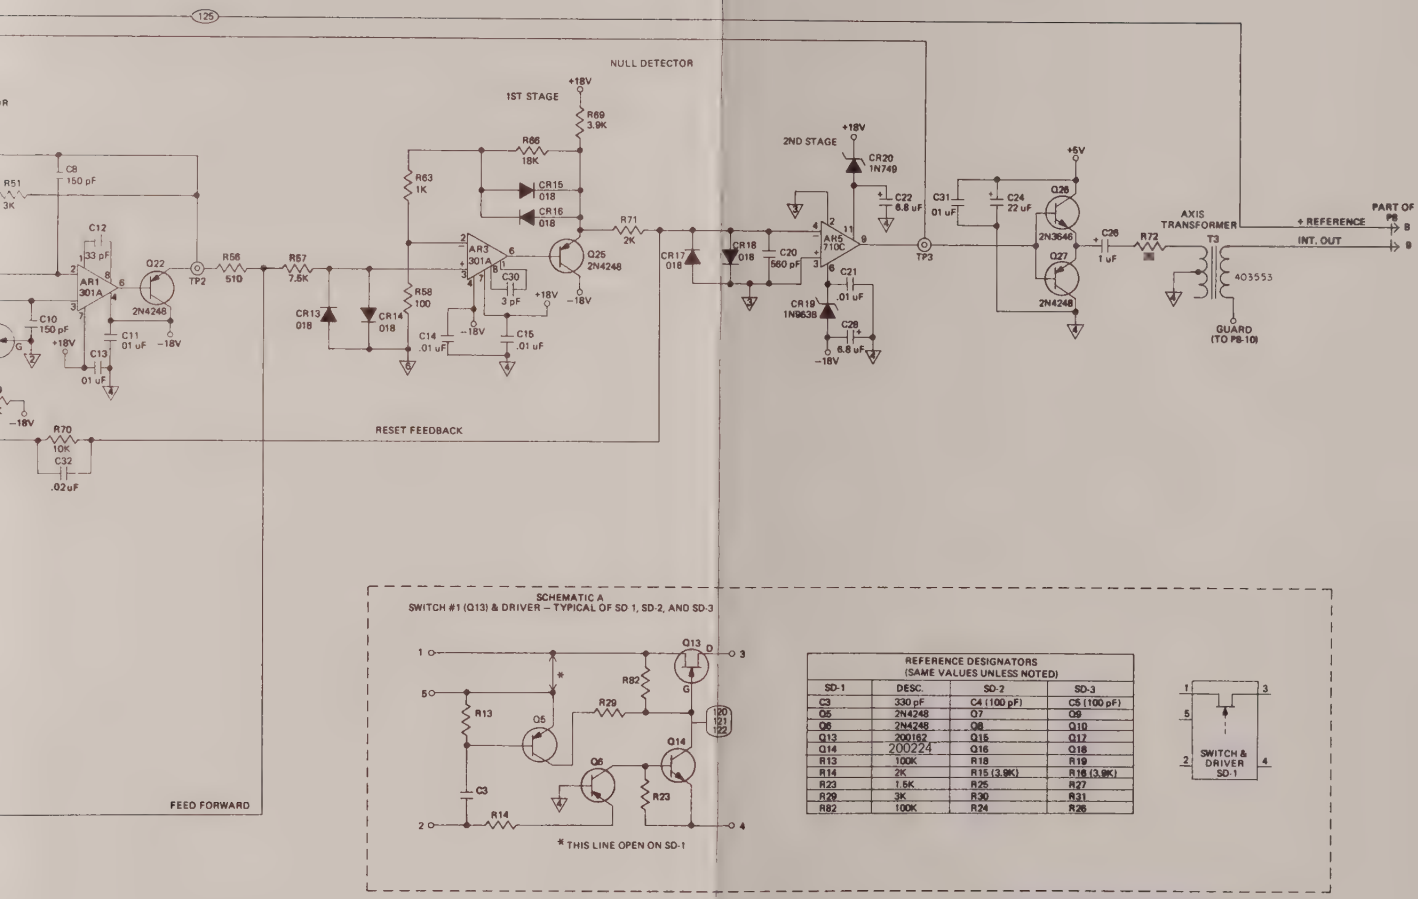

REFERENCE DESIGNATORS (SAME VALUES UNLESS NOTED)			
SD-1	DESC.	SD-2	SD-3
C3	330 pF	C4 (100 pF)	C5 (100 pF)
Q5	2N4248	Q7	Q9
Q6	2N4248	Q8	Q10
Q13	200162	Q15	Q17
Q14	200224	Q16	Q18
R13	100K	R18	R19
R14	2K	R15 (3.9K)	R16 (3.9K)
R23	1.5K	R25	R27
R29	3K	R30	R31
R82	100K	R24	R26

NUMBERS IN ⬭ IDENTIFY SIGNALS REFERENCED IN THE TROUBLESHOOTING CHARTS AND TIMING DIAGRAM (SECTION 5).

① ON 50 Hz INSTRUMENTS, R32 (100K) IS REPLACED WITH 121K RESISTOR.

SCHEM 430949- K

Figure 6.19 - Schematic, Digitizer

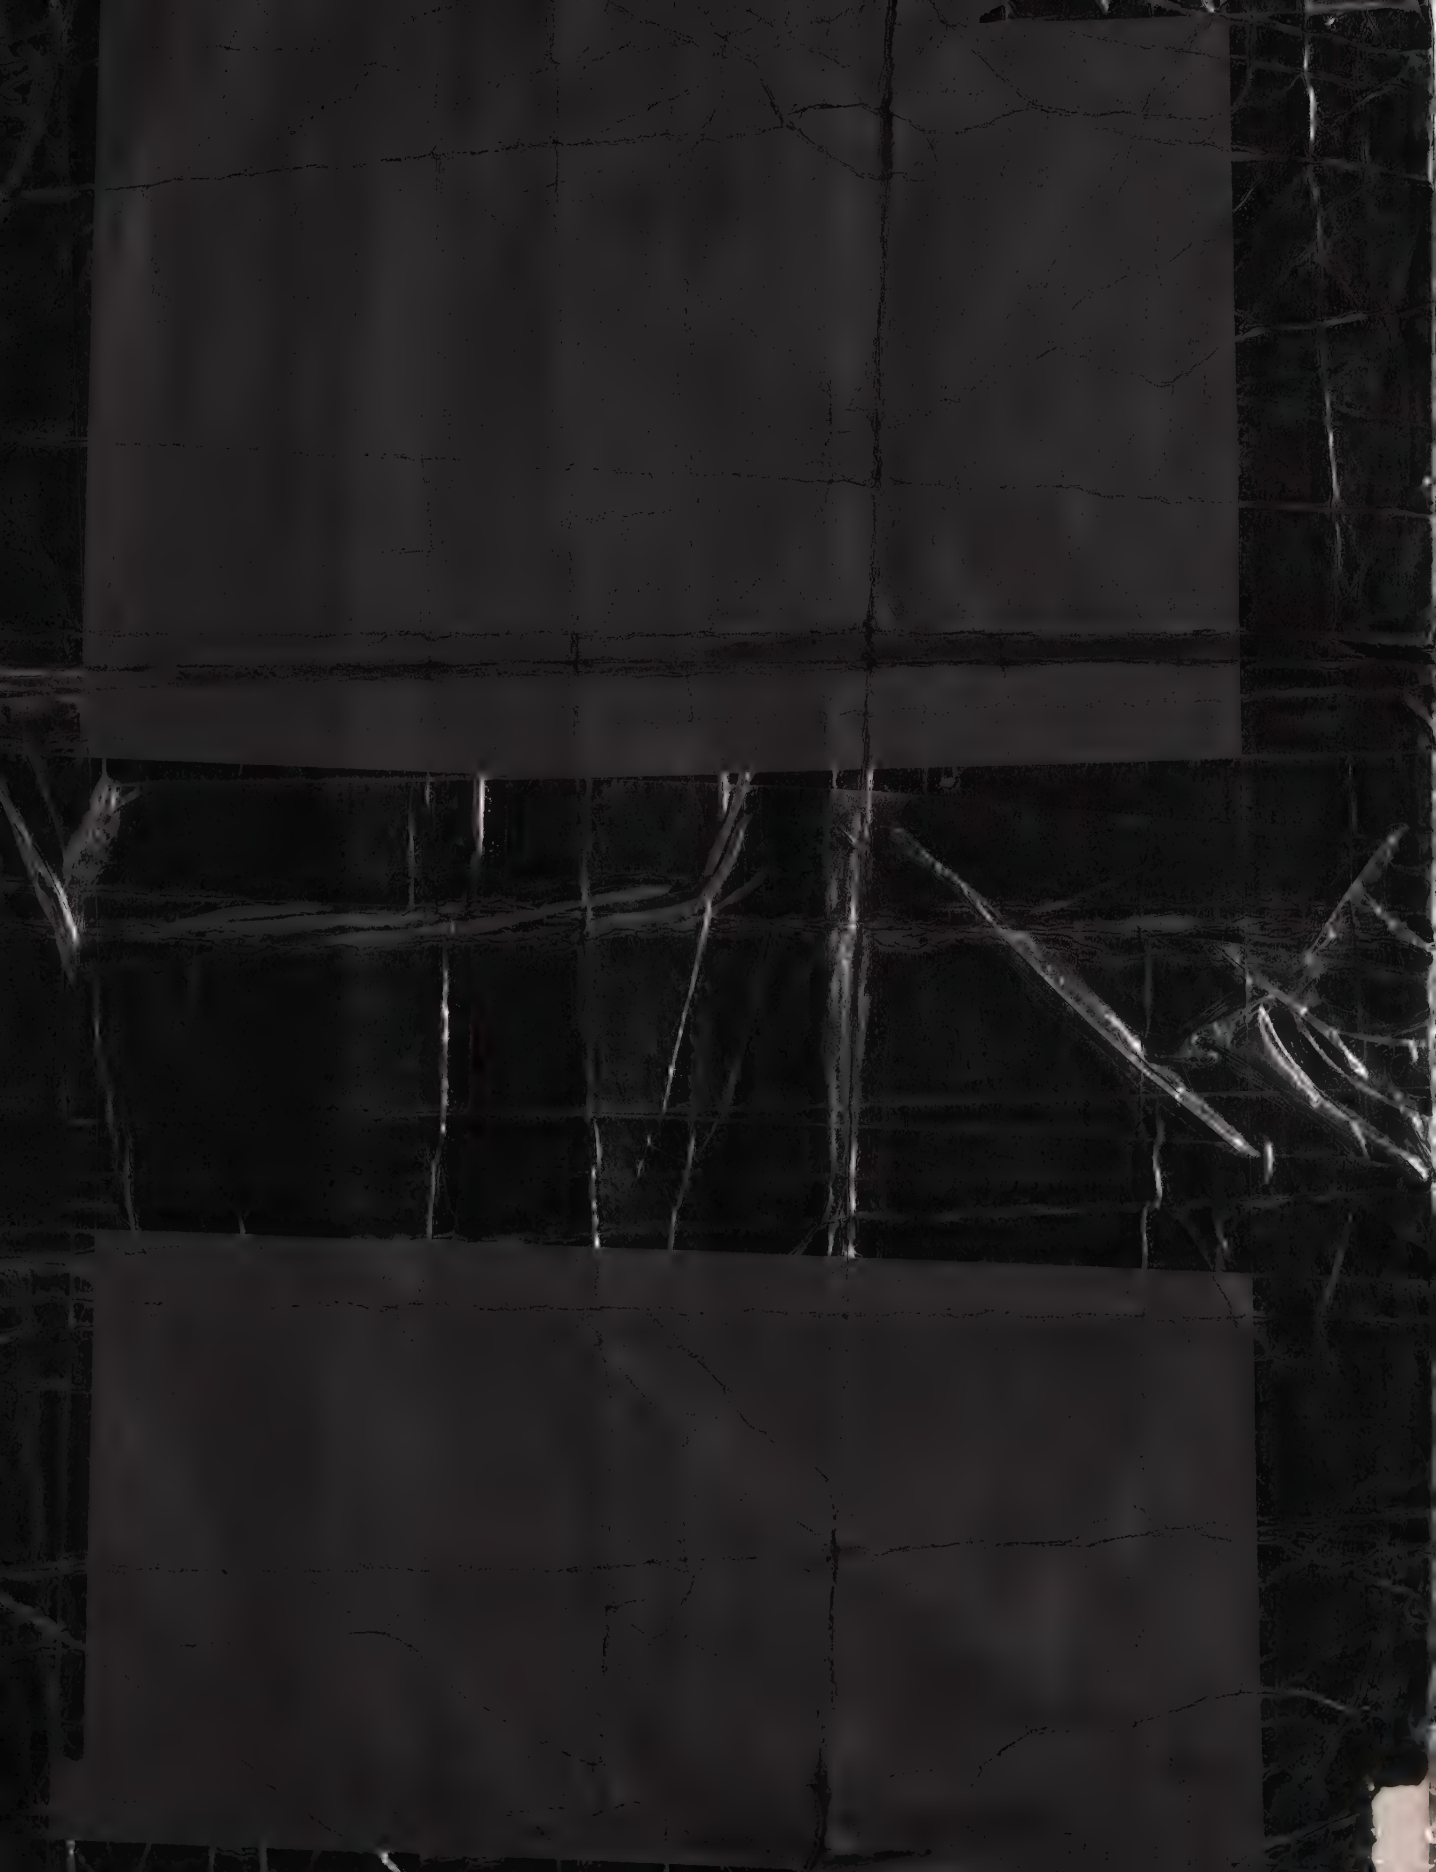

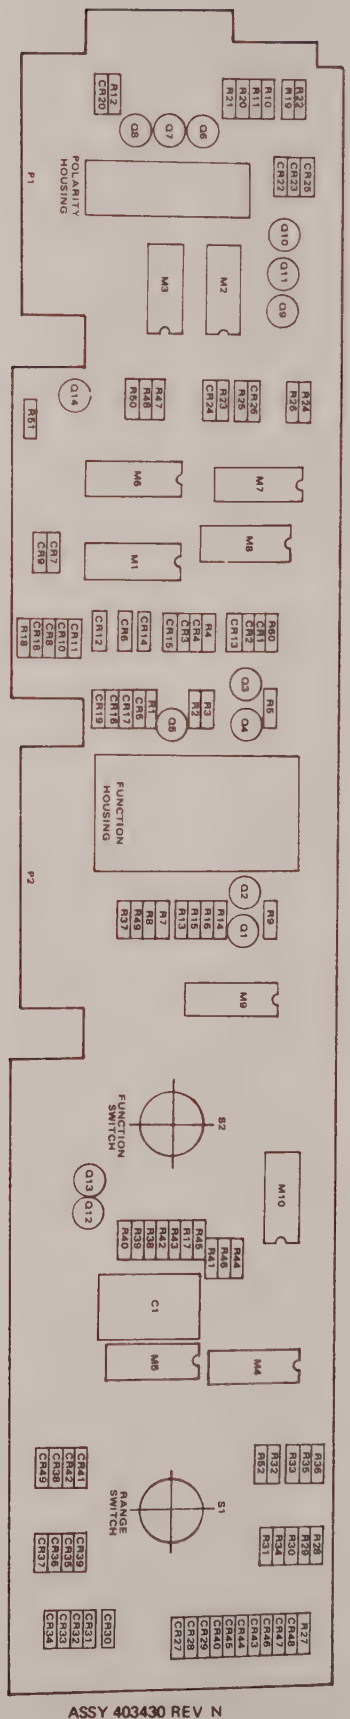

Figure 6.20 - Layout, Display

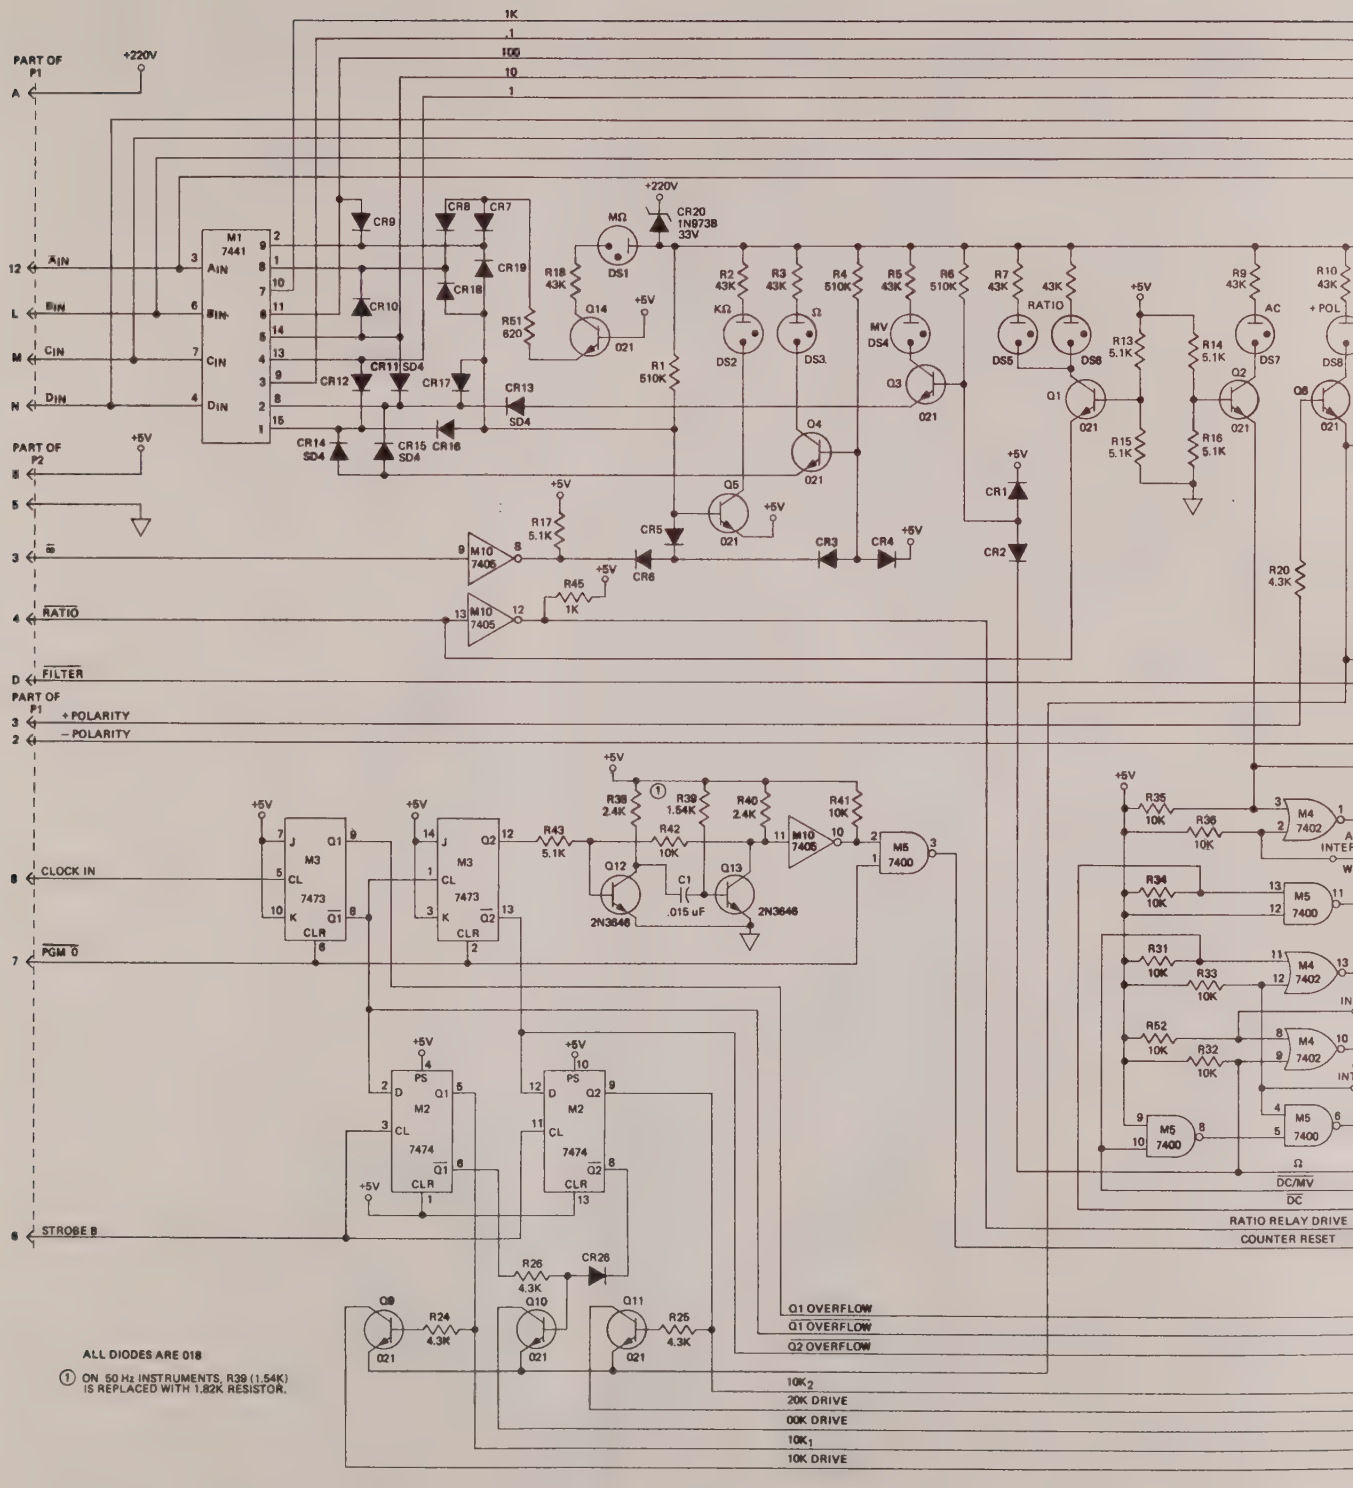
1K
.1
100
10
1
PART OF P1
+220V
A
12 AIN
L BIN
M CIN
N DIN
M1 7441
AIN
BIN
CIN
DIN
CR9
CR8
CR7
CR19
CR18
CR10
CR11
SD4
CR12
CR17
CR13
SD4
CR14 SD4
CR15 SD4
CR16
MΩ
DS1
+220V
CR20 1N9738 33V
R18 43K
Q14
021
+5V
R51 620
R1 510K
R2 43K
KΩ
DS2
R3 43K
Ω
DS3
R4 510K
R5 43K
MV
DS4
Q3
021
R6 510K
R7 43K
DS5
43K
RATIO
DS6
Q1
021
+5V
R13 5.1K
R15 5.1K
R14 5.1K
R16 5.1K
R9 43K
AC
DS7
Q2
021
R10 43K
+ POL
DS8
Q6
021
Q4
021
Q5
021
+5V
CR1
CR2
PART OF P2
+5V
5
3 Ω
4 RATIO
D FILTER
R17 5.1K
M10 7405
CR5
CR6
CR3
CR4
+5V
R45 1K
R20 4.3K
PART OF P1
3 + POLARITY
2 − POLARITY
8 CLOCK IN
7 PGM 0
M3 7473
J Q1 K CLR
J Q2 K CLR
R43 5.1K
R38 2.4K
R39 1.54K
R42 10K
R40 2.4K
R41 10K
M10 7405
M5 7400
Q12 2N3646
C1 .015 uF
Q13 2N3646
R35 10K
R36 10K
M4 7402
R34 10K
M5 7400
R31 10K
R33 10K
M4 7402
R52 10K
R32 10K
M4 7402
M5 7400
M5 7400
Ω
DC/MV
DC
RATIO RELAY DRIVE
COUNTER RESET
M2 7474 PS D Q1 CL CLR Q1
M2 7474 PS D Q2 CL CLR Q2
8 STROBE B
R26 4.3K
CR26
Q9
021
R24 4.3K
Q10
021
Q11
021
R25 4.3K
Q1 OVERFLOW
Q1 OVERFLOW
Q2 OVERFLOW
10K2
20K DRIVE
00K DRIVE
10K1
10K DRIVE
ALL DIODES ARE 018
① ON 50 Hz INSTRUMENTS, R39 (1.54K) IS REPLACED WITH 1.82K RESISTOR.

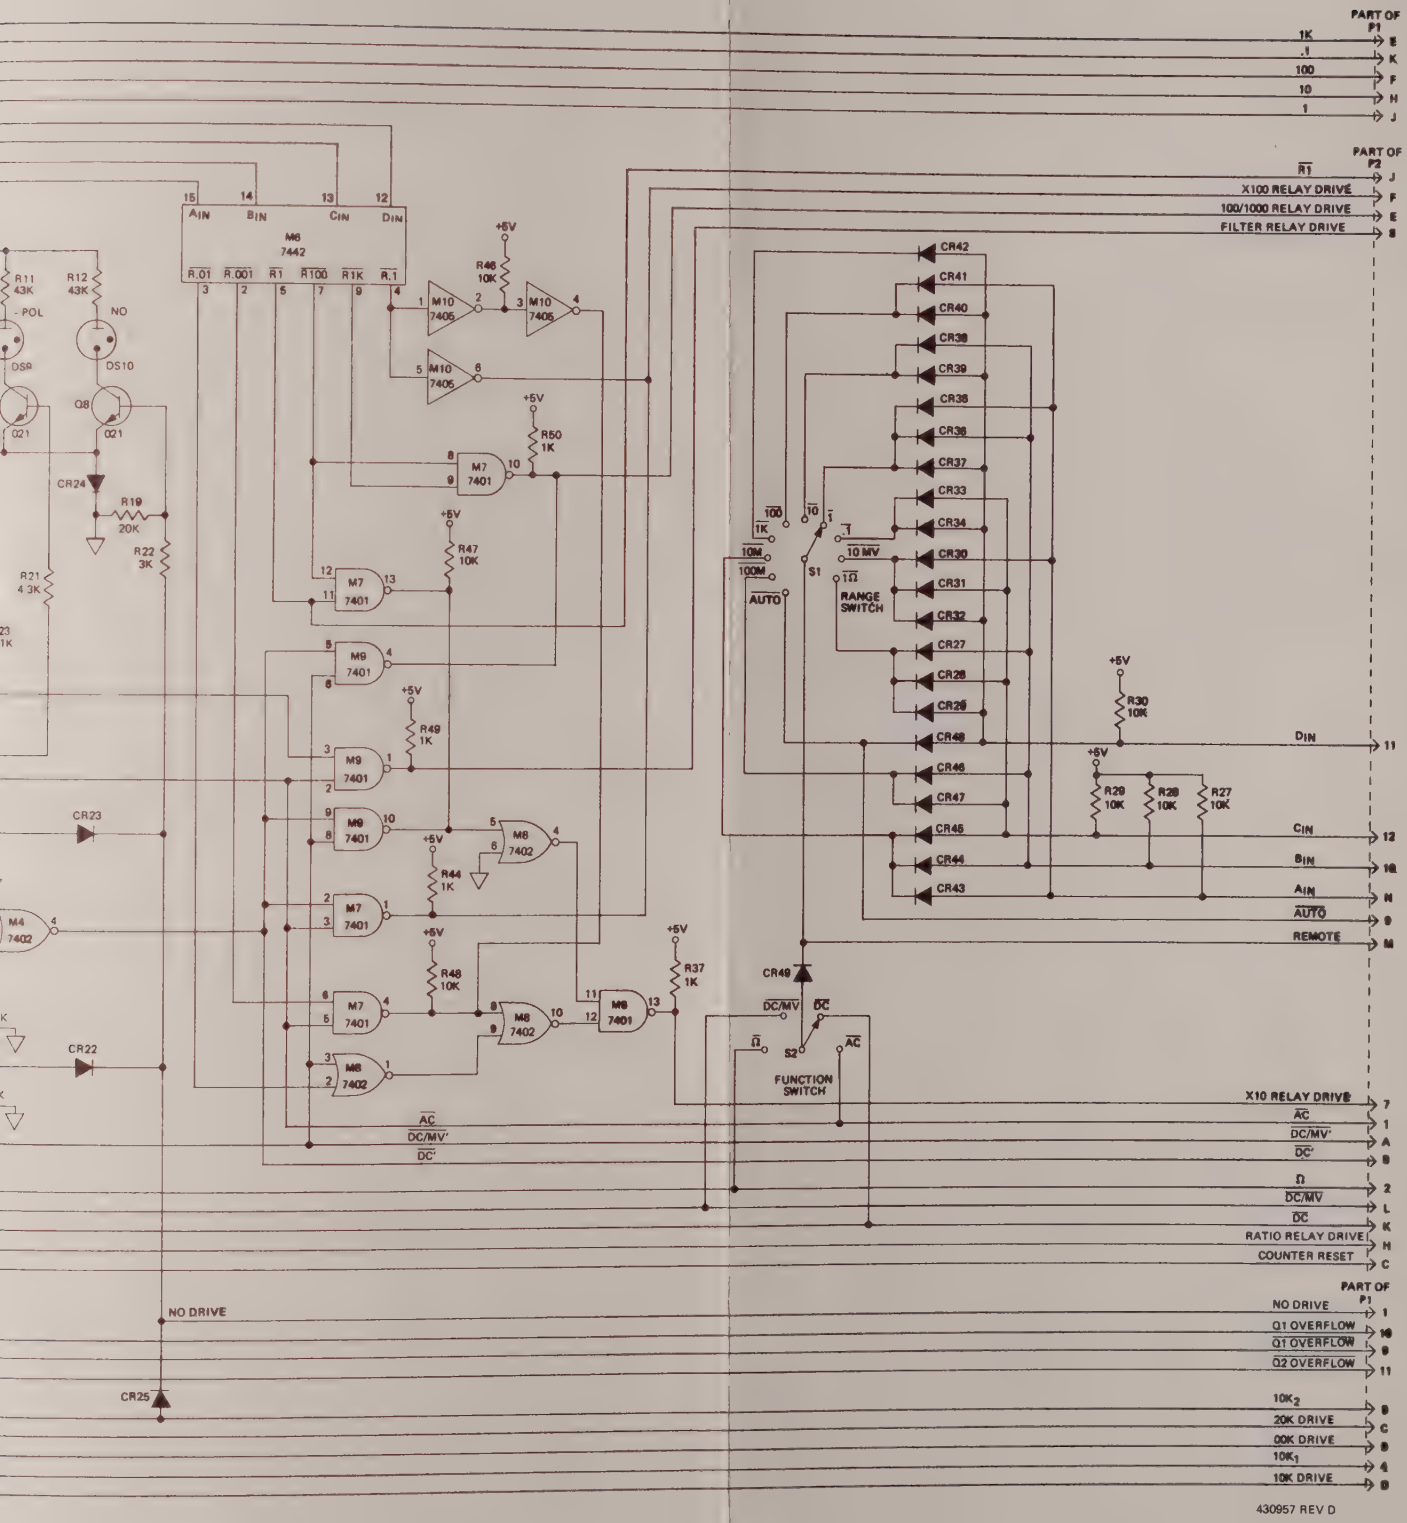

Figure 6.21 - Schematic, Display

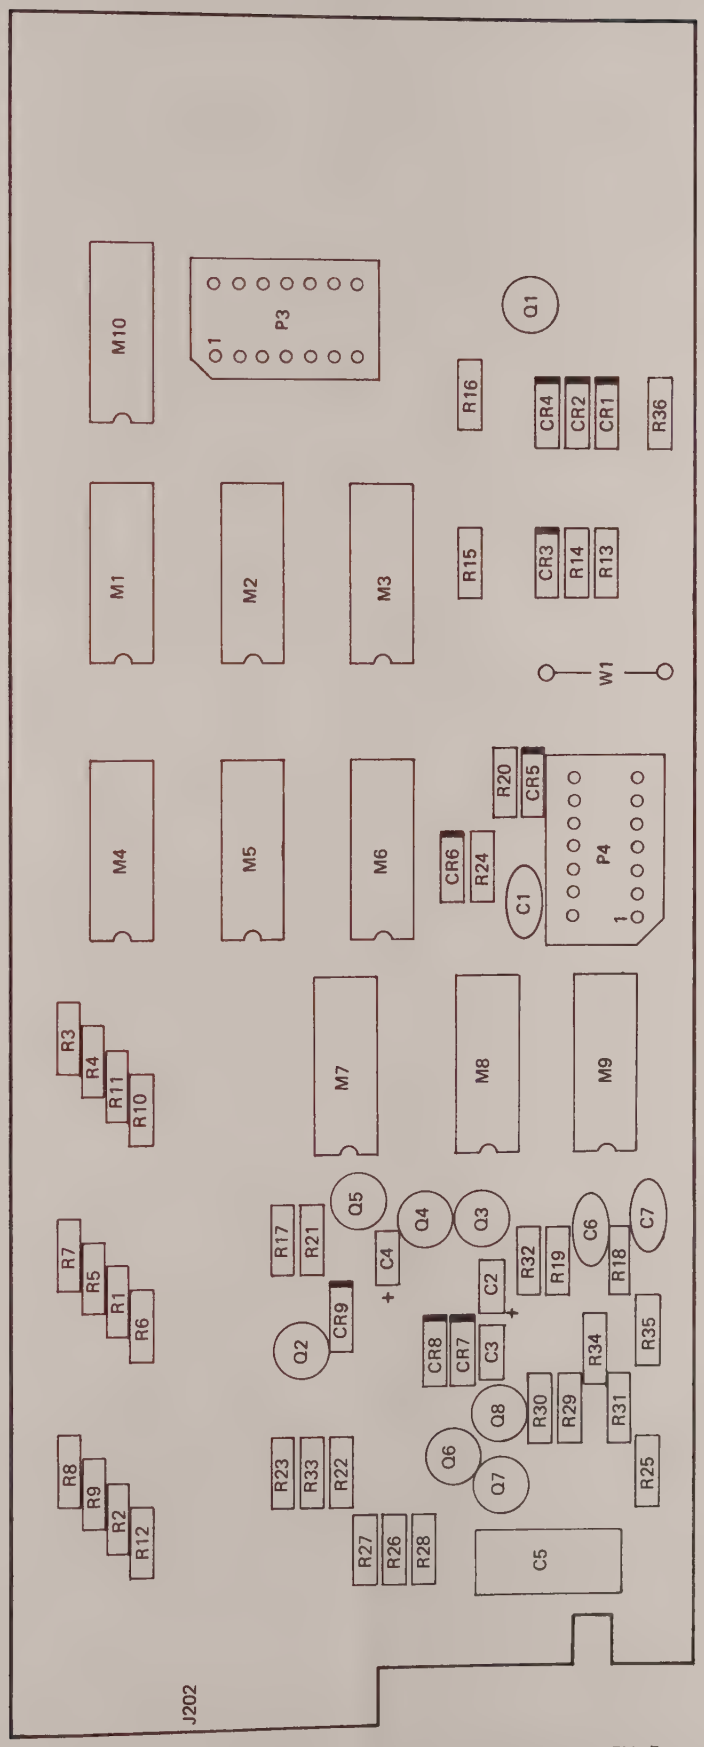

ASSY 403436 REV E

Figure 6.22 - Layout, Program

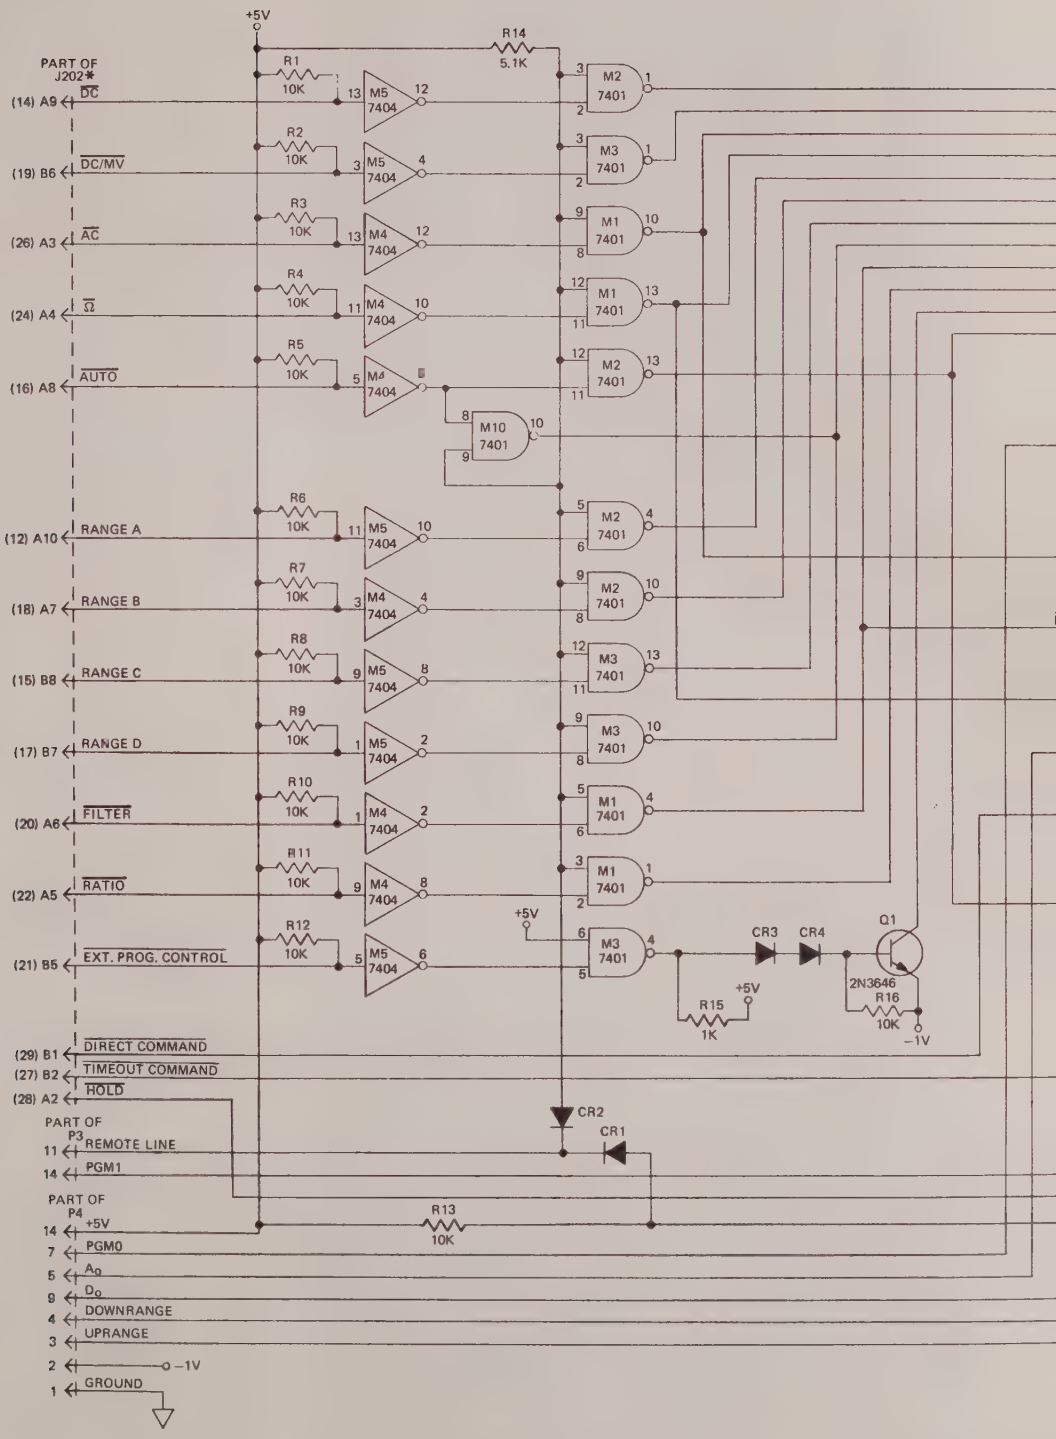
+5V
R14
5.1K
PART OF J202*
(14) A9 DC
(19) B6 DC/MV
(26) A3 AC
(24) A4 Ω
(16) A8 AUTO
(12) A10 RANGE A
(18) A7 RANGE B
(15) B8 RANGE C
(17) B7 RANGE D
(20) A6 FILTER
(22) A5 RATIO
(21) B5 EXT. PROG. CONTROL
R1 10K
R2 10K
R3 10K
R4 10K
R5 10K
R6 10K
R7 10K
R8 10K
R9 10K
R10 10K
R11 10K
R12 10K
M5 7404
M4 7404
M10 7401
M2 7401
M3 7401
M1 7401
CR3
CR4
Q1
2N3646
R15 1K
R16 10K
−1V
(29) B1 DIRECT COMMAND
(27) B2 TIMEOUT COMMAND
(28) A2 HOLD
CR2
CR1
PART OF P3
11 REMOTE LINE
14 PGM1
PART OF P4
14 +5V
R13 10K
7 PGM0
5 A_0
9 D_0
4 DOWNRANGE
3 UPRANGE
2 −1V
1 GROUND

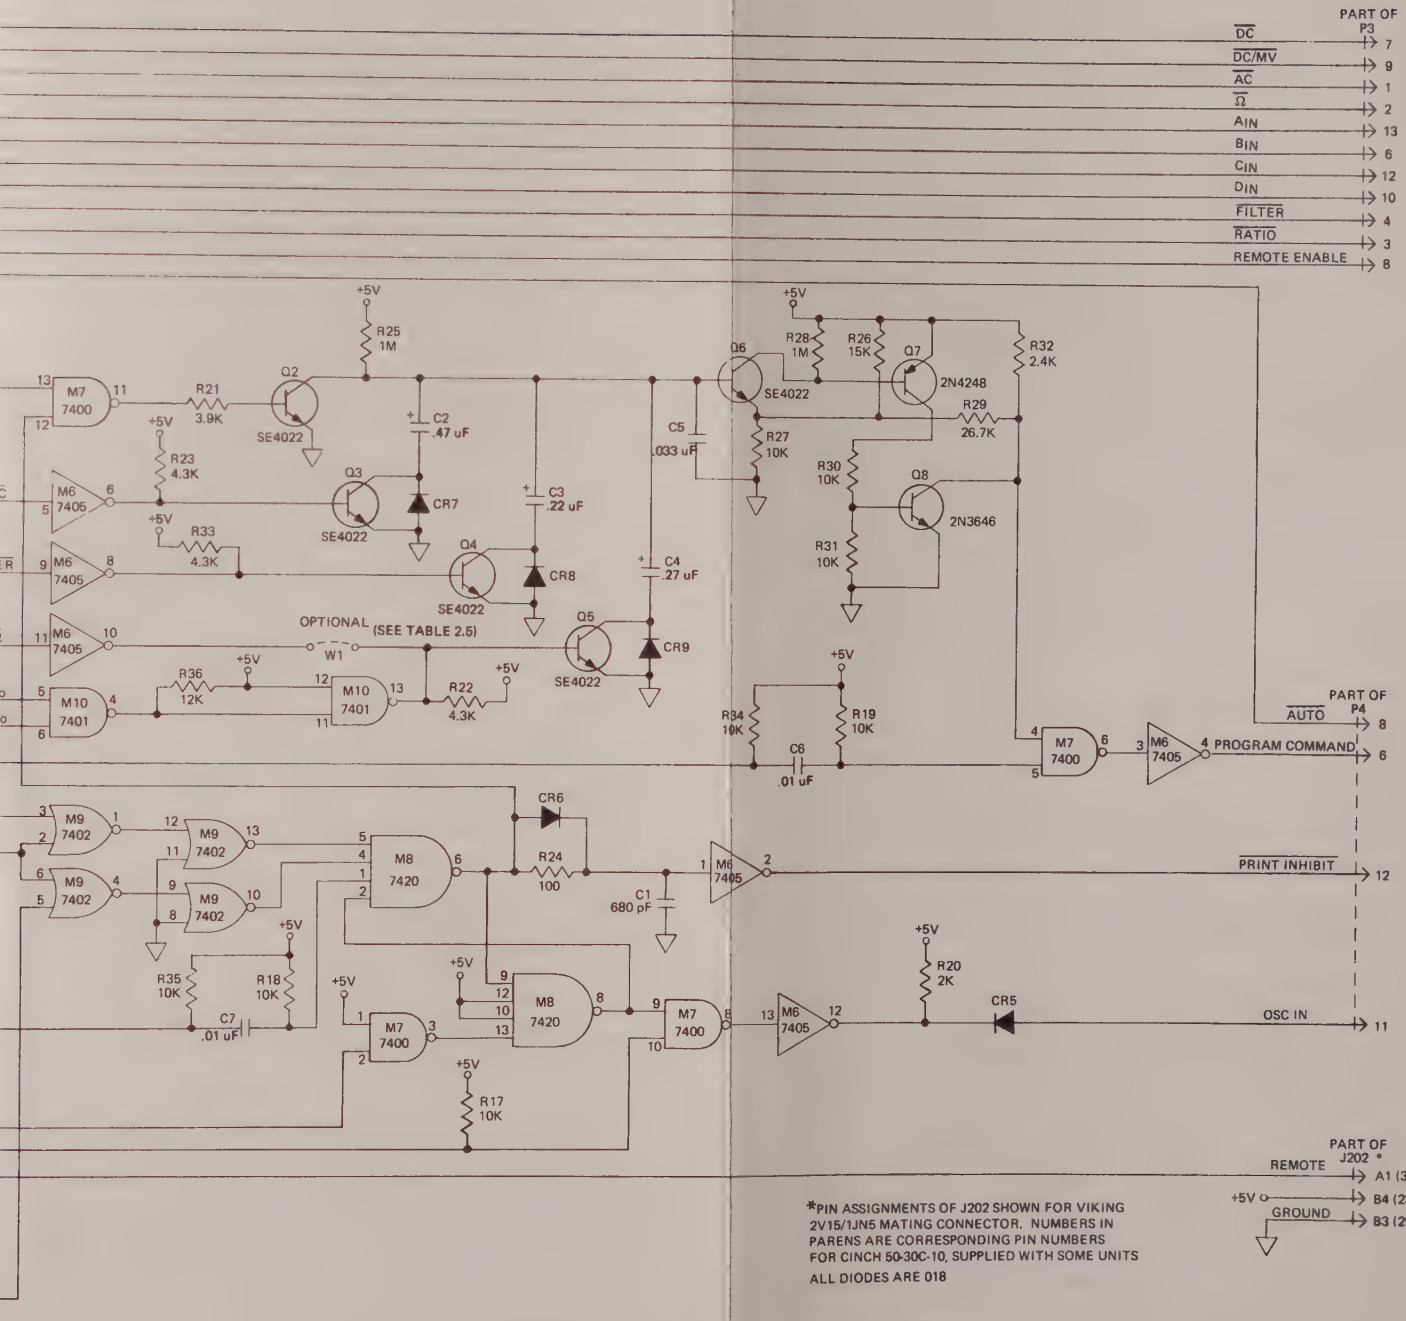

*PIN ASSIGNMENTS OF J202 SHOWN FOR VIKING 2V15/1JN5 MATING CONNECTOR. NUMBERS IN PARENS ARE CORRESPONDING PIN NUMBERS FOR CINCH 50-30C-10, SUPPLIED WITH SOME UNITS

ALL DIODES ARE 018

430959 REV B

Figure 6.23 - Schematic, Program

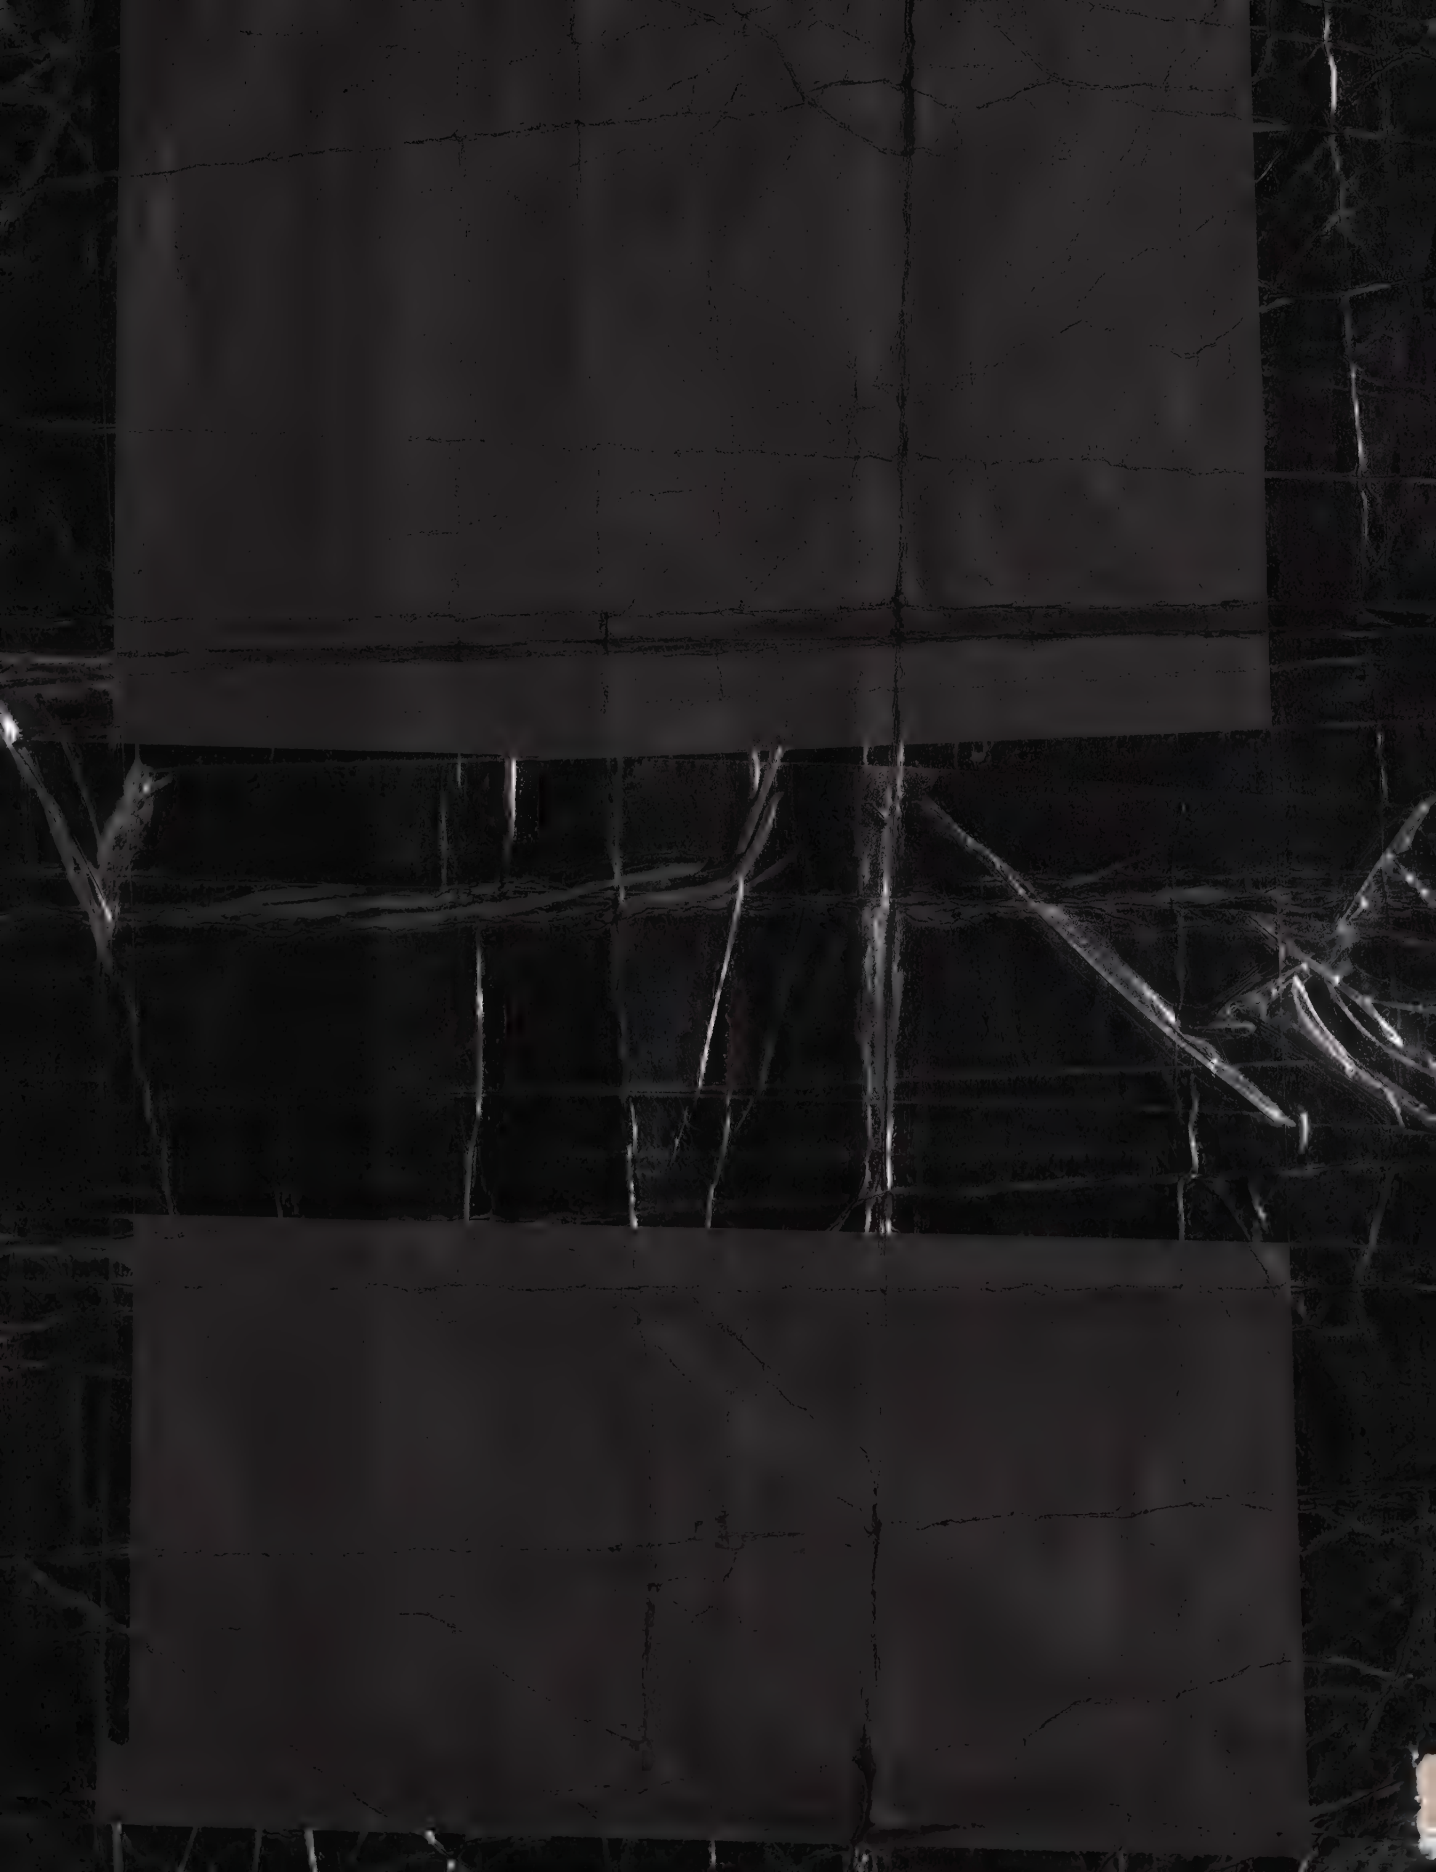

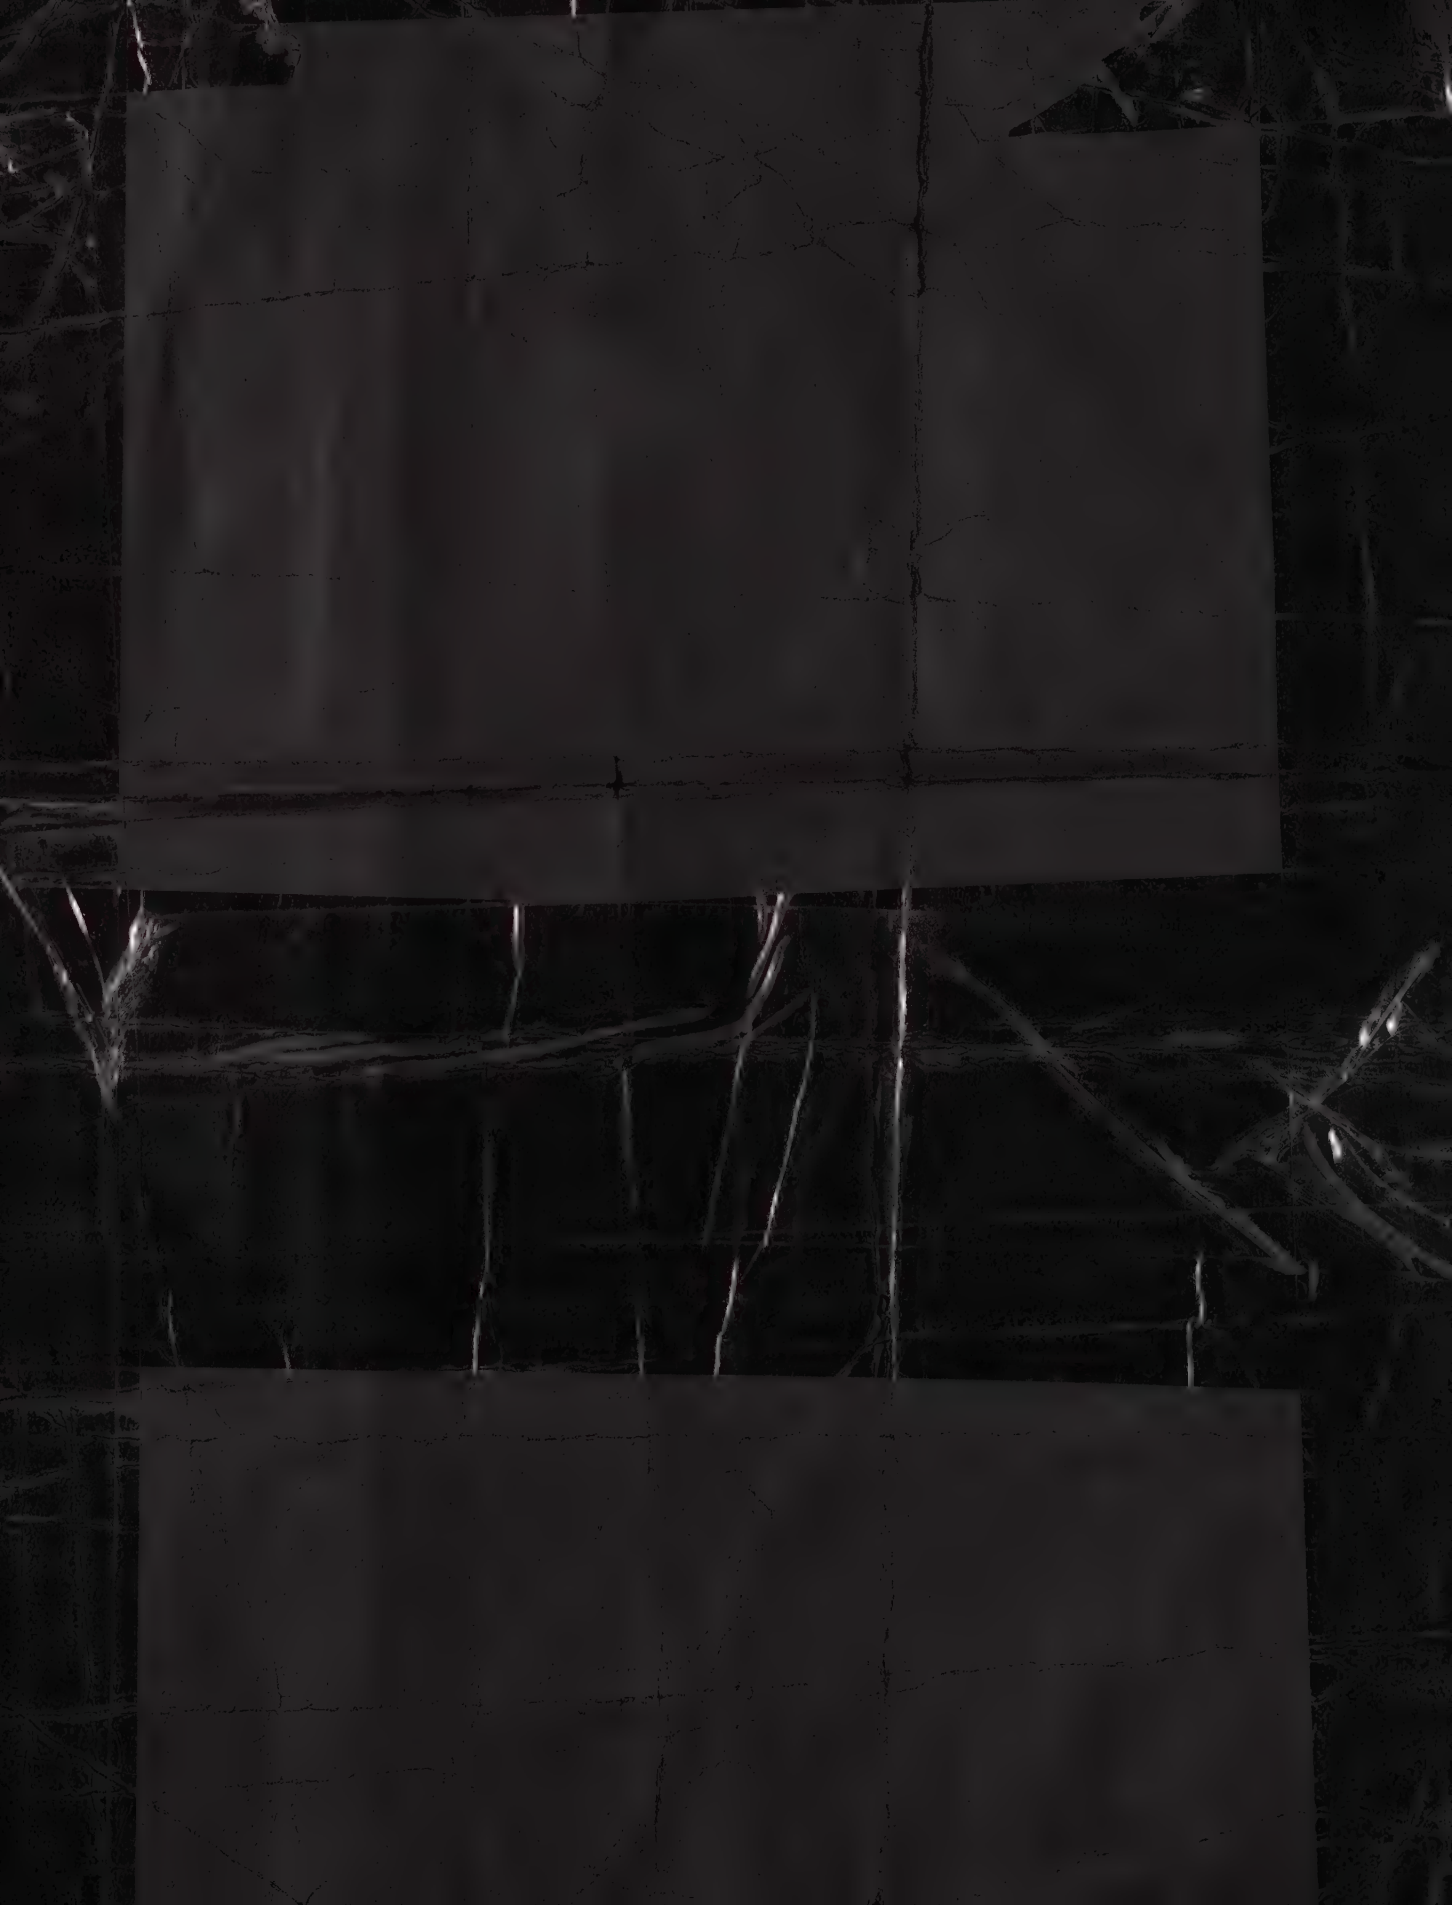

QUAD 2-INPUT NAND GATES SN7400N DIP

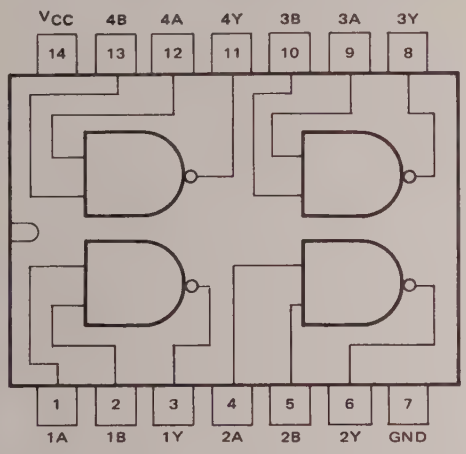



A	B	Y
1	1	0
0	0	1
1	0	1
0	1	1

QUAD 2-INPUT NOR GATES SN7402N DIP

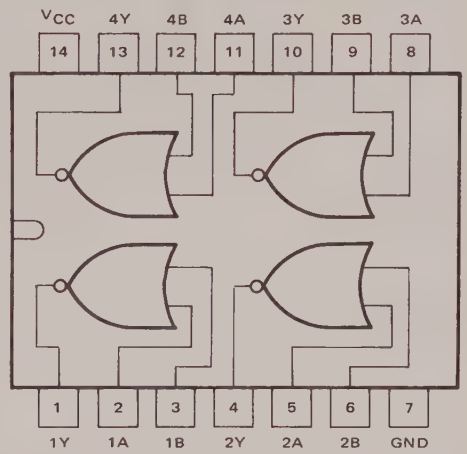

QUAD 2-INPUT NAND GATES SN7401 DIP

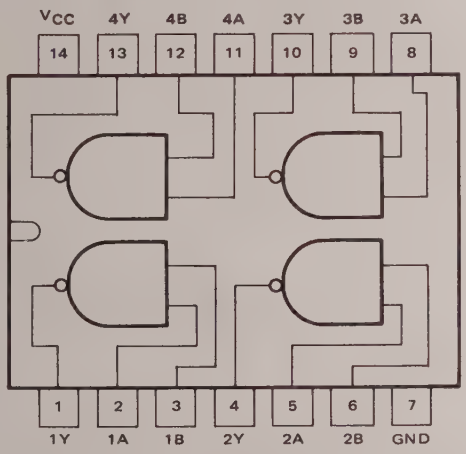

DUAL 4-INPUT NAND GATES SN7440N DIP

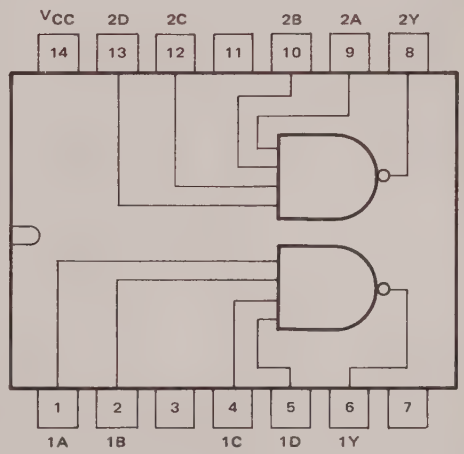

A
1
0
1
1
1

TRIPLE 3-INPUT NAND SN7410N DIP

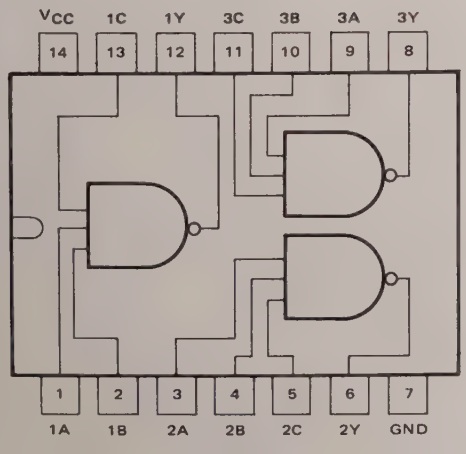



A	B	C	Y
1	1	1	0
1	1	0	1
1	0	1	1
0	1	1	1
All other combinations			1

4-BIT BISTABLE LATCHES SN7475N DIP

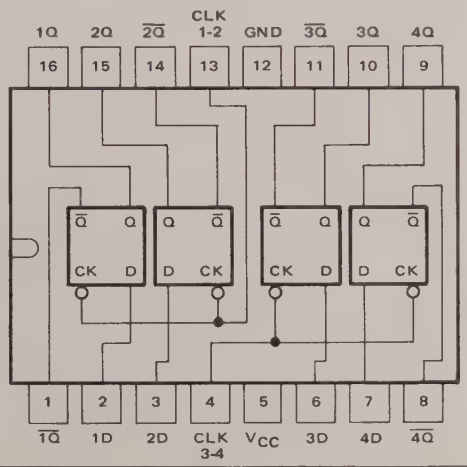

	B	Y
	0	1
	1	0
	0	0
	1	0

B	C	D	Y
1	1	1	0
1	1	1	1
0	1	1	1
1	0	1	1
1	1	0	1
All other combinations			1

t_n	$t_n + 1$
D	Q
1	1
0	0

t time before clock
gative-going transition.

= bit time after t_n

HEX INVERTERS SN7404N DIP SN7405N DIP

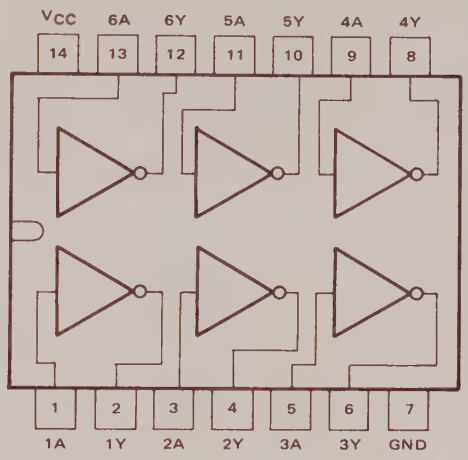



A	Y
1	0
0	1

DUAL J-K FLIP-FLOPS SN7473N DIP

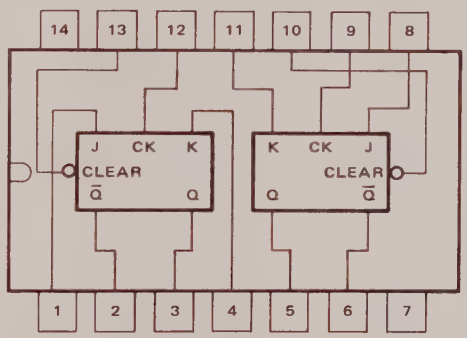

DUAL D-TYPE FLIP-FLOPS SN7474N DIP

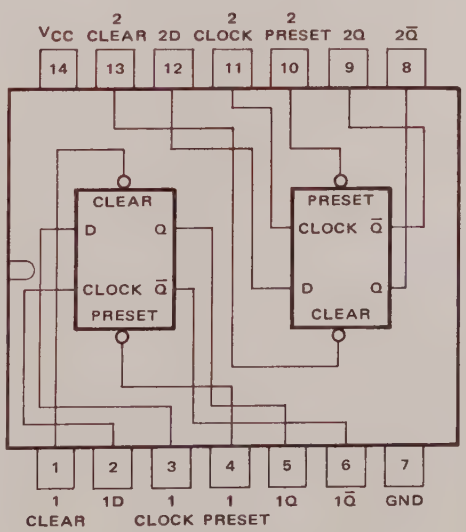

DECADE COUNTER SN7490N DIP

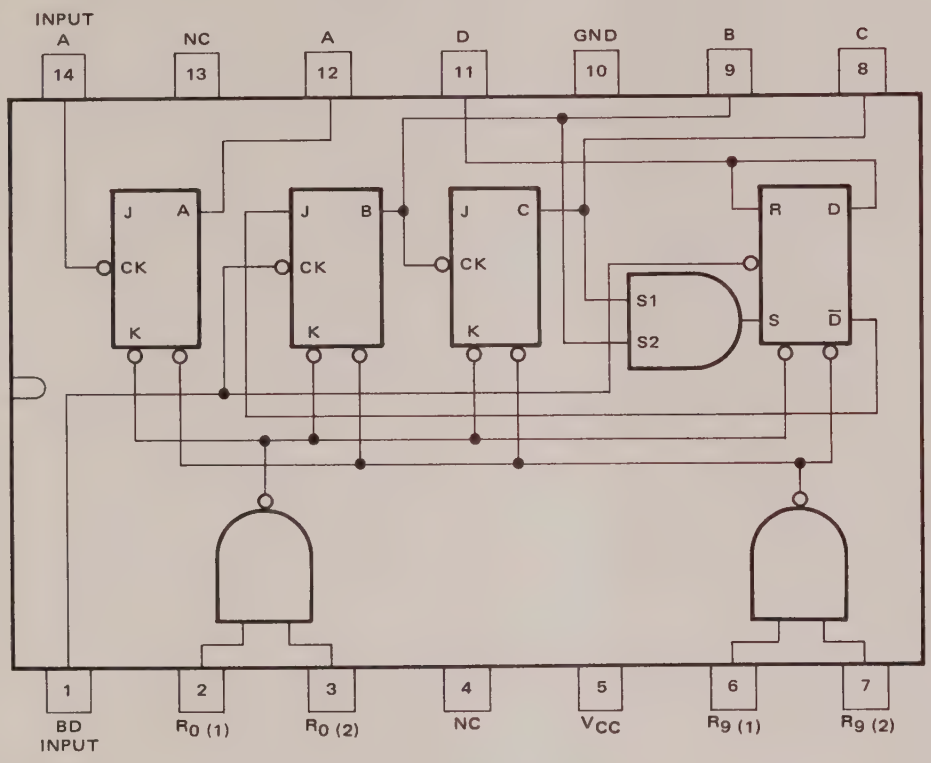

UP/DOWN COUNTER

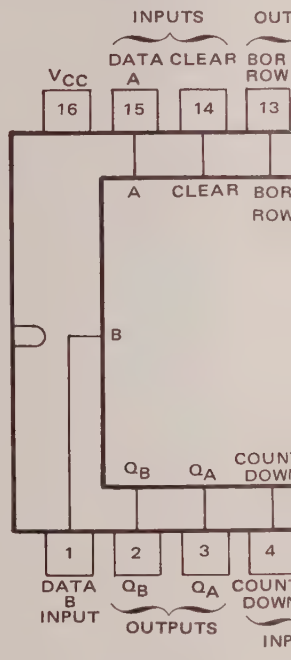

LOGIC: LOW
SETS QA = A,
AND QD = D

Count	OUTPUT			
	D	C	B	A
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1

Output A connected to Input BD for BCD count

RESET INPUTS				OUTPUT			
$R_0(1)$	$R_0(2)$	$R_9(1)$	$R_9(2)$	A	B	C	D
1	1	0	X	0	0	0	0
1	1	X	0	0	0	0	0
X	X	1	1	1	0	0	1
X	0	X	0	COUNT			
0	X	0	X	COUNT			
0	X	X	0	COUNT			
X	0	0	X	COUNT			

X indicates either a logical 1 or logical 0 may be present

SN74192N DIP

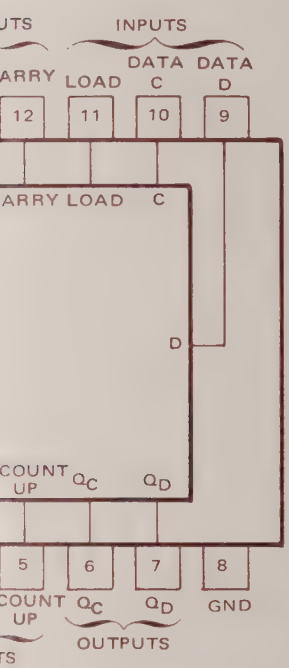

PUT TO LOAD
B, QC = C,

4-BIT FULL ADDER SN7483 DIP

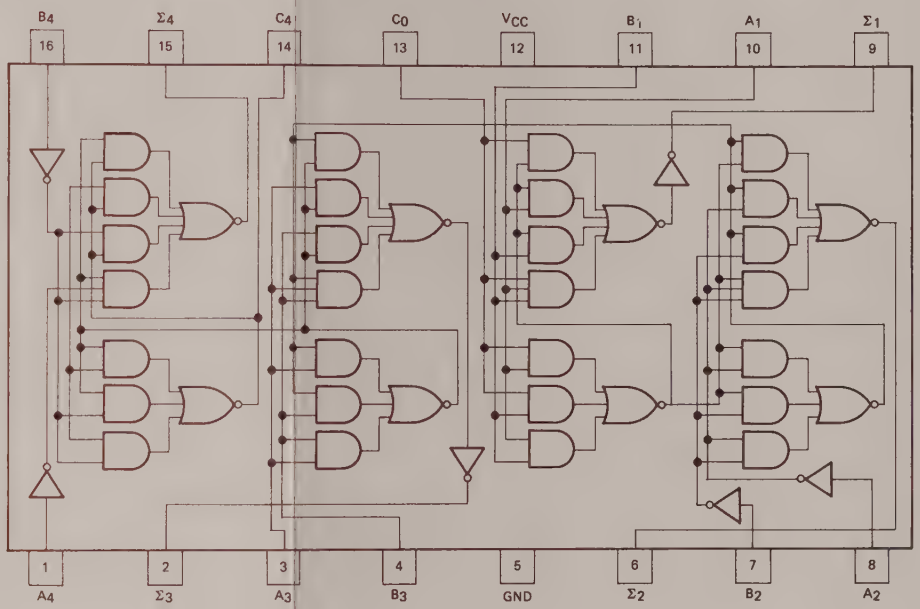

Input conditions at A_1, A_2, B_1, B_2, and C_0 are used to determine outputs Σ_1 and Σ_2, and the value of the internal carry C_2. The values at C_2, A_3, B_3, A_4, and B_4 are then used to determine outputs Σ_3, Σ_4, and C_4.

Figure 6.24 - Integrated Circuits

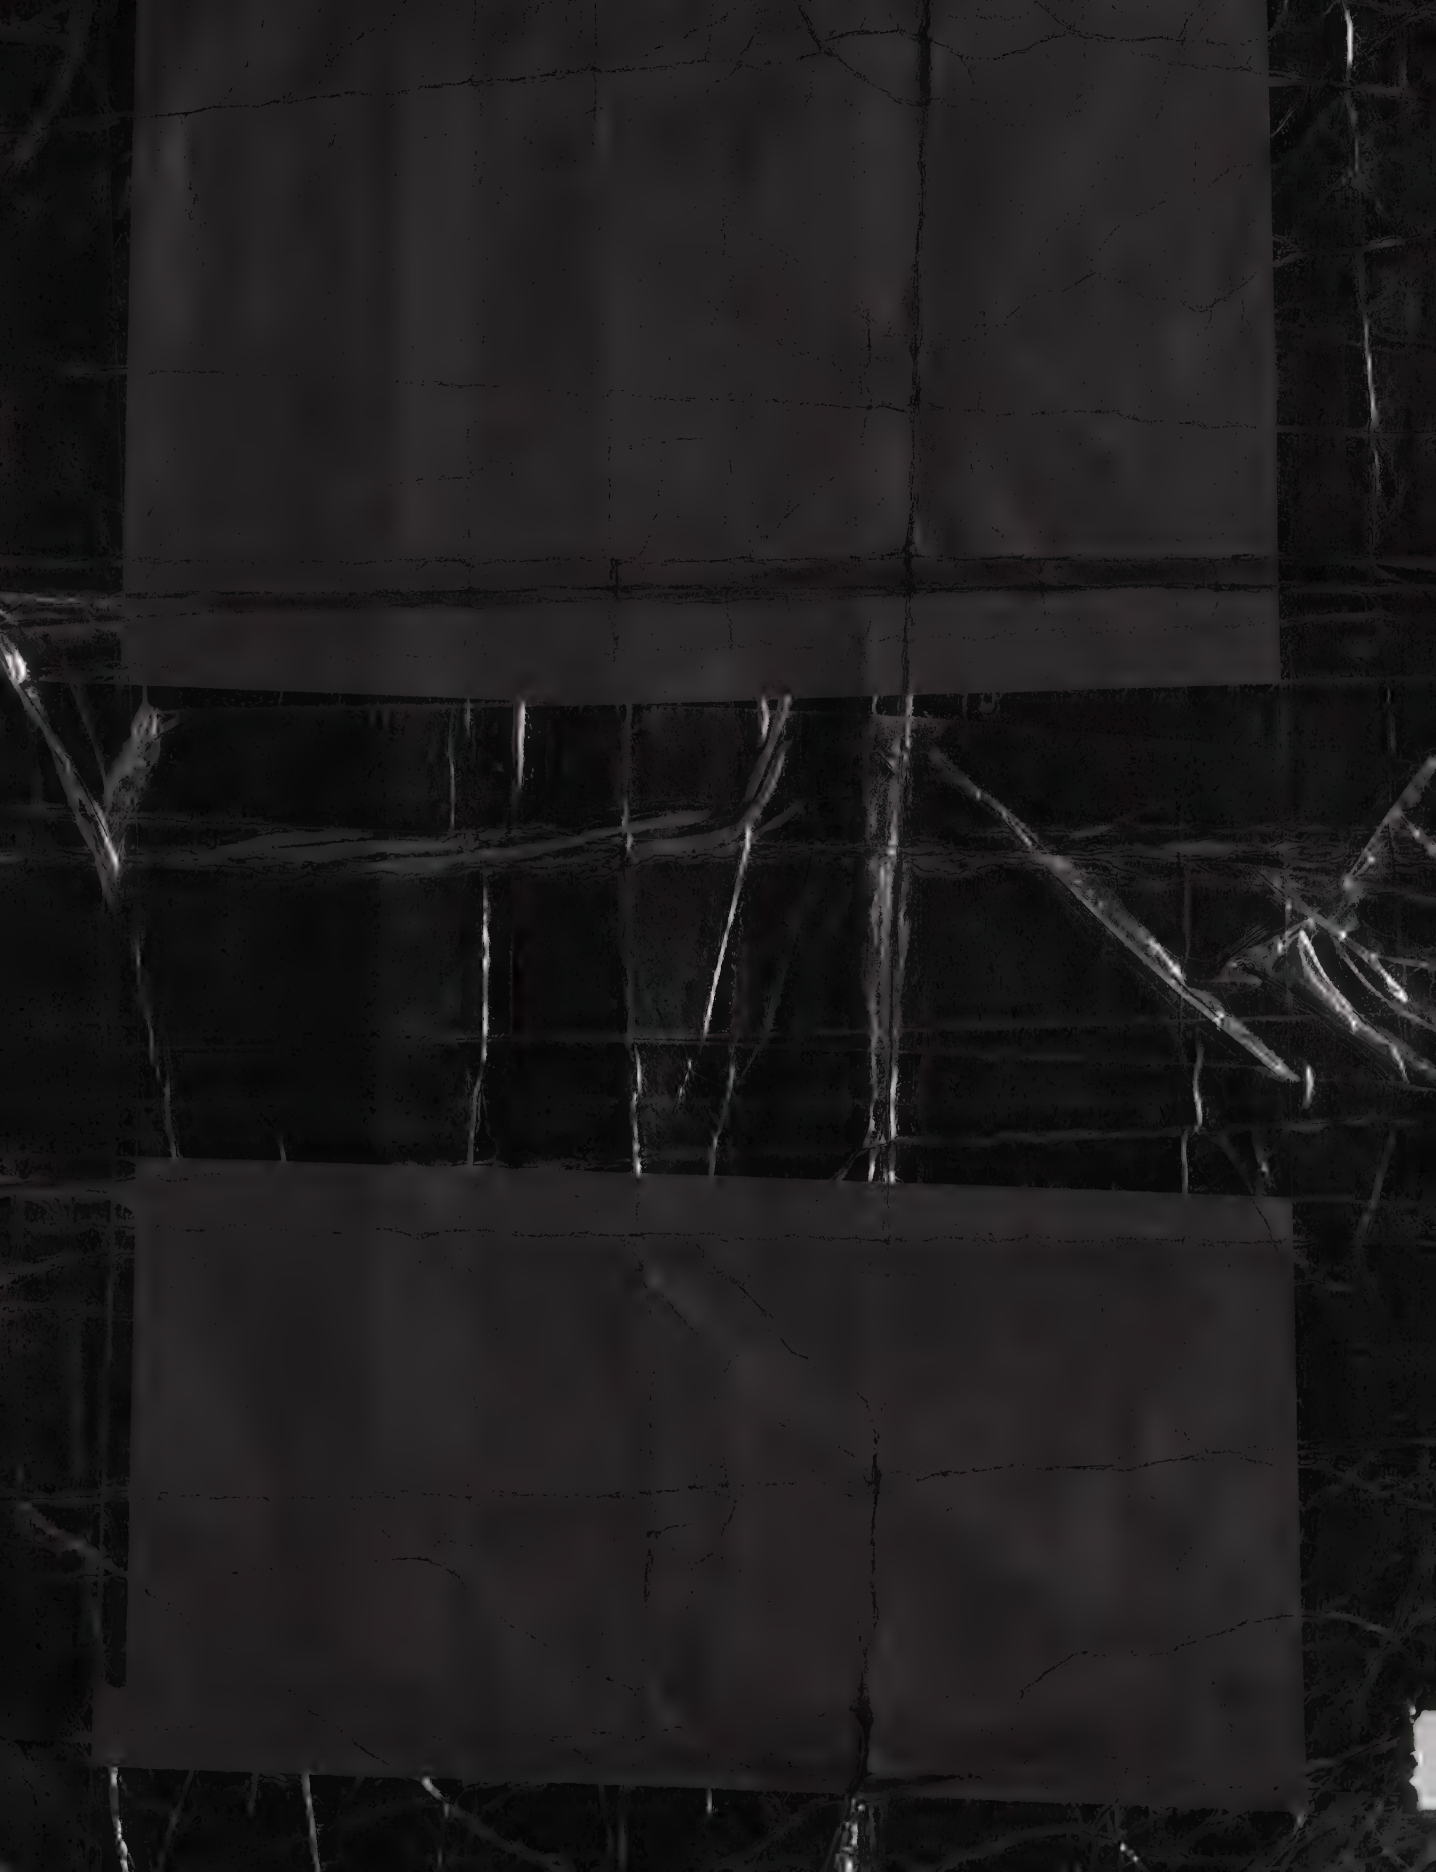

SECTION 7 PARTS LIST

7.1 This section contains lists of replaceable parts arranged in the order of the following subassemblies:

	Page
Interconnection & Logic	7-3
Switching	7-10
Preamp (mV)	7-12
Preamp/Ohms Converter	7-14
Scaling Amp	7-18
AC Converter	7-21
RMS AC Converter	7-27
Isolator	7-31
Digitizer	7-34
Display	7-39
Program	7-43
Chassis-Mounted Parts	7-45

7.2 Manufacturers are identified by FSC numbers listed in table 7.2, "List of Suppliers". The code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1, H4-2, and their supplements.

7.3 Certain parts having 21793 (Dana) listed in the "FSC" column are specially-selected semiconductors. For some of these, standard commercial parts will serve as satisfactory replacements. These Dana parts are identified in table 7.1 along with the commercial equivalent.

Table 7.1

Semiconductor Type:		Equivalent:
007	Diode	Fairchild FD300
009	Transistor	Motorola 2N2905
014	Transistor	Motorola 2N3501
018	Diode	Fairchild 1N916B
021	Transistor	MPS A42

Table 7.2 - List of Suppliers

FSC	NAME
00779	AMP, INC. HARRISBURG, PENNSYLVANIA
01295	TEXAS INSTRUMENTS, INC. DALLAS, TEXAS
02111	SPECTROL ELECTRONICS CORP. CITY OF INDUSTRY, CALIFORNIA
02114	FERROXCUBE CORP. SAUGERTIES, NEW YORK
04222	AEROVOX CORP. (Hi-Q Division) MYRTLE BEACH, SOUTH CAROLINA
04713	MOTOROLA, INC. (Semiconductor Products Division) PHOENIX, ARIZONA
05397	UNION CARBIDE CORP. (Materials Systems Division) CLEVELAND, OHIO
05574	VIKING INDUSTRIES, INC. CHATSWORTH, CALIFORNIA
06665	PRECISION MONOLITHICS SANTA CLARA, CALIFORNIA
07263	FAIRCHILD (Semiconductor Division) MOUNTAIN VIEW, CALIFORNIA
07716	TRW ELECTRONIC COMPONENTS (IRC) BURLINGTON, IOWA
08257	NPC ELECTRONICS CANOGA PARK, CALIFORNIA

Table 7.2 - List of Suppliers continued

FSC	NAME
09023	CORNELL-DUBILIER ELECTRONICS SANFORD, NORTH CAROLINA
10389	CHICAGO SWITCH, INC. CHICAGO, ILLINOIS
11237	CTS KEENE, INC. PASO ROBLES, CALIFORNIA
12406	ELPAC, INC. IRVINE, CALIFORNIA
13571	ELECTRONIC RESEARCH CO. OVERLAND PK., KANSAS
15636	ELEC-TROL, INC. SAUGUS, CALIFORNIA
17856	SILICONIX, INC. SANTA CLARA, CALIFORNIA
18612	VISHAY RESISTOR PRODUCTS MALVERN, PENNSYLVANIA
21551	C-F ELECTRONICS, INC. VAN NUYS, CALIFORNIA
21793	DANA LABORATORIES, INC. IRVINE, CALIFORNIA
22045	JORDAN ELECTRIC CO. VAN NUYS, CALIFORNIA
23095	AZTEC ELECTRONICS, INC. ANAHEIM, CALIFORNIA
24796	PARELCO, INC. SAN JUAN CAPISTRANO, CALIFORNIA
26625	MIAL USA, INC. NUTLEY, NEW JERSEY
27014	NATIONAL SEMI-CONDUCTOR CORP. SANTA CLARA, CALIFORNIA
27556	IMB ELECTRONIC PRODUCTS, INC. SANTA FE SPRINGS, CALIFORNIA
34553	AMPEREX/MEPCO-ELECTRA (Component Division) HAUPPAUGE, NEW YORK
50434	HEWLETT-PACKARD CO. (HPA Division) PALO ALTO, CALIFORNIA
52072	CIRCUIT ASSY. CORP. COSTA MESA, CALIFORNIA
52763	STETTNER-TRUSH CAZENOVIA, NEW YORK
56289	SPRAGUE ELECTRIC CO. (Pacific Division) LOS ANGELES, CALIFORNIA
71471	AEROVOX CORP. (Cinema Plant) MONCKS CORNER, SOUTH CAROLINA
71590	CENTRALAB ELECTRONICS MILWAUKEE, WISCONSIN
71785	TRW ELECTRONICS COMPONENTS (Cinch Division) ELK GROVE VILLAGE, ILLINOIS
72136	ELECTRO MOTIVE MFG. CO., INC. WILLIMANTIC, CONNECTICUT
72982	ERIE TECHNOLOGICAL PRODUCTS, INC. ERIE, PENNSYLVANIA
73138	BECKMAN INSTRUMENTS, INC. FULLERTON, CALIFORNIA
73445	AMPEREX ELECTRONIC CORP. HICKSVILLE, LONG ISLAND, NEW YORK
74970	E. F. JOHNSON CO. WASECA, MINNESOTA
79727	C-W INDUSTRIES WARMINSTER, PENNSYLVANIA
80131	ELECTRONICS INDUSTRIES ASSOC. WASHINGTON, D.C.
81349	MILITARY SPECIFICATION
82389	SWITCHCRAFT, INC. CHICAGO, ILLINOIS
87730	UNITED MINERAL & CHEMICAL CORP. NEW YORK CITY, NEW YORK
91293	JOHANSON MFG. CO. BOONTON, NEW JERSEY
95275	VITRAMON, INC. BRIDGEPORT, CONNECTICUT
99800	AMERICAN PRECISION INDUSTRIES, INC. (Delevan Division) EAST AURORA, NEW YORK

403433 -- Assy., PCB, INTERCONNECTION & LOGIC

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
CR1	211083	DIODE SILICO 018	21793	211083
CR2	211083	DIODE SILICO 018	21793	211083
CR3	211083	DIODE SILICO 018	21793	211083
CR6	211083	DIODE SILICO 018	21793	211083
CR7	211083	DIODE SILICO 018	21793	211083
CR8	211083	DIODE SILICO 018	21793	211083
CR9	211083	DIODE SILICO 018	21793	211083
CR10	211083	DIODE SILICO 018	21793	211083
CR11	211083	DIODE SILICO 018	21793	211083
CR12	211083	DIODE SILICO 018	21793	211083
CR13	211083	DIODE SILICO 018	21793	211083
CR14	211083	DIODE SILICO 018	21793	211083
CR15	210004	DIODE SILICO 1N4004	81349	1N4004
CR16	210004	DIODE SILICO 1N4004	81349	1N4004
CR17	210004	DIODE SILICO 1N4004	81349	1N4004
CR18	210004	DIODE SILICO 1N4004	81349	1N4004
CR19	220015	DIODE SILICO ZENER 1N967B	81349	1N967B
CR20	211083	DIODE SILICO 018	21793	211083
CR21	211083	DIODE SILICO 018	21793	211083
CR22	220015	DIODE SILICO ZENER 1N967B	81349	1N967B
CR23	211083	DIODE SILICO 018	21793	211083
CR25	210004	DIODE SILICO 1N4004	81349	1N4004
CR26	210004	DIODE SILICO 1N4004	81349	1N4004
CR27	210004	DIODE SILICO 1N4004	81349	1N4004
CR28	210004	DIODE SILICO 1N4004	81349	1N4004
CR29	210004	DIODE SILICO 1N4004	81349	1N4004
CR30	210004	DIODE SILICO 1N4004	81349	1N4004
CR31	210004	DIODE SILICO 1N4004	81349	1N4004
CR32	220007	DIODE SILICO ZENER 1N751A	81349	1N751A
CR33	211083	DIODE SILICO 018	21793	211083
CR34	220040	DIODE ZENER 1N753A	81349	1N753A
CR35	211083	DIODE SILICO 018	21793	211083

403433 – Assy., PCB, INTERCONNECTION & LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
C1	101145	CAP	CERAM	100 PFD	500 V	10%	04222	TCD-DI-1N5600-100
C2	101099	CAP	CERAM	680 PFD	1000 V	10%	71471	SCD2X5F
C3	110071	CAP	TANTA	1 MFD	35 V	10%	05397	T368A105K035
C4	110129	CAP	TANTA	.1 MFD	35 V	20%	05397	T368A104M035AS
C5	110129	CAP	TANTA	.1 MFD	35 V	20%	05397	T368A104M035AS
C6	110067	CAP	ELECT	2000 MFD	35 V		87730	2000DXW35
C7	110067	CAP	ELECT	2000 MFD	35 V		87730	2000DXW35
C8	110036	CAP	ELECT	22 MFD	63 V		34553	ET220X063A5
C9	110036	CAP	ELECT	22 MFD	63 V		34553	ET220X063A5
C10	110036	CAP	ELECT	22 MFD	63 V		34553	ET220X063A5
C11	110036	CAP	ELECT	22 MFD	63 V		34553	ET220X063A5
C18	110069	CAP	TANTA	10 MFD	10 V	10%	05397	K10P10K
C19	110127	CAP	TANTA	22 MFD	6 V	20%	05397	T368B226M006AS
C20*	130076	CAP	MICA	200 PFD	500 V	5%	72136	DM15-201J
C21	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C23	110128	CAP	ELECT	6000 MFD	10 V	–10%+75%	56289	36D602G010AA2A
C24	110127	CAP	TANTA	22 MFD	6 V	20%	05397	T368B226M006AS
C25	110127	CAP	TANTA	22 MFD	6 V	20%	05397	T368B226M006AS
C36	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
J1	453505	CONN	12 P	MODIFIED	453505		21793	453505
J2	600280	CONN	12 P		252-12-30-160		71785	252-12-30-160
J3	920795	SOCKET			14 PIN		52072	CA-14S-TSD-BC
J4	920795	SOCKET			14 PIN		52072	CA-14S-TSD-BC
J5	600228	CONN	18 P		252-18-30-160		71785	252-18-30-160
J6	600671	CONN	6 PIN		252-06-30-160		71785	252-06-30-160
J7	600280	CONN	12 P		252-12-30-160		71785	252-12-30-160
J8	600670	CONN	10 P		252-10-30-160		71785	252-10-30-160
J9	600280	CONN	12 P		252-12-30-160		71785	252-12-30-160
J11	600280	CONN	12 P		252-12-30-160		71785	252-12-30-160
J12	600280	CONN	12 P		252-12-30-160		71785	252-12-30-160
K1	310063	RELAY	LOW LEVEL, LOW VOLTAGE				24796	R10-E1221-1
K2	310063	RELAY	LOW LEVEL, LOW VOLTAGE				24796	R10-E1221-1
K3	310063	RELAY	LOW LEVEL, LOW VOLTAGE				24796	R10-E1221-1
K4	310076	RELAY	1000V CONTACTS		28 V		24796	R10-E1297-2
L1	310062	CHOKE		22 UH	1537-44		99800	1537-44

*In 50 Hz units, C20 is:

C20	130144	CAP	MICA	270 pF	100 V	5%	72136	DM10271J

403433 – Assy., PCB, INTERCONNECTION & LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION		FSC	MANU P/N
M1	230034	INTEGRATED CIRCUIT	74141	07263	74141
M1-M3	920419	INTEGRATED CIRCUIT SOCKET	16 PIN	52072	CA-16S-TSDE
M2	230034	INTEGRATED CIRCUIT	74141	07263	74141
M3	230034	INTEGRATED CIRCUIT	74141	07263	74141
M4	230034	INTEGRATED CIRCUIT	74141	07263	74141
M4	920419	INTEGRATED CIRCUIT SOCKET	16 PIN	52072	CA-16S-TSDE
M5	230038	INTEGRATED CIRCUIT	SN74H11N	01295	SN74H11N
M5	920460	INTEGRATED CIRCUIT SOCKET	14 PIN	52072	CA-14S-TSDE
M6	230028	INTEGRATED CIRCUIT	7400	01295	7400
M6	920460	INTEGRATED CIRCUIT SOCKET	14 PIN	52072	CA-14S-TSDE
M7	230065	INTEGRATED CIRCUIT	7475	01295	7475
M7-M9	920419	INTEGRATED CIRCUIT SOCKET	16 PIN	52072	CA-16S-TSDE
M8	230065	INTEGRATED CIRCUIT	7475	01295	7475
M9	230065	INTEGRATED CIRCUIT	7475	01295	7475
M10	230065	INTEGRATED CIRCUIT	7475	01295	7475
M10	920419	INTEGRATED CIRCUIT SOCKET	16 PIN	52072	CA-16S-TSDE
M11	230030	INTEGRATED CIRCUIT	7402	01295	7402
M11-M27	920460	INTEGRATED CIRCUIT SOCKET	14 PIN	52072	CA-14S-TSDE
M12	230035	INTEGRATED CIRCUIT	7473	01295	7473
M13	230037	INTEGRATED CIRCUIT	7490	07263	7490
M14	230037	INTEGRATED CIRCUIT	7490	07263	7490
M15	230037	INTEGRATED CIRCUIT	7490	07263	7490
M16	230037	INTEGRATED CIRCUIT	7490	07263	7490
M17	230028	INTEGRATED CIRCUIT	7400	01295	7400
M18	230030	INTEGRATED CIRCUIT	7402	01295	7402
M19	230072	INTEGRATED CIRCUIT	7474	01295	7474
M20	230035	INTEGRATED CIRCUIT	7473	01295	7473
M21	230028	INTEGRATED CIRCUIT	7400	01295	7400
M22	230063	INTEGRATED CIRCUIT	SN7440N	01295	SN7440N
M23	230029	INTEGRATED CIRCUIT	7401	01295	7401
M24	230064	INTEGRATED CIRCUIT	7404	01295	7404
M25	230030	INTEGRATED CIRCUIT	7402	01295	7402
M26	230072	INTEGRATED CIRCUIT	7474	01295	7474
M27	230031	INTEGRATED CIRCUIT	7410	01295	7410
M28	230064	INTEGRATED CIRCUIT	7404	01295	7404
M28	920460	INTEGRATED CIRCUIT SOCKET	14 PIN	52072	CA-14S-TSDE
M29	230036	INTEGRATED CIRCUIT	7483	07263	7483
M29-M30	920419	INTEGRATED CIRCUIT SOCKET	16 PIN	52072	CA-16S-TSDE
M30	230067	INTEGRATED CIRCUIT	74192	07263	74192
M31	230036	INTEGRATED CIRCUIT	7483	07263	7483
M31	920419	INTEGRATED CIRCUIT SOCKET	16 PIN	52072	CA-16S-TSDE
M32	230028	INTEGRATED CIRCUIT	7400	01295	7400
M32	920460	INTEGRATED CIRCUIT SOCKET	14 PIN	52072	CA-14S-TSDE

403433 – Assy., PCB, INTERCONNECTION & LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
Q1	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q2	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q3	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q4	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q5	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q6	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q7	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q8	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q9	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q10	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q11	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q12	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q13	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q14	200129	TRANS SILICO NPN SE4020	07263	SE4020
Q17	200129	TRANS SILICO NPN SE4020	07263	SE4020
Q18	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q19	200043	TRANS NPN 200043	21793	200043
Q20	200043	TRANS NPN 200043	21793	200043
Q21	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q22	200043	TRANS NPN 200043	21793	200043
Q23	200154	TRANS SILICO PNP MJE370	04713	MJE370
Q24	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q25	200155	TRANS SILICO NPN MJE520	04713	MJE520
Q26	200075	TRANS 2N4870	81349	2N4870
Q27	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q28	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q29	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q30	200043	TRANS NPN 200043	21793	200043
Q31	200052	TRANS SILICO PNP 009	21793	200052
OCI-1	250000	ISOLATOR OPTICALLY COUPLED	01295	TIL108
OCI-2	250000	ISOLATOR OPTICALLY COUPLED	01295	TIL108
R1	001681	RES CARBON 7.5 K 5% 1/2W	81349	RC20GF752J
R2	001681	RES CARBON 7.5 K 5% 1/2W	81349	RC20GF752J
R3	000750	RES CARBON 75 OHM 5% 1/4W	81349	RC07GF750J
R4	000750	RES CARBON 75 OHM 5% 1/4W	81349	RC07GF750J
R5	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R6	001681	RES CARBON 7.5 K 5% 1/2W	81349	RC20GF752J
R7	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R8	000432	RES CARBON 4.3 K 5% 1/4W	81349	RC07GF432J

403433 – Assy., PCB, INTERCONNECTION & LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION				FSC	MANU P/N
R9	001681	RES	CARBON	7.5 K	5% 1/2W	81349	RC20GF752J
R10	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R11	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R12	001681	RES	CARBON	7.5 K	5% 1/2W	81349	RC20GF752J
R13	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R14	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R15	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R16	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R17	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R18	000822	RES	CARBON	8.2 K	5% 1/4W	81349	RC07GF822J
R19	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R20	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R21	000201	RES	CARBON	200 OHM	5% 1/4W	81349	RC07GF201J
R22	000201	RES	CARBON	200 OHM	5% 1/4W	81349	RC07GF201J
R23	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R24	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R25	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R26	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R27	000200	RES	CARBON	20 OHM	5% 1/4W	81349	RC07GF200J
R28	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R29	000200	RES	CARBON	20 OHM	5% 1/4W	81349	RC07GF200J
R30	030015	RES	WW	100 K	1% 10 W	21551	M-100
R31	000203	RES	CARBON	20 K	5% 1/4W	81349	RC07GF203J
R32	010334	RES	METAL	MATCHED SET		21793	010334
R33	040187	POT	CERMET	500 OHM	20% 3/4W	11237	360T501B
R34	010334	RES	METAL	MATCHED SET		21793	010334
R35	000203	RES	CARBON	20 K	5% 1/4W	81349	RC07GF203J
R36	000182	RES	CARBON	1.8 K	5% 1/4W	81349	RC07GF182J
R37	040187	POT	CERMET	500 OHM	20% 3/4W	11237	360T501B
R38	010607	RES	METAL	17.999 K	.05%	18612	V53-1
R39	001721	RES	CARBON	2.2 OHM	5% 1/2W	81349	RC20GF2R2J
R40	010608	RES	METAL	1798.9 OHM	.05%	18612	V53-1
R41	010658	RES	METAL	199.8 OHM	.05%	18612	V53-1
R42	000106	RES	CARBON	10 M	5% 1/4W	81349	RC07GF106J
R43	000106	RES	CARBON	10 M	5% 1/4W	81349	RC07GF106J
R44	040113	POT	CERMET	100 K	10%	73138	89PV100K
R45	010645	RES	METAL	2.37 K	1% 1/10W	81349	RN55C2371F
R46	000516	RES	CARBON	51 M	5% 1/4W	81349	RC07GF516J
R47	040113	POT	CERMET	100 K	10%	73138	89PV100K
R48	000332	RES	CARBON	3.3 K	5% 1/4W	81349	RC07GF332J

403433 – Assy., PCB, INTERCONNECTION & LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
R49	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R50	000512	RES CARBON 5.1 K 5% 1/4W	81349	RC07GF512J
R51	000122	RES CARBON 1.2 K 5% 1/4W	81349	RC07GF122J
R52	000122	RES CARBON 1.2 K 5% 1/4W	81349	RC07GF122J
R53	000183	RES CARBON 18 K 5% 1/4W	81349	RC07GF183J
R54	001738	RES CARBON 1.5 OHM 5% 1/2W	81349	RC20GF1R5J
R55	001738	RES CARBON 1.5 OHM 5% 1/2W	81349	RC20GF1R5J
R56	001737	RES CARBON FSV 5% 1/4W	21793	001737
R57	000151	RES CARBON 150 OHM 5% 1/4W	81349	RC07GF151J
R58	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R59	000512	RES CARBON 5.1 K 5% 1/4W	81349	RC07GF512J
R60	000202	RES CARBON 2 K 5% 1/4W	81349	RC07GF202J
R61	000121	RES CARBON 120 OHM 5% 1/4W	81349	RC07GF121J
R62	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R63	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R64	000511	RES CARBON 510 OHM 5% 1/4W	81349	RC07GF511J
R65	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R66	000202	RES CARBON 2 K 5% 1/4W	81349	RC07GF202J
R67	020576	RES WW .24 OHM 5% 2 W	07716	BWH Series
R68	040188	POT CERMET 100 K 20%	11237	360T104B
R69	010645	RES METAL 2.37 K 1% 1/10W	81349	RN55C2371F
R70	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R71	040113	POT CERMET 100 K 10%	73138	89PV100K
R72	001737	RES CARBON FSV 5% 1/4W	21793	001737
R73	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R74	000202	RES CARBON 2 K 5% 1/4W	81349	RC07GF202J
R75	000101	RES CARBON 100 OHM 5% 1/4W	81349	RC07GF101J
R76	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R77	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
S1	600684	SWITCH PUSHBUTTON	71590	
S2	600684	SWITCH PUSHBUTTON	71590	
S3	600682	SWITCH PUSHBUTTON	71590	
S4	600682	SWITCH PUSHBUTTON	71590	
S5	600683	SWITCH PUSHBUTTON	71590	
S6	600683	SWITCH PUSHBUTTON	71590	
TP1-TP7	600786	POST, MACHINE APPLIED STRIP 1-87022-0	00779	1-87022-0
TP8	600786	POST, MACHINE APPLIED STRIP 1-87022-0	00779	1-87022-0
T1	300087	TRANSFORMER PULSE	21793	300087
T2	300087	TRANSFORMER PULSE	21793	300087
T3	300087	TRANSFORMER PULSE	21793	300087

403433 – Assy., PCB, INTERCONNECTION & LOGIC *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
V1	920466	TUBE READOUT ZM-1005	73445	ZM-1005
V2	920466	TUBE READOUT ZM-1005	73445	ZM-1005
V3	920466	TUBE READOUT ZM-1005	73445	ZM-1005
V4	920466	TUBE READOUT ZM-1005	73445	ZM-1005
V5	920466	TUBE READOUT ZM-1005	73445	ZM-1005
W1	600245	JUMPER L-2007-1LP		L-2007-1LP
Y1	920513	CRYSTAL 2.4 MHz (60 Hz units only)	13571	2.4 MHz
Y1	920599	CRYSTAL 2.0 MHz (50 Hz units only)	13571	2.0 MHz

403431 – Assy., PCB, SWITCHING

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
CR5	211083	DIODE	SILICO		018		21793	211083
CR6	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR7	211083	DIODE	SILICO		018		21793	211083
CR8	211083	DIODE	SILICO		018		21793	211083
CR10	211083	DIODE	SILICO		018		21793	211083
CR11	211083	DIODE	SILICO		018		21793	211083
CR15	211083	DIODE	SILICO		018		21793	211083
C1	100040	CAP	CERAM	200 PFD	1000 V	20%	56289	C023B102E201M
K1	310110	RELAY			5 V		24796	R10-E2445-1
K2	310110	RELAY			5 V		24796	R10-E2445-1
K3	310110	RELAY			5 V		24796	R10-E2445-1
M1	230073	INTEGRATED CIRCUIT			7405		01295	7405
M2	230029	INTEGRATED CIRCUIT			7401		01295	7401
M3	230073	INTEGRATED CIRCUIT			7405		01295	7405
M4	230034	INTEGRATED CIRCUIT			74141		07263	74141
Q1	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646
Q2	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646
Q3	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646
Q4	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646.
Q5	200088	TRANS	SILICO	PNP	2N4248		80131	2N4248
Q6	200088	TRANS	SILICO	PNP	2N4248		80131	2N4248
Q7	200088	TRANS	SILICO	PNP	2N4248		80131	2N4248
Q8	200088	TRANS	SILICO	PNP	2N4248		80131	2N4248
Q9	200043	TRANS		NPN	200043		21793	200043
Q10	200043	TRANS		NPN	200043		21793	200043
Q11	200043	TRANS		NPN	200043		21793	200043
Q12	200043	TRANS		NPN	200043		21793	200043
Q13	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646
Q14	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646
Q15	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646
R1	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R2	000182	RES	CARBON	1.8 K		5% 1/4W	81349	RC07GF182J
R3	000182	RES	CARBON	1.8 K		5% 1/4W	81349	RC07GF182J
R4	000182	RES	CARBON	1.8 K		5% 1/4W	81349	RC07GF182J
R5	000182	RES	CARBON	1.8 K		5% 1/4W	81349	RC07GF182J
R6	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R7	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J

403431 – Assy., PCB, SWITCHING *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
R8	000750	RES CARBON 75 OHM 5% 1/4W	81349	RC07GF750J
R9	000750	RES CARBON 75 OHM 5% 1/4W	81349	RC07GF750J
R10	000750	RES CARBON 75 OHM 5% 1/4W	81349	RC07GF750J
R11	000750	RES CARBON 75 OHM 5% 1/4W	81349	RC07GF750J
R12	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R13	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R14	000203	RES CARBON 20 K 5% 1/4W	81349	RC07GF203J
R15	000203	RES CARBON 20 K 5% 1/4W	81349	RC07GF203J
R16	000203	RES CARBON 20 K 5% 1/4W	81349	RC07GF203J
R17	000203	RES CARBON 20 K 5% 1/4W	81349	RC07GF203J
R18	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R19	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R20	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R21	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R22	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R23	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R24	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R25	001758	RES CARBON 330 OHM 5% 1 W	81349	RC32GF331J
R26	001890	RES CARBON FSV 5% 1/2W	21793	001890
R27	000472	RES CARBON 4.7 K 5% 1/4W	81349	RC07GF472J
R28	000472	RES CARBON 4.7 K 5% 1/4W	81349	RC07GF472J
R29	000472	RES CARBON 4.7 K 5% 1/4W	81349	RC07GF472J
R30	000472	RES CARBON 4.7 K 5% 1/4W	81349	RC07GF472J
R31	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R32	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R33	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R34	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R35	000305	RES CARBON 3 M 5% 1/4W	81349	RC07GF305J
OCI1	250000	ISOLATOR OPTICALLY COUPLED	01295	TIL108
OCI2	250000	ISOLATOR OPTICALLY COUPLED	01295	TIL108
OCI3	250000	ISOLATOR OPTICALLY COUPLED	01295	TIL108
OCI4	250000	ISOLATOR OPTICALLY COUPLED	01295	TIL108

403464 – Assy., PCB, PREAMP (MV)

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
CR1	211083	DIODE	SILICO		018		21793	211083
CR2	211083	DIODE	SILICO		018		21793	211083
CR3	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR4	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
C1	121091	CAP	MYLAR	.033 MFD	100 V	10%	09023	WMF1S33
C2	100008	CAP	CERAM	82 PFD	500 V	10%	71471	ETCD-DI-1(N5600)
C3	120001	CAP	MYLAR	.0033 MFD	100 V	10%	09023	WMF1D33
C4	121093	CAP	MYLAR	.047 MFD	100 V	10%	09023	WMF1S47
C5	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C6	100012	CAP	CERAM	33 PFD	500 V	10%	71471	TCD-DI-1(N750)
C7	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C8	100012	CAP	CERAM	33 PFD	500 V	10%	71471	TCD-DI-1(N750)
M1	403494	KIT, OPERATIONAL AMPLIFIER			μA725		21793	403494
M2	230054	INTEGRATED CIRCUIT			LM301A		27014	LM301A
M3	230054	INTEGRATED CIRCUIT			LM301A		27014	LM301A
Q1	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q2	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q3	200088	TRANS	SILICO	PNP	2N4248		80131	2N4248
Q4	200035	TRANS	SILICO	NPN	014		21793	200035
Q5	200035	TRANS	SILICO	NPN	014		21793	200035
Q6	201084	TRANS	GERMAN	PNP	2N1304		81349	2N1304
Q7	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q8	200137	TRANS	SELECTED		2N4248		80131	2N4248
R1	403494	KIT, OPERATIONAL AMPLIFIER			μA725		21793	403494
R2	021154	RES	WW	10 K		3% 3 W	21551	M-200
R3	021154	RES	WW	10 K		3% 3 W	21551	M-200
R4	020611	RES	METAL	200 OHM		.02% 1/8W	18612	V53-3M
R5	020614	RES	WW	19.81 K		.02% .15W	22045	J-110
R6	010732	RES	METAL	4.8 K		1%	18612	V53-1M Series
R7	011178	RES	CARBON	4.99 M		1% 1/2W	81349	RN20X4994F
R8	403494	KIT, OPERATIONAL AMPLIFIER			μA725		21793	403494
R9	000514	RES	CARBON	510 K		5% 1/4W	81349	RC07GF514J
R10	040085	POT	CERMET	500 K		30%	73138	89PV500K
R11	000106	RES	CARBON	10 M		5% 1/4W	81349	RC07GF106J
R12	000472	RES	CARBON	4.7 K		5% 1/4W	81349	RC07GF472J

403464 – Assy., PCB, PREAMP (MV) *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
R13	040113	POT CERMET 100 K 10%	73138	89PV100K
R14	000182	RES CARBON 1.8 K 5% 1/4W	81349	RC07GF182J
R15	000202	RES CARBON 2 K 5% 1/4W	81349	RC07GF202J
R16	000563	RES CARBON 56 K 5% 1/4W	81349	RC07GF563J
R17	000101	RES CARBON 100 OHM 5% 1/4W	81349	RC07GF101J
R18	000101	RES CARBON 100 OHM 5% 1/4W	81349	RC07GF101J
R19	000221	RES CARBON 220 OHM 5% 1/4W	81349	RC07GF221J
R20	040113	POT CERMET 100 K 10%	73138	89PV100K
R21	000472	RES CARBON 4.7 K 5% 1/4W	81349	RC07GF472J
R22	000181	RES CARBON 180 OHM 5% 1/4W	81349	RC07GF181J
R23	001100	RES CARBON 2.2 K 5% 1/2W	81349	RC20GF222J
R24	001100	RES CARBON 2.2 K 5% 1/2W	81349	RC20GF222J
R25	010654	RES METAL 20 K .05%	18612	V53-1
R26	000682	RES CARBON 6.8 K 5% 1/4W	81349	RC07GF682J
R27	010615	RES METAL 10 K .02%	18612	V53-1M
R28	010615	RES METAL 10 K .02%	18612	V53-1M
R68	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494
R69	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494

403435 – Assy., PCB, PREAMP/OHMS CONVERTER

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
CR1	220022	DIODE	SILICO	ZENER	1N965B		81349	1N965B
CR2	211083	DIODE	SILICO		018		21793	211083
CR3	211083	DIODE	SILICO		018		21793	211083
CR4	211236	DIODE	SILICO		007		21793	211236
CR5	211083	DIODE	SILICO		018		21793	211083
CR6	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR7	211083	DIODE	SILICO		018		21793	211083
CR8	211083	DIODE	SILICO		018		21793	211083
CR10	211083	DIODE	SILICO		018		21793	211083
CR11	211083	DIODE	SILICO		018		21793	211083
CR12	211083	DIODE	SILICO		018		21793	211083
CR13	211083	DIODE	SILICO		018		21793	211083
CR14	211083	DIODE	SILICO		018		21793	211083
CR15	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR16	211083	DIODE	SILICO		018		21793	211083
CR17	211083	DIODE	SILICO		018		21793	211083
CR18	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR19	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR20	220022	DIODE	SILICO	ZENER	1N965B		81349	1N965B
CR21	220060	DIODE		ZENER	24 V	5%	81349	1N970B
C1	120176	CAP	POLY	150 PFD	63 V	20%	26625	611.1
C2	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C3	121091	CAP	MYLAR	.033 MFD	100 V	10%	09023	WMF1S33
C4	100012	CAP	CERAM	33 PFD	500 V	10%	71471	TCD-DI-1(N750)
C5	100008	CAP	CERAM	82 PFD	500 V	10%	71471	ETCD-DI-1(N5600)
C6	120001	CAP	MYLAR	.0033 MFD	100 V	10%	09023	WMF1D33
C7	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C8	121093	CAP	MYLAR	.047 MFD	100 V	10%	09023	WMF1S47
C9	120001	CAP	MYLAR	.0033 MFD	100 V	10%	09023	WMF1D33
C10	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C11	100012	CAP	CERAM	33 PFD	500 V	10%	71471	TCD-DI-1(N750)
C12	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C13	100012	CAP	CERAM	33 PFD	500 V	10%	71471	TCD-DI-1(N750)
C14	110129	CAP	TANTA	.1 MFD	35 V	20%	05397	T368A104M035AS
K1	310077	RELAY	REED		28 V		15636	R2691-3
K2	310078	RELAY	REED		28 V		15636	R2690-3
K3	310077	RELAY	REED		28 V		15636	R2691-3
K4	310077	RELAY	REED		28 V		15636	R2691-3

403435 – Assy., PCB, PREAMP/OHMS CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
K5	310077	RELAY REED 28 V	15636	R2691-3
M1	230054	INTEGRATED CIRCUIT LM301A	27014	LM301A
M2	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494
M3	230054	INTEGRATED CIRCUIT LM301A	27014	LM301A
M4	230054	INTEGRATED CIRCUIT LM301A	27014	LM301A
M5	230054	INTEGRATED CIRCUIT LM301A	27014	LM301A
Q1	200160	TRANS FET E-304	17856	E-304
Q2	200137	TRANS SELECTED 2N4248	80131	2N4248
Q3	200137	TRANS SELECTED 2N4248	80131	2N4248
Q4	200137	TRANS SELECTED 2N4248	80131	2N4248
Q5	200137	TRANS SELECTED 2N4248	80131	2N4248
Q6	200135	FET KIT 200135	21793	200135
Q7	200068	TRANS PNP 2N4250	80131	2N4250
Q8	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q9	200043	TRANS NPN 200043	21793	200043
Q10	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q11	200035	TRANS SILICO NPN 014	21793	200035
Q12	200160	TRANS FET E304	17856	E-304
Q13	200035	TRANS SILICO NPN 014	21793	200035
Q14	201084	TRANS GERMAN PNP 2N1304	81349	2N1304
Q15	200011	TRANS SILICO PNP 009	21793	200011
Q16	200011	TRANS SILICO PNP 009	21793	200011
Q17	200137	TRANS SELECTED 2N4248	80131	2N4248
Q18	200137	TRANS SELECTED 2N4248	80131	2N4248
Q19	200137	TRANS SELECTED 2N4248	80131	2N4248
R1	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494
R2	021154	RES WW 10 K 3% 3 W	21551	M-200
R3	020614	RES WW 19.81 K .02% .15W	22045	J-110
R4	010741	RES CARBON FSV 1% 1/2W	21793	010741
R5	021154	RES WW 10 K 3% 3 W	21551	M-200
R6	021154	RES WW 10 K 3% 3 W	21551	M-200
R7	010671	RES METAL 494.8 K .25% 1/8W	81349	RN60D
R8	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494
R9	010615	RES METAL 10 K .02%	18612	V53-1M
R10	020611	RES METAL 200 OHM .02% 1/8W	18612	V53-3M
R11	020615	RES METAL 4.8 K 1% .12W	18612	V53-3M
R12	010621	RES METAL 49.9 K 1% 1/10W	81349	RN55C4992F

*Factory Selected Value

403435 – Assy., PCB, PREAMP/OHMS CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION						FSC	MANU P/N
R13	010621	RES	METAL	49.9 K		1%	1/10W	81349	RN55C4992F
R14	200135	KIT	FET		200135			21793	200135
R15	200135	KIT	FET		200135			21793	200135
R16	000203	RES	CARBON	20 K		5%	1/4W	81349	RC07GF203J
R17	000472	RES	CARBON	4.7 K		5%	1/4W	81349	RC07GF472J
R18	000151	RES	CARBON	150 OHM		5%	1/4W	81349	RC07GF151J
R19	040173	POT	CERMET	5 K	89PV5K			73138	89PV5K
R20	000106	RES	CARBON	10 M		5%	1/4W	81349	RC07GF106J
R21	000514	RES	CARBON	510 K		5%	1/4W	81349	RC07GF514J
R22	010615	RES	METAL	10 K		.02%		18612	V53-1M
R23	040169	POT	CERMET	20 OHM		20%	3/4W	73138	89PV20
R24	010652	RES	METAL	4.99 K		.05%		18612	V53-1
R25	040113	POT	CERMET	100 K		10%		73138	89PV100K
R26	000244	RES	CARBON	240 K		5%	1/4W	81349	RC07GF244J
R27	010091	RES	METAL	11 K	T-0	1%	1/8W	81349	RN60D1102F
R28	000182	RES	CARBON	1.8 K		5%	1/4W	81349	RC07GF182J
R29	040113	POT	CERMET	100 K		10%		73138	89PV100K
R30	010703	RES	METAL	555.50 OHM		.05%		18612	V53-1
R31	000113	RES	CARBON	11 K		5%	1/4W	81349	RC07GF113J
R32	000202	RES	CARBON	2 K		5%	1/4W	81349	RC07GF202J
R33	000563	RES	CARBON	56 K		5%	1/4W	81349	RC07GF563J
R34	000101	RES	CARBON	100 OHM		5%	1/4W	81349	RC07GF101J
R35	040168	POT	CERMET	200 OHM		10%	3/4W	73138	89PR200
R36	020604	RES	WW	100 K		.05%	.15W	22045	J-110
R37	040182	POT	CERMET	250 K		20%		11237	360S254B
R38	010682	RES	CARBON	9.8 M		1%	1/2W	81349	RN20X9804F
R39	000203	RES	CARBON	20 K		5%	1/4W	81349	RC07GF203J
R40	000101	RES	CARBON	100 OHM		5%	1/4W	81349	RC07GF101J
R41	000221	RES	CARBON	220 OHM		5%	1/4W	81349	RC07GF221J
R42	040112	POT	CERMET	2 K		10%		73138	89PV2K
R43	020612	RES	WW	1.009 M		.05%	1/4W	22045	J-120
R44	040172	POT	CERMET	50 K	89PV50K			73138	89PV50K
R45	010655	RES	METAL	11.086 M		.1%	1/2W	81349	RN70E
R46	000511	RES	CARBON	510 OHM		5%	1/4W	81349	RC07GF511J
R47	010654	RES	METAL	20 K		.05%		18612	V53-1
R48	000682	RES	CARBON	6.8 K		5%	1/4W	81349	RC07GF682J
R49	010615	RES	METAL	10 K		.02%		18612	V53-1M
R50	040113	POT	CERMET	100 K		10%		73138	89PV100K
R51	010656	RES	METAL	19.948 M		.1%	1/2W	81349	RN70E
R52	010615	RES	METAL	10 K		.02%		18612	V53-1M

403435 – Assy., PCB, PREAMP/OHMS CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
R53	010586	RES METAL 5 K .02%	18612	V53-1M
R54	040113	POT CERMET 100 K 10%	73138	89PV100K
R55	000472	RES CARBON 4.7 K 5% 1/4W	81349	RC07GF472J
R56	000181	RES CARBON 180 OHM 5% 1/4W	81349	RC07GF181J
R57	001100	RES CARBON 2.2 K 5% 1/2W	81349	RC20GF222J
R58	010654	RES METAL 20 K .05%	18612	V53-1
R59	000202	RES CARBON 2 K 5% 1/4W	81349	RC07GF202J
R60	000101	RES CARBON 100 OHM 5% 1/4W	81349	RC07GF101J
R61	000273	RES CARBON 27 K 5% 1/4W	81349	RC07GF273J
R62	000331	RES CARBON 330 OHM 5% 1/4W	81349	RC07GF331J
R63	000680	RES CARBON 68 OHM 5% 1/4W	81349	RC07GF680J
R64	000222	RES CARBON 2.2 K 5% 1/4W	81349	RC07GF222J
R65	001100	RES CARBON 2.2 K 5% 1/2W	81349	RC20GF222J
R66	040085	POT CERMET 500 K 30%	73138	89PV500K
R67	000202	RES CARBON 2 K 5% 1/4W	81349	RC07GF202J
R68	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494
R69	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494
R70	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494
R71	403494	KIT, OPERATIONAL AMPLIFIER μA725	21793	403494

403472 – Assy., PCB, SCALING AMPLIFIER

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
CR1	211083	DIODE	SILICO		018		21793	211083
CR2	211083	DIODE	SILICO		018		21793	211083
CR6	211083	DIODE	SILICO		018		21793	211083
CR7	211083	DIODE	SILICO		018		21793	211083
CR8	211083	DIODE	SILICO		018		21793	211083
CR9	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR10	211083	DIODE	SILICO		018		21793	211083
CR11	211083	DIODE	SILICO		018		21793	211083
CR12	211083	DIODE	SILICO		018		21793	211083
CR13	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR14	210035	DIODE	HOT CARRIER				50434	HP5082-2810
CR15	210035	DIODE	HOT CARRIER				50434	HP5082-2810
C1	130116	CAP	MICA	3900 PFD	500 V	2%	72136	DM19F392G0
C2	120275	CAP	POLY	1000 PFD	500/630V	2.5%	08257	KSO Series
C3	130115	CAP	MICA	346 PFD	500 V	2%	72136	DM15F3460G0
C4	120274	CAP	POLY	87 PFD	500/630V	2.5%	08257	KSO Series
C5	100100	CAP	CERAM FSV				21793	100100
C6	100100	CAP	CERAM FSV				21793	100100
C7	130124	CAP	TRIMMER	1.7-10 PFD	250 V		52763	R-TR1K0-122-09SD
C8	100100	CAP	CERAM	FSV			21793	100100
C9	130123	CAP	TRIMMER	1-3 PFD	250 V		52763	R-TR1K0-122-09SD
C10	100050	CAP	CERAM	2.2 PFD	1000 V	5%	56289	C030B102S2R2D
C11	100061	CAP	CERAM	39 PFD	1000 V	5%	56289	C030B102G390J
C12	100077	CAP	GLASS	7.5 PFD	500 V	5%	95275	VY10CA7R5JA
C13	100075	CAP	CERAM	10 PFD	1 KV	5%	56289	C030B102E100J
C14	100075	CAP	CERAM	10 PFD	1 KV	5%	56289	C030B102E100J
C15	100077	CAP	GLASS	7.5 PFD	500 V	5%	95275	VY10CA7R5JA
C16	130125	CAP	PORCE	.8-10 PFD	250 V		91293	JMC2951
C17	130125	CAP	PORCE	.8-10 PFD	250 V		91293	JMC2951
C18	120090	CAP	MYLAR	.22 MFD	600 V	5%	27556	ZA1101J
C19	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C20	130127	CAP	TRIMMER	10-40 PFD			52763	10S-TR1K0-24N750
C23	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C25	110140	CAP	TANTA	47 MFD	6 V	20%	05397	T368B476M006AS
C26	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C27	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C28	100079	CAP	CERAM	3.9±.5 PFD	1000 V		56289	C030B102E3R9D
C29	100100	CAP	CERAM FSV				21793	100100

403472 – Assy., PCB, SCALING AMPLIFIER *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
C32	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C33	101174	CAP	CERAM	.001 MFD	500 V	10%	04222	SCD-DI-2X5F-1000
C34	110140	CAP	TANTA	47 MFD	6 V	20%	05397	T368B476M006AS
C35	110140	CAP	TANTA	47 MFD	6 V	20%	05397	T368B476M006AS
C36	110140	CAP	TANTA	47 MFD	6 V	20%	05397	T368B476M006AS
C37	110141	CAP	TANTA	22 MFD	15 V	20%	05397	T368B226M015AS
C39	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C40	100051	CAP	CERAM	3 PFD	500 V		71471	TCD-B1-0
K1	310078	RELAY	REED		28 V		15636	R2690-3
K2	310077	RELAY	REED		28 V		15636	R2691-3
K3	310078	RELAY	REED		28 V		15636	R2690-3
L1	310068	CHOKE, RF		1 UH		10%	99800	1537-12
Q1	200197	TRANS	SILICO	NPN	MPS-H10		04713	MPS-H10
Q2	200161	TRANS	FET	SELECTED	E-415		17856	E-415
Q3	200197	TRANS	SILICO	NPN	MPS-H10		04713	MPS-H10
Q4	200197	TRANS	SILICO	NPN	MPS-H10		04713	MPS-H10
Q5	200197	TRANS	SILICO	NPN	MPS-H10		04713	MPS-H10
Q6	200197	TRANS	SILICO	NPN	MPS-H10		04713	MPS-H10
Q7	200197	TRANS	SILICO	NPN	MPS-H10		04713	MPS-H10
Q8	200212	TRANS		NPN	2N6305		81349	2N6305
R1	010721	RES	MATCHED SET				21793	010721
R2	010720	RES	METAL	9.09 K		.25% 1/10W	81349	RN55C9091C
R3	040195	POT		500 OHM			73138	79PR500
R4	010721	RES	MATCHED SET				21793	010721
R5	040176	POT	CERMET	50 OHM	89PV50		73138	89PV50
R6	010721	RES	MATCHED SET				21793	010721
R7	040195	POT		500 OHM			73138	79PR500
R8	010721	RES	MATCHED SET				21793	010721
R9	010721	RES	MATCHED SET				21793	010721
R10	041179	POT	WW	5 K			02111	50-1-1-502
R11	000163	RES	CARBON	16 K		5% 1/4W	81349	RC07GF163J
R12	000202	RES	CARBON	2 K		5% 1/4W	81349	RC07GF202J
R13	000510	RES	CARBON	51 OHM		5% 1/4W	81349	RC07GF510J
R14	000241	RES	CARBON	240 OHM		5% 1/4W	81349	RC07GF241J
R15	000202	RES	CARBON	2 K		5% 1/4W	81349	RC07GF202J
R16	010583	RES	METAL	182 OHM		1% 1/10W	81349	RN55C1820F
R17	000822	RES	CARBON	8.2 K		5% 1/4W	81349	RC07GF822J

403472 – Assy., PCB, SCALING AMPLIFIER *continued*

REF DES	DANA P/N	DESCRIPTION				FSC	MANU P/N
R18	000241	RES	CARBON	240 OHM	5% 1/4W	81349	RC07GF241J
R19	010719	RES	METAL	16.2 K	1% 1/10W	81349	RN55C1622F
R20	010583	RES	METAL	182 OHM	1% 1/10W	81349	RN55C1820F
R21	000510	RES	CARBON	51 OHM	5% 1/4W	81349	RC07GF510J
R22	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R23	000183	RES	CARBON	18 K	5% 1/4W	81349	RC07GF183J
R24	000183	RES	CARBON	18 K	5% 1/4W	81349	RC07GF183J
R25	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R26	000183	RES	CARBON	18 K	5% 1/4W	81349	RC07GF183J
R27	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R28	000510	RES	CARBON	51 OHM	5% 1/4W	81349	RC07GF510J
R29	000160	RES	CARBON	16 OHM	5% 1/4W	81349	RC07GF160J
R31	001469	RES	CARBON	1.2 K	5% 1/2W	81349	RC20GF122J
R32	001737	RES	CARBON FSV		5% 1/4W	21793	001737
R33	000152	RES	CARBON	1.5 K	5% 1/4W	81349	RC07GF152J
R34	010798	RES	METAL	82.5 OHM	1% 1/10W	81349	RN55C82R5F
R35	040258	POT	CERMET	100 OHM	20% .5W	73138	72XW100

403470 – Assy., PCB, AC CONVERTER

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
B1	920563	BEADS	SHIELDING		56-59065-4B		02114	56-59065-4B
B2	920563	BEADS	SHIELDING		56-59065-4B		02114	56-59065-4B
B3	920563	BEADS	SHIELDING		56-59065-4B		02114	56-59065-4B
B4	920563	BEADS	SHIELDING		56-59065-4B		02114	56-59065-4B
B5	920563	BEADS	SHIELDING		56-59065-4B		02114	56-59065-4B
B6	920563	BEADS	SHIELDING		56-59065-4B		02114	56-59065-4B
CR1	211083	DIODE	SILICO		018		21793	211083
CR2	220016	DIODE	SILICO	ZENER	1N964B		81349	1N964B
CR3	220004	DIODE	SILICO	ZENER	1N961B		81349	1N961B
CR4	220004	DIODE	SILICO	ZENER	1N961B		81349	1N961B
CR5	220004	DIODE	SILICO	ZENER	1N961B		81349	1N961B
CR6	220004	DIODE	SILICO	ZENER	1N961B		81349	1N961B
CR7	210015	DIODE			HP5082-2800		50434	HP5082-2800
CR8	210015	DIODE			HP5082-2800		50434	HP5082-2800
CR9	210015	DIODE			HP5082-2800		50434	HP5082-2800
CR10	210015	DIODE			HP5082-2800		50434	HP5082-2800
CR11	220004	DIODE	SILICO	ZENER	1N961B		81349	1N961B
CR12	220004	DIODE	SILICO	ZENER	1N961B		81349	1N961B
CR13	210015	DIODE			HP5082-2800		50434	HP5082-2800
CR14	210015	DIODE			HP5082-2800		50434	HP5082-2800
C4	130131	CAP	TRIMMER	2-20 PFD	100 V		73445	C010KA/20E
C5	100085	CAP	CERAM	6.8 PFD	1 KV	5%	56289	C030B102E6R8D
C6	100081	CAP	CERAM	4.7 PFD	1000 V	5%	56289	C030B102E4R7D
C7	100085	CAP	CERAM	6.8 PFD	1 KV	5%	56289	C030B102E6R8D
C8	130131	CAP	TRIMMER	2-20 PFD	100 V		73445	C010KA/20E
C9	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C10	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C11	100080	CAP	CERAM	.05 MFD	100 V	20%	56289	C023A101L503M
C12	100080	CAP	CERAM	.05 MFD	100 V	20%	56289	C023A101L503M
C13	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C14	100081	CAP	CERAM	4.7 PFD	1000 V	5%	56289	C030B102E4R7D
C15	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C16	110151	CAP	TANTA	10 MFD	35 V	20%	05397	T362C106M035A
C17	100080	CAP	CERAM	.05 MFD	100 V	20%	56289	C023A101L503M
C18	100080	CAP	CERAM	.05 MFD	100 V	20%	56289	C023A101L503M
C19	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C20	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C21	101098	CAP	CERAM	330 PFD	1 KV	10%	56289	C016B102E331K

403470 – Assy., PCB, AC CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
C22	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C23	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C24	101098	CAP	CERAM	330 PFD	1 KV	10%	56289	C016B102E331K
C25	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C26	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C27	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C29	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C30	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C32	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C33	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C34	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C35	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C36	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C38	110151	CAP	TANTA	10 MFD	35 V	20%	05397	T362C106M035A
C40	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C41	130131	CAP	TRIMMER	2-20 PFD	100 V		73445	C010KA/20E
C42	120025	CAP	MYLAR	1.5 MFD	100 V	10%	27556	XA2B155K
C43	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C44	100080	CAP	CERAM	.05 MFD	100 V	20%	56289	C023A101L503M
C45	100068	CAP	CERAM	.02 MFD	100 V	20%	56289	C023B101H203M
C46	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C47	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C48	100080	CAP	CERAM	.05 MFD	100 V	20%	56289	C023A101L503M
C49	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C50	100081	CAP	CERAM	4.7 PFD	1000 V	5%	56289	C030B102E4R7D
C51	100080	CAP	CERAM	.05 MFD	100 V	20%	56289	C023A101L503M
C52	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C53	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C54	101098	CAP	CERAM	330 PFD	1 KV	10%	56289	C016B102E331K
C55	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C56	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C58	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C59	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C60	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C61	110151	CAP	TANTA	10 MFD	35 V	20%	05397	T362C106M035A
C62	100084	CAP	CERAM	1.5±.5 PFD	1 KV	±.5 PFD	56289	C030B102S1R5D
C63	100084	CAP	CERAM	1.5±.5 PFD	1 KV	±.5 PFD	56289	C030B102S1R5D
C64	100100	CAP	CERAM	FSV			21793	100100
C65	100051	CAP	CERAM	3 PFD	500 V		71471	TCD-B1-0

403470 – Assy., PCB, AC CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
Q1	200179	TRANS FET KE4391	27014	KE4391
Q2	200129	TRANS SILICO NPN SE4020	07263	SE4020
Q3	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q4	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q5	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q6	200178	TRANS PNP 2N5910	81349	2N5910
Q7	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q8	200178	TRANS PNP 2N5910	81349	2N5910
Q9	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q10	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q11	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q12	200178	TRANS PNP 2N5910	81349	2N5910
Q13	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q14	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q15	200178	TRANS PNP 2N5910	81349	2N5910
Q16	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q17	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q18	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q19	200178	TRANS PNP 2N5910	81349	2N5910
Q20	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q21	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
Q22	200178	TRANS PNP 2N5910	81349	2N5910
Q23	200197	TRANS SILICO NPN MPS-H10	04713	MPS-H10
AR1	230127	INTEGRATED CIRCUIT SSS725C	06665	SSS725C
AR2	230127	INTEGRATED CIRCUIT SSS725C	06665	SSS725C
AR3	230127	INTEGRATED CIRCUIT SSS725C	06665	SSS725C
AR4	230127	INTEGRATED CIRCUIT SSS725C	06665	SSS725C
R1	010727	RES METAL 2.5 K .01%	18612	V53-1M
R2	010615	RES METAL 10 K .02%	18612	V53-1M
R3	020628	RES WW 120.42 K .02% .05W	22045	J-90
R4	000100	RES CARBON 10 OHM 5% 1/4W	81349	RC07GF100J
R5	020629	RES WW 438.19 K .02% .15W	22045	J-110
R6	010586	RES METAL 5 K .02%	18612	V53-1M
R7	010727	RES METAL 2.5 K .01%	18612	V53-1M
R8	010615	RES METAL 10 K .02%	18612	V53-1M
R9	000513	RES CARBON 51 K 5% 1/4W	81349	RC07GF513J
R10	000103	RES CARBON 10 K 5% 1/4W	81349	RC07GF103J
R11	000102	RES CARBON 1 K 5% 1/4W	81349	RC07GF102J
R12	000561	RES CARBON 560 OHM 5% 1/4W	81349	RC07GF561J

403470 – Assy., PCB, AC CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
R13	000242	RES	CARBON	2.4 K		5% 1/4W	81349	RC07GF242J
R14	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R15	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R16	000621	RES	CARBON	620 OHM		5% 1/4W	81349	RC07GF621J
R17	000561	RES	CARBON	560 OHM		5% 1/4W	81349	RC07GF561J
R18	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R19	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R20	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R21	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R22	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R23	000242	RES	CARBON	2.4 K		5% 1/4W	81349	RC07GF242J
R24	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R25	000362	RES	CARBON	3.6 K		5% 1/4W	81349	RC07GF362J
R26	040191	POT	CERMET	1 M	89PV1M		73138	89PV1M
R27	040112	POT	CERMET	2 K		10%	73138	89PV2K
R29	000100	RES	CARBON	10 OHM		5% 1/4W	81349	RC07GF100J
R30	040191	POT	CERMET	1 M	89PV1M		73138	89PV1M
R31	040112	POT	CERMET	2 K		10%	73138	89PV2K
R32	000150	RES	CARBON	15 OHM		5% 1/4W	81349	RC07GF150J
R34	000100	RES	CARBON	10 OHM		5% 1/4W	81349	RC07GF100J
R35	000303	RES	CARBON	30 K		5% 1/4W	81349	RC07GF303J
R36	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R37	000303	RES	CARBON	30 K		5% 1/4W	81349	RC07GF303J
R38	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R39	000163	RES	CARBON	16 K		5% 1/4W	81349	RC07GF163J
R40	000303	RES	CARBON	30 K		5% 1/4W	81349	RC07GF303J
R41	000163	RES	CARBON	16 K		5% 1/4W	81349	RC07GF163J
R42	000303	RES	CARBON	30 K		5% 1/4W	81349	RC07GF303J
R43	010529	RES	METAL	10 K		1% 1/10W	81349	RN55C1002F
R44	000151	RES	CARBON	150 OHM		5% 1/4W	81349	RC07GF151J
R45	010529	RES	METAL	10 K		1% 1/10W	81349	RN55C1002F
R46	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R47	000303	RES	CARBON	30 K		5% 1/4W	81349	RC07GF303J
R48	000303	RES	CARBON	30 K		5% 1/4W	81349	RC07GF303J
R49	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R50	000510	RES	CARBON	51 OHM		5% 1/4W	81349	RC07GF510J
R51	000201	RES	CARBON	200 OHM		5% 1/4W	81349	RC07GF201J
R52	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R53	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R54	000510	RES	CARBON	51 OHM		5% 1/4W	81349	RC07GF510J

403470 – Assy., PCB, AC CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
R55	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R56	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R57	000161	RES	CARBON	160 OHM		5% 1/4W	81349	RC07GF161J
R58	000911	RES	CARBON	910 OHM		5% 1/4W	81349	RC07GF911J
R59	000161	RES	CARBON	160 OHM		5% 1/4W	81349	RC07GF161J
R60	000911	RES	CARBON	910 OHM		5% 1/4W	81349	RC07GF911J
R61	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R62	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R63	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R64	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R65	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R66	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R67	010615	RES	METAL	10 K		.02%	18612	V53-1M
R68	040123	POT	CERMET	1 K	62-1-1-102		73138	62-1-1-102
R69	020627	RES	WW	81.73 K		.02% .05W	22045	J-90
R70	010586	RES	METAL	5 K		.02%	18612	V53-1M
R71	010726	RES	METAL	10.71 K		.1% 1/10W	81349	RN55D
R72	010730	RES	METAL	5.355 K		.01%	18612	V53-1M
R73	010729	RES	METAL	31.31 K		.02%	18612	V53-1M
R74	040191	POT	CERMET	1 M	89PV1M		73138	89PV1M
R75	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R76	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R77	000392	RES	CARBON	3.9 K		5% 1/4W	81349	RC07GF392J
R78	010728	RES	METAL	33.91 K		.02%	18612	V53-1M
R79	010615	RES	METAL	10 K		.02%	18612	V53-1M
R80	000561	RES	CARBON	560 OHM		5% 1/4W	81349	RC07GF561J
R81	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R82	010737	RES	METAL	10.01 K		.01%	18612	V53-1M
R83	040191	POT	CERMET	1 M	89PV1M		73138	89PV1M
R84	000100	RES	CARBON	10 OHM		5% 1/4W	81349	RC07GF100J
R85	000561	RES	CARBON	560 OHM		5% 1/4W	81349	RC07GF561J
R86	000390	RES	CARBON	39 OHM		5% 1/4W	81349	RC07GF390J
R87	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R88	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R89	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R90	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R91	000362	RES	CARBON	3.6 K		5% 1/4W	81349	RC07GF362J
R92	040191	POT	CERMET	1 M	89PV1M		73138	89PV1M
R93	040112	POT	CERMET	2 K		10%	73138	89PV2K
R94	000150	RES	CARBON	15 OHM		5% 1/4W	81349	RC07GF150J

403470 – Assy., PCB, AC CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION				FSC	MANU P/N
R95	000100	RES	CARBON	10 OHM	5% 1/4W	81349	RC07GF100J
R96	000303	RES	CARBON	30 K	5% 1/4W	81349	RC07GF303J
R97	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R98	000163	RES	CARBON	16 K	5% 1/4W	81349	RC07GF163J
R99	000303	RES	CARBON	30 K	5% 1/4W	81349	RC07GF303J
R100	010529	RES	METAL	10 K	1% 1/10W	81349	RN55C1002F
R101	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R102	000303	RES	CARBON	30 K	5% 1/4W	81349	RC07GF303J
R103	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R104	000510	RES	CARBON	51 OHM	5% 1/4W	81349	RC07GF510J
R105	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R106	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R107	000161	RES	CARBON	160 OHM	5% 1/4W	81349	RC07GF161J
R108	000911	RES	CARBON	910 OHM	5% 1/4W	81349	RC07GF911J
R109	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R110	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R111	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R112	001737	RES	CARBON	FSV	5% 1/4W	21793	001737
R113	000107	RES	CARBON	100 M	5% 1/4W	81349	RC07GF107J
R114	001737	RES	CARBON	FSV	5% 1/4W	21793	001737
R115	001737	RES	CARBON	FSV	5% 1/4W	21793	001737
R116	000151	RES	CARBON	150 OHM	5% 1/4W	81349	RC07GF151J
R117	000151	RES	CARBON	150 OHM	5% 1/4W	81349	RC07GF151J
W1	600245	JUMPER		L-2007-1LP			L-2007-1LP
W2	600245	JUMPER		L-2007-1LP			L-2007-1LP

403773 – Assy., PCB, RMS AC CONVERTER

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
B1	920563	BEADS	SHIELDING		56-59065-4B		02114	56-59065-4B
C1	130116	CAP	MICA	3900 PFD	500 V	2%	72136	DM19F392G0
C2	130115	CAP	MICA	346 PFD	500 V	2%	72136	DM15F3460G0
C3	100100	CAP	CERAM	FSV			21793	100100
C4	130124	CAP	TRIMMER	1.7-10 PFD	250 V		52763	R-TRIKO-122-09SD
C5	100100	CAP	CERAM	FSV			21793	100100
C6	100054	CAP	CERAM	27 PFD	1000 V	5%	56289	C030B102G270J
C7	130123	CAP	TRIMMER	1-3 PFD	250 V		52763	R-TRIKO-122-09SD
C8	100095	CAP	CERAM	2.7±.5PFD	1000 V		56289	C030B102S2R7D
C9	130146	CAP	TRIMMER	.25-1.5 PFD	273-0001-002		74970	273-0001-002
C10	100100	CAP	CERAM	FSV			21793	100100
C11	130146	CAP	TRIMMER	.25-1.5 PFD	273-0001-002		74970	273-0001-002
C12	120280	CAP	MYLAR	.22 MFD	1000 V	10%	27556	ZA2J224K
C13	130161	CAP	MICA	FSV			21793	130161
C14	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C15	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C16	101098	CAP	CERAM	330 PFD	1 KV	10%	56289	C016B102E331K
C17	101641	CAP	CERAM	470 PFD	500 V	10%	71471	SCD1X5F
C18	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C19	130076	CAP	MICA	200 PFD	500 V	5%	72136	DM15-201J
C20	101642	CAP	CERAM	150 PFD	500 V	10%	71471	SCD1X5F
C21	120026	CAP	MYLAR	.47 MFD	100 V	10%	27556	SA2B474K
C23	120026	CAP	MYLAR	.47 MFD	100 V	10%	27556	SA2B474K
C24	120026	CAP	MYLAR	.47 MFD	100 V	10%	27556	SA2B474K
C25	101641	CAP	CERAM	470 PFD	500 V	10%	71471	SCD1X5F
C26	101098	CAP	CERAM	330 PFD	1 KV	10%	56289	C016B102E331K
C27	100100	CAP	CERAM	FSV			21793	100100
C28	130127	CAP	TRIMMER	10-40 PFD	10S-TRIKO-24N750		52763	10S-TRIKO-24N750
C29	110140	CAP	TANTA	47 MFD	6 V	20%	05397	T368B476M006AS
C30	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C31	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C32	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C33	101641	CAP	CERAM	470 PFD	500 V	10%	71471	SCD1X5F
CR1	200197	TRANS	SILICO	NPN	MPS-H10		04713	MPS-H10
CR2	200197	TRANS	SILICO	NPN	MPS-H10		04713	MPS-H10
CR3	211083	DIODE	SILICO		018		21793	211083
CR4	211083	DIODE	SILICO		018		21793	211083
CR5	211083	DIODE	SILICO		018		21793	211083
CR6	211083	DIODE	SILICO		018		21793	211083
CR7	211083	DIODE	SILICO		018		21793	211083
CR8	210035	DIODE	HOT CARRIER				50434	HP5082-2810
CR9	210035	DIODE	HOT CARRIER				50434	HP5082-2810
CR10	211083	DIODE	SILICO		018		21793	211083

403773 – Assy., PCB, RMS AC CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
CR12	220016	DIODE SILICO ZENER 1N964B	81349	1N964B
CR13	220016	DIODE SILICO ZENER 1N964B	81349	1N964B
K1	310078	RELAY REED 28 V	15636	R2690-3
K2	310078	RELAY REED 28 V	15636	R2690-3
K3	310078	RELAY REED 28 V	15636	R2690-3
K4	310078	RELAY REED 28 V	15636	R2690-3
Q1	200200	TRANS NPN 200200	21793	200200
Q2	200200	TRANS NPN 200200	21793	200200
Q4	200199	TRANS FET FM1302	27014	FM1302
Q5	200200	TRANS NPN 200200	21793	200200
Q6	200201	TRANS DUAL NPN 200201	21793	200201
Q7	200112	TRANS MATCHED PAIR 200112	21793	200112
Q8	200112	TRANS MATCHED PAIR 200112	21793	200112
Q9	200068	TRANS PNP 2N4250	80131	2N4250
Q10	200200	TRANS NPN 200200	21793	200200
Q11	200220	TRANS DUAL 200220	21793	200220
Q12	200136	TRANS SILICO NPN 2N5963	81349	2N5963
Q13	200068	TRANS PNP 2N4250	80131	2N4250
Q14	403865	MATCHED LOG TRANSISTOR KIT	21793	403865
Q15	403865	MATCHED LOG TRANSISTOR KIT	21793	403865
Q16	200068	TRANS PNP 2N4250	80131	2N4250
Q17	200179	TRANS FET KE4391	27014	KE4391
Q18	200179	TRANS FET KE4391	27014	KE4391
AR1	230180	INTEGRATED CIRCUIT LM318H	27014	LM318H
AR2	230054	INTEGRATED CIRCUIT LM301A	27014	LM301A
R1	010721	RES METAL MATCHED SET	21793	010721
R2	010720	RES METAL 9.09 K .25% 1/10W	81349	RN55C9091C
R3	040228	POT CERMET 500 OHM 10%	73138	89PR500
R4	010721	RES METAL MATCHED SET	21793	010721
R5	040225	POT CERMET 50 OHM 20%	73138	89PR50
R6	010721	RES METAL MATCHED SET	21793	010721
R7	040228	POT CERMET 500 OHM 10%	73138	89PR500
R8	010721	RES METAL MATCHED SET	21793	010721
R9	000242	RES CARBON 2.4 K 5% 1/4W	81349	RC07GF242J
R10	010721	RES METAL MATCHED SET	21793	010721
R11	001737	RES CARBON FSV 5% 1/4W	21793	001737
R12	010678	RES METAL 60.4 K 1% 1/10W	81349	RN55C6042F
R13	010678	RES METAL 60.4 K 1% 1/10W	81349	RN55C6042F

403773 – Assy., PCB, RMS AC CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION				FSC	MANU P/N
R14	001737	RES	CARBON	FSV	5% 1/4W	21793	001737
R15	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R16	000334	RES	CARBON	330 K	5% 1/4W	81349	RC07GF334J
R17	040235	POT	CERMET	100 K	10%	73138	89PR100K
R19	010670	RES	METAL	50 K	1% 1/10W	81349	RN55E5002F
R20	040236	POT	CERMET	200 K	10%	73138	89P200K
R21	010257	RES	METAL	365 K	1% 1/8W	81349	RN60C3653F
R22	010586	RES	METAL	5 K	.02%	18612	V53-1M
R23	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R24	010586	RES	METAL	5 K	.02%	18612	V53-1M
R25	010586	RES	METAL	5 K	.02%	18612	V53-1M
R26	010654	RES	METAL	20 K	.05%	18612	V53-1
R27	010615	RES	METAL	10 K	.02%	18612	V53-1M
R28	040225	POT	CERMET	50 OHM	20%	73138	89PR50
R29	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R30	000105	RES	CARBON	1 M	5% 1/4W	81349	RC07GF105J
R31	040235	POT	CERMET	100 K	10%	73138	89PR100K
R32	000184	RES	CARBON	180 K	5% 1/4W	81349	RC07GF184J
R33	040225	POT	CERMET	50 OHM	20%	73138	89PR50
R34	010684	RES	METAL	487 OHM	1% 1/10W	81349	RN55E4870F
R35	010684	RES	METAL	487 OHM	1% 1/10W	81349	RN55E4870F
R36	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R37	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R38	000272	RES	CARBON	2.7 K	5% 1/4W	81349	RC07GF272J
R39	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R40	000681	RES	CARBON	680 OHM	5% 1/4W	81349	RC07GF681J
R41	040239	POT	CERMET	1 M	20%	73138	89PR1M
R42	040232	POT	CERMET	10 K	10%	73138	89PR10K
R43	010635	RES	METAL	34.8 K	1% 1/10W	81349	RN55D3482F
R44	000476	RES	CARBON	47 M	5% 1/4W	81349	RC07GF476J
R45	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R46	010392	RES	METAL	20 K	.1% 1/10W	81349	RN55C2002B
R47	000332	RES	CARBON	3.3 K	5% 1/4W	81349	RC07GF332J
R48	001737	RES	CARBON	FSV	5% 1/4W	21793	001737
R49	000107	RES	CARBON	100 M	5% 1/4W	81349	RC07GF107J
R50	000104	RES	CARBON	100 K	5% 1/4W	81349	RC07GF104J
R51	020667	RES	WW	100 K	.1% .15W	22045	J-110
R52	001737	RES	CARBON	FSV	5% 1/4W	21793	001737
R53	001737	RES	CARBON	FSV	5% 1/4W	21793	001737
R54	040225	POT	CERMET	50 OHM	20%	73138	89PR50
R55	010654	RES	METAL	20 K	.05%	18612	V53-1
R56	001737	RES	CARBON	FSV	5% 1/4W	21793	001737
R57	010654	RES	METAL	20 K	.05%	18612	V53-1

403773 – Assy., PCB, RMS AC CONVERTER *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
R58	040227	POT CERMET 200 OHM 10%	73138	89PR200
R59	001737	RES CARBON FSV 5% 1/4W	21793	001737
R60	010614	RES METAL 9 K .02%	18612	V53-1
R61	000101	RES CARBON 100 OHM 5% 1/4W	81349	RC07GF101J
R63	000470	RES CARBON 47 OHM 5% 1/4W	81349	RC07GF470J
R64	000820	RES CARBON 82 OHM 5% 1/4W	81349	RC07GF820J
R65	010613	RES METAL 1 K .02%	18612	V53-1
R66	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R67	000334	RES CARBON 330 K 5% 1/4W	81349	RC07GF334J
R68	000334	RES CARBON 330 K 5% 1/4W	81349	RC07GF334J
R69	000105	RES CARBON 1 M 5% 1/4W	81349	RC07GF105J
R71	001737	RES CARBON FSV 5% 1/4W	21793	001737
R72	010618	RES METAL 200 K .25% 1/10W	81349	RN55C2003C
R73	010536	RES METAL 100 K 1% 1/10W	81349	RN55C1003F
R74	403865	MATCHED LOG TRANSISTOR KIT	21793	403865
R75	403865	MATCHED LOG TRANSISTOR KIT	21793	403865
R76	010496	RES METAL 1 M 1% 1/8W	81349	RN60D1004F
R77	000221	RES CARBON 220 OHM 5% 1/4W	81349	RC07GF221J
R78	000221	RES CARBON 220 OHM 5% 1/4W	81349	RC07GF221J
R79	001737	RES CARBON FSV 5% 1/4W	21793	001737
R80	001737	RES CARBON FSV 5% 1/4W	21793	001737
R81	001737	RES CARBON FSV 5% 1/4W	21793	001737
S1	600742	SWITCH SLIDE SPDT GS-111	79727	GS-111
S2	600742	SWITCH SLIDE SPDT GS-111	79727	GS-111
TP1	600591	POST TEST POINT 85931-6	00779	85931-6
TP2	600591	POST TEST POINT 85931-6	00779	85931-6
TP3	600591	POST TEST POINT 85931-6	00779	85931-6
TP4	600591	POST TEST POINT 85931-6	00779	85931-6
TP5	600591	POST TEST POINT 85931-6	00779	85931-6
W1	600245	JUMPER L-2007-1LP		L-2007-1LP

403434 – Assy., PCB, ISOLATOR

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
CR1	220027	DIODE	SILICO	ZENER	4.3 V		81349	1N749A
CR2	220027	DIODE	SILICO	ZENER	4.3 V		81349	1N749A
CR7	220027	DIODE	SILICO	ZENER	4.3 V		81349	1N749A
CR8	211083	DIODE	SILICO		018		21793	211083
CR9	211083	DIODE	SILICO		018		21793	211083
CR10	221177	DIODE	SILICO	ZENER	1/4M.2.4AZ5		04713	1/4M.2.4AZ5
CR11	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR12	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
CR13	210004	DIODE	SILICO		1N4004		81349	1N4004
CR14	210004	DIODE	SILICO		1N4004		81349	1N4004
CR15	211083	DIODE	SILICO		018		21793	211083
CR16	211083	DIODE	SILICO		018		21793	211083
CR17	211083	DIODE	SILICO		018		21793	211083
CR18	211083	DIODE	SILICO		018		21793	211083
CR19	211083	DIODE	SILICO		018		21793	211083
C1	120237	CAP	POLY	.15 MFD	100 V	5%	08257	KSC Series
C2	120237	CAP	POLY	.15 MFD	100 V	5%	08257	KSC Series
C3	121394	CAP	MYLAR	.15 MFD	100 V	10%	09023	WMF1P15
C4	101145	CAP	CERAM	100 PFD	500 V	10%	04222	TCD-DI-1N5600-100
C5	121091	CAP	MYLAR	.033 MFD	100 V	10%	09023	WMF1S33
C6	120070	CAP	POLY	3000 PFD	100 V	5%	08257	KSC Series
C7	100025	CAP	CERAM	.005 MFD	100 V	20%	72982	835-000-X5V0502Z
C8	120257	CAP	POLY	5 PFD	500 V		08257	KSO Series
C9	100051	CAP	CERAM	3 PFD	500 V		71471	TCD-B1-0
C10	100012	CAP	CERAM	33 PFD	500 V	10%	71471	TCD-DI-1(N750)
C11	121091	CAP	MYLAR	.033 MFD	100 V	10%	09023	WMF1S33
C12	110125	CAP	TANTA	2.2 MFD	35 V	20%	05397	T368B225M035AS
C13	110125	CAP	TANTA	2.2 MFD	35 V	20%	05397	T368B225M035AS
C14	120257	CAP	POLY	5 PFD	500 V		08257	KSO Series
K1	310077	RELAY	REED		28 V		15636	R2691-3
Q1	200136	TRANS	SILICO	NPN	2N5963		81349	2N5963
Q2	200136	TRANS	SILICO	NPN	2N5963		81349	2N5963
Q3	200088	TRANS	SILICO	PNP	2N4248		80131	2N4248
Q4	200222	TRANS			200222		21793	200222
Q5	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q6	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q7	200140	TRANS	DUAL	NPN	200140		21793	200140

403434 – Assy., PCB, ISOLATOR *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
Q8	200140	TRANS	DUAL	NPN	200140		21793	200140
Q9	200142	TRANS		PNP	2N4249		81349	2N4249
Q10	200035	TRANS	SILICO	NPN	014		21793	200035
Q11	200035	TRANS	SILICO	NPN	014		21793	200035
Q12	200142	TRANS		PNP	2N4249		81349	2N4249
Q13	200035	TRANS	SILICO	NPN	014		21793	200035
Q14	200035	TRANS	SILICO	NPN	014		21793	200035
Q15	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q16	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q17	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q18	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q19	200137	TRANS	SELECTED		2N4248		80131	2N4248
Q20	200137	TRANS	SELECTED		2N4248		80131	2N4248
AR1	230075	INTEGRATED CIRCUIT			UA748C		07263	U5B7748393
AR2	230054	INTEGRATED CIRCUIT			LM301A		27014	LM301A
R1	010536	RES	METAL	100 K		1% 1/10W	81349	RN55C1003F
R2	010621	RES	METAL	49.9 K		1% 1/10W	81349	RN55C4992F
R3	000245	RES	CARBON	2.4 M		5% 1/4W	81349	RC07GF245J
R4	000153	RES	CARBON	15 K		5% 1/4W	81349	RC07GF153J
R5	000202	RES	CARBON	2 K		5% 1/4W	81349	RC07GF202J
R6	000220	RES	CARBON	22 OHM		5% 1/4W	81349	RC07GF220J
R7	000912	RES	CARBON	9.1 K		5% 1/4W	81349	RC07GF912J
R8	020639	RES	WW	24 K		5% 3 W	21551	M-200
R9	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R10	010529	RES	METAL	10 K		1% 1/10W	81349	RN55C1002F
R11	000181	RES	CARBON	180 OHM		5% 1/4W	81349	RC07GF181J
R12	040113	POT	CERMET	100 K		10%	73138	89PV100K
R13	000107	RES	CARBON	100 M		5% 1/4W	81349	RC07GF107J
R14	001737	RES	FSV			5% 1/4W	21793	001737
R15	010584	RES	METAL	10 M		1% 1/2W	81349	RN70C1005F
R16	001737	RES	FSV			5% 1/4W	21793	001737
R17	010584	RES	METAL	10 M		1% 1/2W	81349	RN70C1005F
R18	000221	RES	CARBON	220 OHM		5% 1/4W	81349	RC07GF221J
R19	010750	RES	CARBON	5.9 M		1% 1/2W	81349	RN20X5904F
R20	000622	RES	CARBON	6.2 K		5% 1/4W	81349	RC07GF622J
R21	000430	RES	CARBON	43 OHM		5% 1/4W	81349	RC07GF430J
R22	000153	RES	CARBON	15 K		5% 1/4W	81349	RC07GF153J
R23	000681	RES	CARBON	680 OHM		5% 1/4W	81349	RC07GF681J

403434 – Assy., PCB, ISOLATOR *continued*

REF DES	DANA P/N	DESCRIPTION				FSC	MANU P/N
R24	000202	RES	CARBON	2 K	5% 1/4W	81349	RC07GF202J
R25	000821	RES	CARBON	820 OHM	5% 1/4W	81349	RC07GF821J
R26	000273	RES	CARBON	27 K	5% 1/4W	81349	RC07GF273J
R27	000330	RES	CARBON	33 OHM	5% 1/4W	81349	RC07GF330J
R28	000161	RES	CARBON	160 OHM	5% 1/4W	81349	RC07GF161J
R29	000111	RES	CARBON	110 OHM	5% 1/4W	81349	RC07GF111J
R30	000220	RES	CARBON	22 OHM	5% 1/4W	81349	RC07GF220J
R31	000430	RES	CARBON	43 OHM	5% 1/4W	81349	RC07GF430J
R32	000820	RES	CARBON	82 OHM	5% 1/4W	81349	RC07GF820J
R33	000273	RES	CARBON	27 K	5% 1/4W	81349	RC07GF273J
R34	000100	RES	CARBON	10 OHM	5% 1/4W	81349	RC07GF100J
R35	000435	RES	CARBON	4.3 M	5% 1/4W	81349	RC07GF435J
R36	040113	POT	CERMET	100 K	10%	73138	89PV100K

403432 – Assy., PCB, DIGITIZER

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
CR1	211083	DIODE	SILICO		018		21793	211083
CR2	211083	DIODE	SILICO		018		21793	211083
CR3	211083	DIODE	SILICO		018		21793	211083
CR4	211083	DIODE	SILICO		018		21793	211083
CR5	211083	DIODE	SILICO		018		21793	211083
CR6	220026	DIODE	ZENER		12 V		81349	1N963B
CR7	211083	DIODE	SILICO		018		21793	211083
CR8	220054	DIODE	ZENER		1N5260B		81349	1N5260B
CR9	211236	DIODE	SILICO		007		21793	211236
CR10	403423	ZENER DIODE					21793	403423
CR11	211236	DIODE	SILICO		007		21793	211236
CR12	211236	DIODE	SILICO		007		21793	211236
CR13	211083	DIODE	SILICO		018		21793	211083
CR14	211083	DIODE	SILICO		018		21793	211083
CR15	211083	DIODE	SILICO		018		21793	211083
CR16	211083	DIODE	SILICO		018		21793	211083
CR17	211083	DIODE	SILICO		018		21793	211083
CR18	211083	DIODE	SILICO		018		21793	211083
CR19	220026	DIODE	ZENER		12 V		81349	1N963B
CR20	220027	DIODE	SILICO	ZENER	4.3 V		81349	1N749A
CR21	220059	DIODE	ZENER		33 V	5%	81349	1N973B
CR22	220007	DIODE	SILICO	ZENER	1N751A		81349	1N751A
C1	110125	CAP	TANTA	2.2 MFD	35 V	20%	05397	T368B225M035AS
C2	110125	CAP	TANTA	2.2 MFD	35 V	20%	05397	T368B225M035AS
C3	101098	CAP	CERAM	330 PFD	1 KV	10%	56289	C016B102E331K
C4	101145	CAP	CERAM	100 PFD	500 V	10%	04222	TCD-DI-1N5600-100
C5	101145	CAP	CERAM	100 PFD	500 V	10%	04222	TCD-DI-1N5600-100
C6	120253	CAP	POLY	.33 MFD	100 V	5%	71785	863UW
C7	110125	CAP	TANTA	2.2 MFD	35 V	20%	05397	T368B225M035AS
C8	101642	CAP	CERAM	150 PFD	500 V	10%	71471	SCD1X5F
C9	101642	CAP	CERAM	150 PFD	500 V	10%	71471	SCD1X5F
C10	101642	CAP	CERAM	150 PFD	500 V	10%	71471	SCD1X5F
C11	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C12	100012	CAP	CERAM	33 PFD	500 V	10%	71471	TCD-DI-1(N750)
C13	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C14	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C15	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C17	110126	CAP	TANTA	6.8 MFD	35 V	20%	05397	T368B685M035AS
C18	100012	CAP	CERAM	33 PFD	500 V	10%	71471	TCD-DI-1(N750)

403432 – Assy., PCB, DIGITIZER *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
C19	110126	CAP TANTA 6.8 MFD 35 V 20%	05397	T368B685M035AS
C20	100038	CAP CERAM 560 PFD 500 V 10%	71590	DD561
C21	100017	CAP CERAM .01 MFD 100 V 20%	56289	C023B101F103M
C22	110126	CAP TANTA 6.8 MFD 35 V 20%	05397	T368B685M035AS
C23	100012	CAP CERAM 33 PFD 500 V 10%	71471	TCD-DI-1(N750)
C24	110127	CAP TANTA 22 MFD 6 V 20%	05397	T368B226M006AS
C25	110126	CAP TANTA 6.8 MFD 35 V 20%	05397	T368B685M035AS
C26	110129	CAP TANTA .1 MFD 35 V 20%	05397	T368A104M035AS
C27	110127	CAP TANTA 22 MFD 6 V 20%	05397	T368B226M006AS
C28	110126	CAP TANTA 6.8 MFD 35 V 20%	05397	T368B685M035AS
C30	100051	CAP CERAM 3 PFD 500 V	71471	TCD-B1-0
C31	100017	CAP CERAM .01 MFD 100 V 20%	56289	C023B101F103M
C32	100068	CAP CERAM .02 MFD 100 V 20%	56289	C023B101H203M
C33	100017	CAP CERAM .01 MFD 100 V 20%	56289	C023B101F103M
C34	100088	CAP CERAM 220 PFD 100 V 5%	72982	8121-M100-C0G221J
M1	230076	INTEGRATED CIRCUIT 74L00	07263	74L00
M2	230076	INTEGRATED CIRCUIT 74L00	07263	74L00
Q1	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q2	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q3	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q4	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q5	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q6	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q7	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q8	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q9	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q10	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q11	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q12	200043	TRANS NPN 200043	21793	200043
Q13	200162	SWITCHES FET MATCHED SET	21793	200162
Q14	200224	TRANS SELECTED NPN 200224	21793	200224
Q15	200162	SWITCHES FET MATCHED SET	21793	200162
Q16	200224	TRANS SELECTED NPN 200224	21793	200224
Q17	200162	SWITCHES FET MATCHED SET	21793	200162
Q18	200224	TRANS SELECTED NPN 200224	21793	200224
Q19	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q20	200160	TRANS FET E-304	17856	E-304
Q21	200161	TRANS FET SELECTED E-415	17856	E-415
Q22	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q24	200035	TRANS SILICO NPN 014	21793	200035

403432 – Assy., PCB, DIGITIZER *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
Q25	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q26	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q27	200088	TRANS SILICO PNP 2N4248	80131	2N4248
Q28	200160	TRANS FET E-304	17856	E-304
AR1	230054	INTEGRATED CIRCUIT LM301A	27014	LM301A
AR2	230109	INTEGRATED CIRCUIT SELECTED LM301A	21793	230109
AR3	230054	INTEGRATED CIRCUIT LM301A	27014	LM301A
AR4	230109	INTEGRATED CIRCUIT SELECTED LM301A	21793	230109
AR5	230056	INTEGRATED CIRCUIT UA710C	07263	U6A7710393
R1	000153	RES CARBON 15 K 5% 1/4W	81349	RC07GF153J
R3	000272	RES CARBON 2.7 K 5% 1/4W	81349	RC07GF272J
R4	000272	RES CARBON 2.7 K 5% 1/4W	81349	RC07GF272J
R5	000153	RES CARBON 15 K 5% 1/4W	81349	RC07GF153J
R6	000152	RES CARBON 1.5 K 5% 1/4W	81349	RC07GF152J
R7	000272	RES CARBON 2.7 K 5% 1/4W	81349	RC07GF272J
R8	000153	RES CARBON 15 K 5% 1/4W	81349	RC07GF153J
R9	000511	RES CARBON 510 OHM 5% 1/4W	81349	RC07GF511J
R10	000511	RES CARBON 510 OHM 5% 1/4W	81349	RC07GF511J
R11	000153	RES CARBON 15 K 5% 1/4W	81349	RC07GF153J
R12	000392	RES CARBON 3.9 K 5% 1/4W	81349	RC07GF392J
R13	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R14	000202	RES CARBON 2 K 5% 1/4W	81349	RC07GF202J
R15	000392	RES CARBON 3.9 K 5% 1/4W	81349	RC07GF392J
R16	000392	RES CARBON 3.9 K 5% 1/4W	81349	RC07GF392J
R17	000152	RES CARBON 1.5 K 5% 1/4W	81349	RC07GF152J
R18	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R19	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R20	000562	RES CARBON 5.6 K 5% 1/4W	81349	RC07GF562J
R21	000362	RES CARBON 3.6 K 5% 1/4W	81349	RC07GF362J
R22	000511	RES CARBON 510 OHM 5% 1/4W	81349	RC07GF511J
R23	000152	RES CARBON 1.5 K 5% 1/4W	81349	RC07GF152J
R24	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R25	000152	RES CARBON 1.5 K 5% 1/4W	81349	RC07GF152J
R26	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R27	000152	RES CARBON 1.5 K 5% 1/4W	81349	RC07GF152J
R28	000303	RES CARBON 30 K 5% 1/4W	81349	RC07GF303J
R29	000302	RES CARBON 3 K 5% 1/4W	81349	RC07GF302J
R30	000302	RES CARBON 3 K 5% 1/4W	81349	RC07GF302J

403432 – Assy., PCB, DIGITIZER *continued*

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
R31	000302	RES	CARBON	3 K		5% 1/4W	81349	RC07GF302J
R32*	010169	RES	METAL	100 K	T-0	1% 1/8W	81349	RN60D1003F
R33	001737	RES	CARBON	FSV**		5% 1/4W	21793	001737
R34	040180	POT		1 M		20%	11237	360S105B
R35	000123	RES	CARBON	12 K		5% 1/4W	81349	RC07GF123J
R36	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R37	010633	RES	METAL	30.1 K		1% 1/10W	81349	RN55C3012F
R38	000202	RES	CARBON	2 K		5% 1/4W	81349	RC07GF202J
R39	010580	RES	METAL	21 K		1% 1/10W	81349	RN55C2102F
R40	010633	RES	METAL	30.1 K		1% 1/10W	81349	RN55C3012F
R41	010647	RES	METAL	340 OHM		1% 1/4W	81349	RN65D3400F
R42	000270	RES	CARBON	27 OHM		5% 1/4W	81349	RC07GF270J
R43	040174	POT	CERMET	500 OHM	89PV500		73138	89PV500
R44	010645	RES	METAL	2.37 K		1% 1/10W	81349	RN55C2371F
R45	403423	ZENER DIODE					21793	403423
R46	000513	RES	CARBON	51 K		5% 1/4W	81349	RC07GF513J
R47	000562	RES	CARBON	5.6 K		5% 1/4W	81349	RC07GF562J
R48	000435	RES	CARBON	4.3 M		5% 1/4W	81349	RC07GF435J
R51	000302	RES	CARBON	3 K		5% 1/4W	81349	RC07GF302J
R53	000306	RES	CARBON	30 M		5% 1/4W	81349	RC07GF306J
R54	000156	RES	CARBON	15 M		5% 1/4W	81349	RC07GF156J
R55	040210	POT	CERMET	100 K		20% 1 W	11237	360S104B
R56	000511	RES	CARBON	510 OHM		5% 1/4W	81349	RC07GF511J
R57	000752	RES	CARBON	7.5 K		5% 1/4W	81349	RC07GF752J
R58	000101	RES	CARBON	100 OHM		5% 1/4W	81349	RC07GF101J
R59	040113	POT	CERMET	100 K		10%	73138	89PV100K
R60	000515	RES	CARBON	5.1 M		5% 1/4W	81349	RC07GF515J
R61	010586	RES	METAL	5 K		.02%	18612	V53-1M
R62	010646	RES	METAL	2.49 K		1% 1/10W	81349	RN55C2491F
R63	000102	RES	CARBON	1 K		5% 1/4W	81349	RC07GF102J
R64	010586	RES	METAL	5 K		.02%	18612	V53-1M
R65	000306	RES	CARBON	30 M		5% 1/4W	81349	RC07GF306J
R66	000183	RES	CARBON	18 K		5% 1/4W	81349	RC07GF183J
R67	000156	RES	CARBON	15 M		5% 1/4W	81349	RC07GF156J
R68	040210	POT	CERMET	100 K		20% 1 W	11237	360S104B
R69	000392	RES	CARBON	3.9 K		5% 1/4W	81349	RC07GF392J
R70	000103	RES	CARBON	10 K		5% 1/4W	81349	RC07GF103J
R71	000202	RES	CARBON	2 K		5% 1/4W	81349	RC07GF202J
R72	000200	RES	CARBON	20 OHM		5% 1/4W	81349	RC07GF200J
R73	010585	RES	METAL	3.6 K		.02%	18612	V53-1

*In 50 Hz units, R32 is:

R32	010706	RES	METAL	121 K		1% 1/8W	81349	RN60D1213F

**Factory Selected Value

403432 – Assy., PCB, DIGITIZER *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
R74	000153	RES CARBON 15 K 5% 1/4W	81349	RC07GF153J
R77	000101	RES CARBON 100 OHM 5% 1/4W	81349	RC07GF101J
R78	000101	RES CARBON 100 OHM 5% 1/4W	81349	RC07GF101J
R79	000330	RES CARBON 33 OHM 5% 1/4W	81349	RC07GF330J
R80	000302	RES CARBON 3 K 5% 1/4W	81349	RC07GF302J
R81	040190	POT CERMET 500 OHM	73138	62PAR500
R82	000104	RES CARBON 100 K 5% 1/4W	81349	RC07GF104J
R83	040211	POT CERMET 500 OHM 20%	11237	360S Series
T1	300087	TRANSFORMER PULSE	21793	300087
T2	300087	TRANSFORMER PULSE	21793	300087
T3	300087	TRANSFORMER PULSE	21793	300087
TP1-6	600786	POST MACHINE APPLIED STRIP 1-87022-0	00779	1-87022-0

403430 – Assy., PCB, DISPLAY

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
CR1	211083	DIODE SILICO 018	21793	211083
CR2	211083	DIODE SILICO 018	21793	211083
CR3	211083	DIODE SILICO 018	21793	211083
CR4	211083	DIODE SILICO 018	21793	211083
CR5	211083	DIODE SILICO 018	21793	211083
CR6	211083	DIODE SILICO 018	21793	211083
CR7	211083	DIODE SILICO 018	21793	211083
CR8	211083	DIODE SILICO 018	21793	211083
CR9	211083	DIODE SILICO 018	21793	211083
CR10	211083	DIODE SILICO 018	21793	211083
CR11	210004	DIODE SILICO 1N4004	81349	1N4004
CR12	211083	DIODE SILICO 018	21793	211083
CR13	210004	DIODE SILICO 1N4004	81349	1N4004
CR14	210004	DIODE SILICO 1N4004	81349	1N4004
CR15	210004	DIODE SILICO 1N4004	81349	1N4004
CR16	211083	DIODE SILICO 018	21793	211083
CR17	211083	DIODE SILICO 018	21793	211083
CR18	211083	DIODE SILICO 018	21793	211083
CR19	211083	DIODE SILICO 018	21793	211083
CR20	220059	DIODE ZENER 33 V 5%	81349	1N973B
CR22	211083	DIODE SILICO 018	21793	211083
CR23	211083	DIODE SILICO 018	21793	211083
CR24	211083	DIODE SILICO 018	21793	211083
CR25	211083	DIODE SILICO 018	21793	211083
CR26	211083	DIODE SILICO 018	21793	211083
CR27	211083	DIODE SILICO 018	21793	211083
CR28	211083	DIODE SILICO 018	21793	211083
CR29	211083	DIODE SILICO 018	21793	211083
CR30	211083	DIODE SILICO 018	21793	211083
CR31	211083	DIODE SILICO 018	21793	211083
CR32	211083	DIODE SILICO 018	21793	211083
CR33	211083	DIODE SILICO 018	21793	211083
CR34	211083	DIODE SILICO 018	21793	211083
CR35	211083	DIODE SILICO 018	21793	211083
CR36	211083	DIODE SILICO 018	21793	211083
CR37	211083	DIODE SILICO 018	21793	211083
CR38	211083	DIODE SILICO 018	21793	211083
CR39	211083	DIODE SILICO 018	21793	211083
CR40	211083	DIODE SILICO 018	21793	211083
CR41	211083	DIODE SILICO 018	21793	211083

403430 -- Assy., PCB, DISPLAY *continued*

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
CR42	211083	DIODE SILICO 018	21793	211083
CR43	211083	DIODE SILICO 018	21793	211083
CR44	211083	DIODE SILICO 018	21793	211083
CR45	211083	DIODE SILICO 018	21793	211083
CR46	211083	DIODE SILICO 018	21793	211083
CR47	211083	DIODE SILICO 018	21793	211083
CR48	211083	DIODE SILICO 018	21793	211083
CR49	211083	DIODE SILICO 018	21793	211083
C1	120230	CAP POLY .015 MFD 33 V 1%	12406	PD8458
M1	230034	INTEGRATED CIRCUIT 74141	07263	74141
M2	230072	INTEGRATED CIRCUIT 7474	01295	7474
M3	230035	INTEGRATED CIRCUIT 7473	01295	7473
M4	230030	INTEGRATED CIRCUIT 7402	01295	7402
M5	230028	INTEGRATED CIRCUIT 7400	01295	7400
M6	230074	INTEGRATED CIRCUIT 7442	07263	7442
M7	230029	INTEGRATED CIRCUIT 7401	01295	7401
M8	230030	INTEGRATED CIRCUIT 7402	01295	7402
M9	230029	INTEGRATED CIRCUIT 7401	01295	7401
M10	230073	INTEGRATED CIRCUIT 7405	01295	7405
Q1	200087	TRANS SILICO 021	21793	200087
Q2	200087	TRANS SILICO 021	21793	200087
Q3	200087	TRANS SILICO 021	21793	200087
Q4	200087	TRANS SILICO 021	21793	200087
Q5	200087	TRANS SILICO 021	21793	200087
Q6	200087	TRANS SILICO 021	21793	200087
Q7	200087	TRANS SILICO 021	21793	200087
Q8	200087	TRANS SILICO 021	21793	200087
Q9	200087	TRANS SILICO 021	21793	200087
Q10	200087	TRANS SILICO 021	21793	200087
Q11	200087	TRANS SILICO 021	21793	200087
Q12	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q13	200037	TRANS SILICO NPN 2N3646	80131	2N3646
Q14	200087	TRANS SILICO 021	21793	200087
R1	000514	RES CARBON 510 K 5% 1/4W	81349	RC07GF514J
R2	000433	RES CARBON 43 K 5% 1/4W	81349	RC07GF433J

403430 – Assy., PCB, DISPLAY *continued*

REF DES	DANA P/N	DESCRIPTION				FSC	MANU P/N
R3	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R4	000514	RES	CARBON	510 K	5% 1/4W	81349	RC07GF514J
R5	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R6	000514	RES	CARBON	510 K	5% 1/4W	81349	RC07GF514J
R7	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R8	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R9	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R10	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R11	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R12	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R13	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R14	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R15	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R16	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R17	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R18	000433	RES	CARBON	43 K	5% 1/4W	81349	RC07GF433J
R19	000203	RES	CARBON	20 K	5% 1/4W	81349	RC07GF203J
R20	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R21	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R22	000302	RES	CARBON	3 K	5% 1/4W	81349	RC07GF302J
R23	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R24	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R25	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R26	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R27	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R28	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R29	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R30	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R31	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R32	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R33	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R34	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R35	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R36	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R37	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R38	000242	RES	CARBON	2.4 K	5% 1/4W	81349	RC07GF242J
R39*	010568	RES	METAL	1.54 K	.25% 1/10W	81349	RN55C1541C
R40	000242	RES	CARBON	2.4 K	5% 1/4W	81349	RC07GF242J
R41	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R42	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J

*In 50 Hz units, R39 is:

R39	010555	RES	METAL	1.82 K	1% 1/10W	81349	RN55C1821F

403430 – Assy., PCB, DISPLAY *continued*

REF DES	DANA P/N	DESCRIPTION				FSC	MANU P/N
R43	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R44	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R45	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R46	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R47	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R48	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R49	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R50	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R51	000621	RES	CARBON	620 OHM	5% 1/4W	81349	RC07GF621J
R52	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
S1	600675	SWITCH	ROTARY			11237	MOD 215
S2	600674	SWITCH	ROTARY			11237	MOD 215

403436 – Assy., PCB, PROGRAM

REF DES	DANA P/N	DESCRIPTION					FSC	MANU P/N
CR1	211083	DIODE	SILICO		018		21793	211083
CR2	211083	DIODE	SILICO		018		21793	211083
CR3	211083	DIODE	SILICO		018		21793	211083
CR4	211083	DIODE	SILICO		018		21793	211083
CR5	211083	DIODE	SILICO		018		21793	211083
CR6	211083	DIODE	SILICO		018		21793	211083
CR7	211083	DIODE	SILICO		018		21793	211083
CR8	211083	DIODE	SILICO		018		21793	211083
CR9	211083	DIODE	SILICO		018		21793	211083
C1	101099	CAP	CERAM	680 PFD	1 KV	10%	71471	SCD2X5F
C2	110152	CAP	TANTA	.47 MFD	50 V	10%	05397	T368A474K050AS
C3	110148	CAP	TANTA	.22 MFD	50 V	10%	05397	T368A224K050AS
C4	110153	CAP	TANTA	.27 MFD	50 V	10%	05397	KR27P50K
C5	121091	CAP	MYLAR	.033 MFD	100 V	10%	09023	WMF1S33
C6	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
C7	100017	CAP	CERAM	.01 MFD	100 V	20%	56289	C023B101F103M
J3	920795	SOCKET			14 PIN		52072	CA-14S-TSD-BC
J4	920795	SOCKET			14 PIN		52072	CA-14S-TSD-BC
M1	230029	INTEGRATED CIRCUIT			7401		01295	7401
M2	230029	INTEGRATED CIRCUIT			7401		01295	7401
M3	230029	INTEGRATED CIRCUIT			7401		01295	7401
M4	230064	INTEGRATED CIRCUIT			7404		01295	7404
M5	230064	INTEGRATED CIRCUIT			7404		01295	7404
M6	230073	INTEGRATED CIRCUIT			7405		01295	7405
M7	230028	INTEGRATED CIRCUIT			7400		01295	7400
M8	230032	INTEGRATED CIRCUIT			7420		01295	7420
M9	230030	INTEGRATED CIRCUIT			7402		01295	7402
M10	230029	INTEGRATED CIRCUIT			7401		01295	7401
Q1	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646
Q2	200136	TRANS	SILICO	NPN	2N5963		81349	2N5963
Q3	200136	TRANS	SILICO	NPN	2N5963		81349	2N5963
Q4	200136	TRANS	SILICO	NPN	2N5963		81349	2N5963
Q5	200136	TRANS	SILICO	NPN	2N5963		81349	2N5963
Q6	200136	TRANS	SILICO	NPN	2N5963		81349	2N5963
Q7	200088	TRANS	SILICO	PNP	2N4248		80131	2N4248
Q8	200037	TRANS	SILICO	NPN	2N3646		80131	2N3646

403436 – Assy., PCB, PROGRAM *continued*

REF DES	DANA P/N	DESCRIPTION				FSC	MANU P/N
R1	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R2	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R3	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R4	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R5	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R6	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R7	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R8	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R9	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R10	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R11	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R12	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R13	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R14	000512	RES	CARBON	5.1 K	5% 1/4W	81349	RC07GF512J
R15	000102	RES	CARBON	1 K	5% 1/4W	81349	RC07GF102J
R16	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R17	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R18	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R19	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R20	000202	RES	CARBON	2 K	5% 1/4W	81349	RC07GF202J
R21	000392	RES	CARBON	3.9 K	5% 1/4W	81349	RC07GF392J
R22	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R23	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R24	000101	RES	CARBON	100 OHM	5% 1/4W	81349	RC07GF101J
R25	010650	RES	METAL	1 M	1% 1/10W	81349	RN55E1004F
R26	010676	RES	METAL	15 K	1% 1/10W	81349	RN55C1502F
R27	010529	RES	METAL	10 K	1% 1/10W	81349	RN55C1002F
R28	000105	RES	CARBON	1 M	5% 1/4W	81349	RC07GF105J
R29	010697	RES	METAL	26.7 K	1% 1/10W	81349	RN55C2672F
R30	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R31	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R32	000242	RES	CARBON	2.4 K	5% 1/4W	81349	RC07GF242J
R33	000432	RES	CARBON	4.3 K	5% 1/4W	81349	RC07GF432J
R34	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R35	000103	RES	CARBON	10 K	5% 1/4W	81349	RC07GF103J
R36	000123	RES	CARBON	12 K	5% 1/4W	81349	RC07GF123J

CHASSIS-MOUNTED PARTS

REF DES	DANA P/N	DESCRIPTION	FSC	MANU P/N
J203	600619	CONN, RECPTLE POWER EAC-301	82389	EAC-301
J204	600673	CONN REAR INPUT 7 PIN TKR7-101	05574	TKR7-101
K8	310096	RELAY FRONT/REAR R10-E2033-1	24796	R10-E2033-1
Q32	200130	TRANS SILICO NPN MJE-3055	04713	MJE-3055
S8	920457	SWITCH FRONT/REAR SLIDE DPDT	79727	G-126
S9	600583	SWITCH POWER SPST 26-099-100	10389	26-099-100
T4	300059	TRANSFORMER POWER 115 V	23095	11615

DANA

U.S. AND CANADIAN REPRESENTATIVES

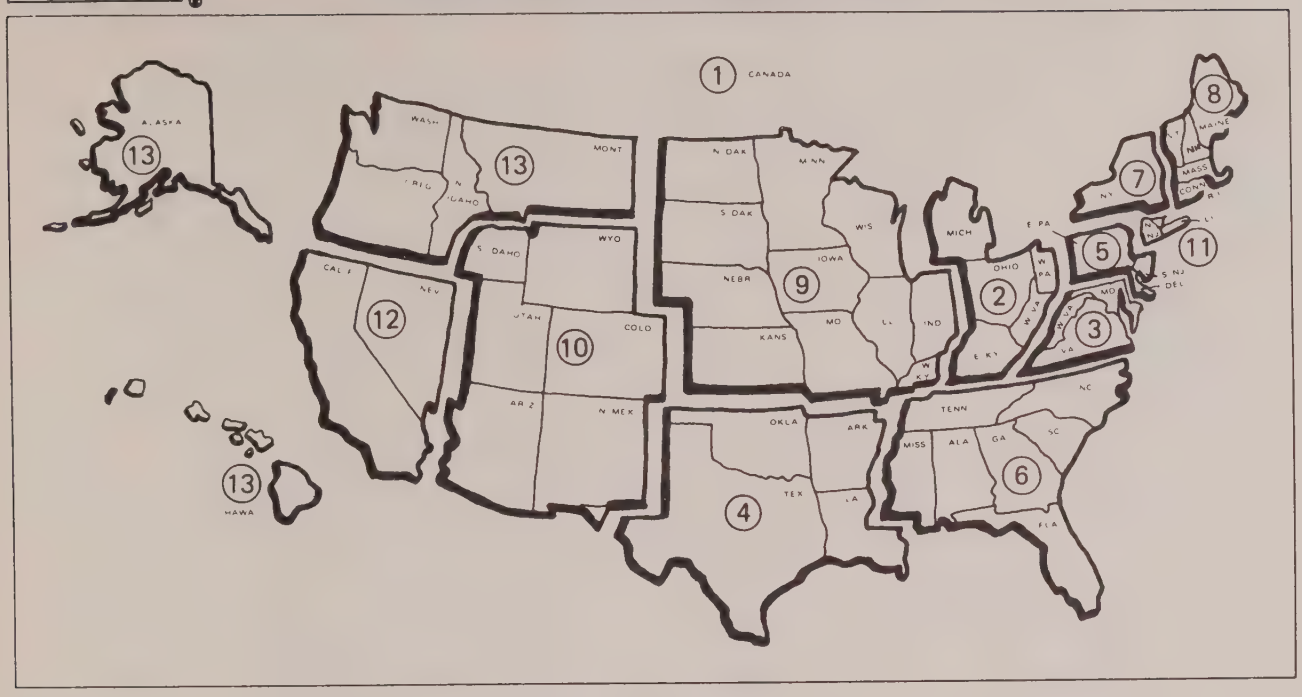

1 ASSOCIATED TEST EQUIPMENT LTD.

3530 Pharmacy Avenue
Scarborough, Ontario, MIW 2S7,
Telephone: (416) 497-2208
TWX: 610-492-0122

1320 Carling Avenue
Ottawa, Ontario, KIZ 7K9
Telephone: (613) 728-3717
TWX: 610-562-1930

3300 Cavendish Blvd., Suite 610
Montreal, Quebec H4B 2M8
Telephone: (514) 481-7733
TWX: 610-421-4443

6155 - 80th Street
Edmonton, Alberta T6E 2W8
Telephone: (403) 465-9474
TWX: 610-831-1842

1037 West Broadway, Suite 303
Vancouver, B.C., Canada
Telephone: (604) 734-2012

2 CARTER, McCORMIC & PEIRCE, INC.

23995 Freeway Park Drive
Farmington, Michigan 48024
Telephone: (313) 477-7700
TWX: 810-242-2986

5423 Webster Street
Dayton, Ohio 45414
Telephone: (513) 278-5873
TWX: 810-459-1613

21380 Lorain Road
Cleveland, Ohio 44126
Telephone: (216) 333-5650
TWX: 810-421-8304

409 Beatty Rd.
Monroeville, Pennsylvania 15146
Telephone: (412) 372-4415
TWX: None

3 CREATIVE MARKETING ASSOC.

6845 Elm, Suite 107
McLean, Virginia 22101
Telephone: (703) 893-6612
TWX: 710-833-0310

4 DATA MARKETING ASSOC.

3330 Bering Drive
Houston, Texas 77057
Telephone: (713) 780-2511
TWX: 910-881-2569

14235 Proton Road
Dallas, Texas 75240
Telephone: (214) 661-0300
TWX: 910-860-5483

8622 Crownhill, Suite 105
San Antonio, Texas 78209
Telephone: (512) 828-0937
TWX: 910-871-1033

1225 West Main Street, Suite 108
Norman, Oklahoma 73069
Telephone: (405) 364-8320
TWX: None

300 Huntland Avenue, Suite 210
Austin, Texas 78752
Telephone: (512) 451-5174
TWX: None

5 EASTERN INSTRUMENTATION OF PHILADELPHIA

613 West Cheltenham Avenue
Philadelphia, Pennsylvania 19126
Telephone: (215) 927-7777
TWX: 710-670-0949

6 GENTRY ASSOCIATES, INC.

550 N. Bumby Avenue
Orlando, Florida 32803
Telephone: (305) 894-4401
TWX: 810-850-0136

2109 W. Clinton Avenue, Rm 118
Huntsville, Alabama 35805
Telephone: (205) 534-9771
TWX: 810-726-2220

428 Alamance Road
Burlington, North Carolina 27215
Telephone: (919) 227-3639
TWX: 510-921-5751

960 Somerset Dr., N.W.
Atlanta, Georgia 30327
Telephone: (404) 237-7272
TWX: None

7 SDM REPRESENTATIVES, INC.

23 North Fairview Ave.
Paramus, New Jersey 07652
Telephone: (201) 368-0123
TWX: 710-990-5168

P.O. Box 8218 – 75 Kearney Dr.
Rochester, New York 14617
Telephone: (716) 544-8080
(Answering Service)
TWX: None

R.D. #3 Watkins Rd.
Frankfort, New York 13340
Telephone: (716) 544-8080
(Answering Service)
TWX: None

8 PAT JENKS ASSOCIATES

2315 Whitney Avenue
Hamden, Connecticut 06518
Telephone: (203) 281-0810
TWX: 710-465-2096

591 North Avenue, Door 3
Wakefield, Massachusetts 01880
Telephone: (617) 246-1590
TWX: 710-348-6559

9 PIVAN ENGINEERING CO.

3535 Peterson Avenue
Chicago, Illinois 60659
Telephone: (312) 539-4838
TWX: 910-221-0177

3307 North Highway 100
Minneapolis, Minnesota 55422
Telephone: (612) 537-4501
TWX: None

11734 Lackland Industrial Drive
St. Louis, Missouri 63141
Telephone: (314) 567-3636
TWX: None

5801 Outlook
Shawnee Mission, Kansas 66202
Telephone: (913) 722-1030
TWX: None

1259 West 86th Street
Indianapolis, Indiana 46260
Telephone: (317) 253-1681
TWX: 810-341-3308

3055 North Brookfield Road
Brookfield, Wisconsin 53005
Telephone: (414) 786-1940
TWX: None

PIVAN ENGINEERING continued

204 Collins Rd., N.E.
Cedar Rapids, Iowa 52405
Telephone: (319) 377-9434
TWX: None

10 PLS ASSOCIATES, INC.

7418 E. Princeton Avenue
Denver, Colorado 80237
Telephone: (303) 773-1218
TWX: None

4300 H Silver Avenue, S.E.
Albuquerque, New Mexico 87108
Telephone: (505) 255-2330
TWX: None

4331 Wells Fargo Ave., Suite B
Scottsdale, Arizona 85251
Telephone: (602) 957-9110
TWX: None

11 TECHNICAL MARKETING ASSOC.

2460 Lemoine Avenue
Fort Lee, New Jersey 07024
Telephone: (201) 224-6911
TWX: 710-991-9710

12 WARD/DAVIS ASSOCIATES

16722 South Hawthorne Blvd.
Lawndale, California 90260
Telephone: (213) 542-7740
TWX: None

757 E. Evelyn Avenue
Sunnyvale, California 94086
Telephone: (408) 245-3700
TWX: None

8934 Caminito Verano
La Jolla, California 92037
Telephone: (714) 459-3351
TWX: None

13 PACIFIC NORTHWEST ELECTRONICS

14264 S.E. Eastgate Way
Bellevue, Washington 98007
Telephone: (206) 641-6444
TWX: None

3085 West View Circle
Lake Oswego, Oregon 97034
Telephone: (503) 636-0965
TWX: None

DANA U.S. AND CANADIAN SERVICE CENTERS

AUTHORIZED SERVICE CENTERS

(1) **BALL BROTHERS RESEARCH CORP**
P.O. Box 1062
Boulder Industrial Park
Boulder, Colorado 80302
Telephone: (303) 441-4786

(2) **DMA ENGINEERING SERVICES**
14235 Proton Road
Dallas, Texas 75240
Telephone: (214) 661-0300
TWX 910 860 5483

(3) **HONEYWELL, INC.**
5558 Port Royal Road
Springfield, Virginia 22151
Telephone: (703) 321-8356

(4) **AMPOWER ELECTRONIC INSTRUMENT CO., INC.**
500 Union Blvd.
Totowa, New Jersey 07512
Telephone: (201) 742 3215

(6) **PIVAN SERVICE**
3535 Peterson Avenue
Chicago, Illinois 60659
Telephone: (312) 539-4838
TWX: 910 221 0177

(7) **BROWNELL-ELECTRO**
3020 Commerce Way
Atlanta, Georgia 30354
Telephone: (404) 762 5181

(8) 307 27th Street
Orlando, Florida 32806
Telephone: (305) 843-6775

(9) 5141 Belhaven Blvd.
Charlotte, North Carolina 28216
Telephone: (704) 394-4341

(10) 3053 Tranquility Drive
Memphis, Tennessee 38116
Telephone: (901) 332-9258

(11) 1050 Acorn Drive
Nashville, Tennessee 37210
Telephone: (615) 889-8230

(12) 3450 Armour Drive
Mobile, Alabama 76607
Telephone: (205) 479-8581

(13) **STAUS ENGINEERING**
1900 Tyler Avenue, Unit 26
South El Monte, California 91733
Telephone: (213) 442-3634

(14) **VALLEY INSTRUMENT COMPANY**
491 Clover Mill Road
Exton, Pennsylvania 19431
Telephone: (215) 363 2650

(15) **VIKING LABS, INC.**
440 Bernardo Avenue
Mountain View, California 94043
Telephone: (415) 969 5500

(16) **SSCO STANDARDS LABORATORY**
8720 Northend Avenue
Oak Park, Michigan 48237
Telephone (313) 398 2100

(17) **CANADA**
ASSOCIATED TEST EQUIPMENT LTD
3530 Pharmacy Avenue
Scarborough, Ontario M1W 2S7
Telephone: (416) 497 2208
TWX 610 492 0122

FACTORY SERVICE LOCATIONS

(A) **DANA LABORATORIES, INC.**
2401 Campus Drive
Irvine, California 92664
Telephone: (714) 833-1234

(B) **DANA NEW ENGLAND**
591 North Ave., Door 3
Wakefield, Massachusetts 01880
Telephone. (617) 246-1590

PRODUCT SERVICE TWX 910-595-1539

4-77

DANA. INTERNATIONAL REPRESENTATIVES AND SERVICE CENTERS

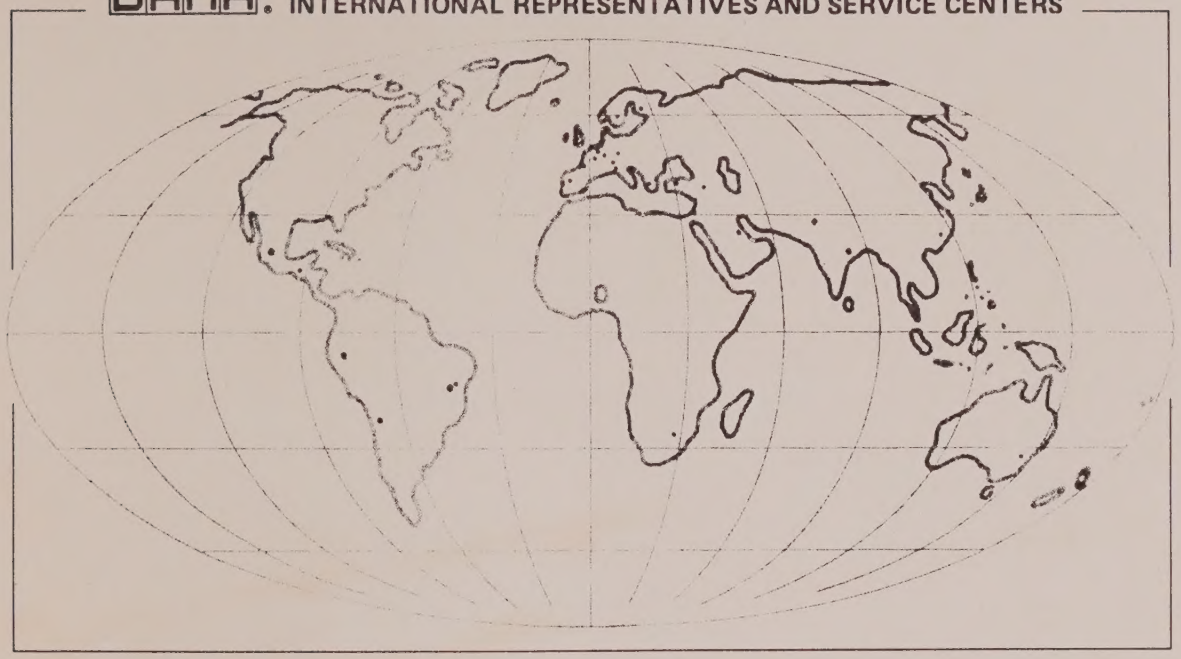

ARGENTINA
Niviko S.A.C.I.
Caseros 2060/62
Buenos Aires—Argentina 1264
Telephone: 26-7018-8363
Cables: MARSARG BAIRES

AUSTRALIA
Jacoby Mitchell & Company
P.O. Box 70
Kingsgrove, N.S.W. 2208
Australia
Telephone: 50-0111
Telex: 21123 ACOB AA

AUSTRIA
International Engineering Services
Veitingergasse 159-161
P.O. Box 30
1133 Vienna, Austria
Telephone: 0222-829366
Telex: 13075 VIENG-A

BELGIUM/LUXEMBOURG
M C R Electronics Marketing
Chaussee de Bruxelles, 382
1410 Waterloo, Belgium
Telephone: 354-9218
Telex: 62569 MCR B

BRAZIL
Altmann, S.A. Importacao
P.O. Box 3562
Cep. 01030 Sao Paulo, Brazil
Telephone: 35-8660
Cables: OLDMAN

CHILE
Alta Internacional
Dr. Sotero del Rio 326-Of. 903
Santiago 1, Chili
Telephone: 723740
Telex: 260 SGO

DENMARK
Metric A/S
Skodsborgvej 305
DK 2850 Naerum, Denmark
Telephone: 01-804200
Telex: 15763 METRIC DK

EASTERN EUROPE
Kontron GmbH & Co KG
Ameisgasse 49
A-1140 Vienna, Austria
Telephone: 94 5646
Telex: 11699 KONIN A

FINLAND
Finn Metric Oy
Ahertajantie 6 D
02101 Tapiola PL 6, Finland
Telephone: 90-460-844
Telex: 122018 TRIC SF

FRANCE
Dana Electronics France, S.A.
91 Route des Gardes
92 Meudon-Bellevue, France
Telephone: 027-7575
Telex: 200207 DANA FRA 200207F

GERMANY
Simac GmbH
Riedstrasse 8C
6100 Darmstadt, Germany
Telephone: 650546
Telex: 419644 DANA D

GREECE
American Technical Enterprises
Tositsa 7
P.O. Box 156
Athens 148, Greece
Telephone: 8219.470
Telex: 216046 ATE GR

HONG KONG
K & M Corporation
G.P.O. Box 1506
Hong Kong
Telephone: 5-433873
Telex: 780-85149 RISHK HX

INDIA
Trans Marketing Private Ltd.
Sterling Centre
16/2 Dr. Annie Besant Rd.
Bombay 400 018, India
Telephone: 456231
Telex: 953 0115424 LORDEX

IRAN
International S.I.T.
16, 2nd Street Pakestan Ave.
Abbasabad
P.O. Box 14/1975
Tehran, Iran
Telephone: 623723
Telex: 951 215013 TEK IR

ISRAEL
Racom Electronics Ltd.
P.O. Box 21120
60 Pinkas Street
Tel-Aviv 61210, Israel
Telephone: 03-453151
Telex: 33808 RACEL IL

ITALY
Elettronucleonica S.P.A.
Piazza de Angeli, 7
20146 Milan, Italy
Telephone: 39/2-4982451
Telex: 39033 NUCLEON

JAPAN
Japan Aviation Electronics
21-6 Dogenzaka 1-chome
Shibuya-ku, Tokyo, Japan
Telephone: 463-3111
Telex: 2423345 JAE

KOREA
M-C International
717 Market Street
San Francisco, CA 94103

M-C International (Korea) Ltd.
P.O. Box 1355
91-1 Sokongdong
Seoul, Korea
Telephone: 23-4101
Telex: 7872428

MEXICO
Valterdi, S.A.
Apartado Postal 94-112
Mexico 10, D.F.
Telex: 0-1773942

NETHERLANDS
Simac Electronics B.V.
Veenstraat 20
Veldhoven, Netherlands
Telephone: 040-533725
Telex: 51037 SIMAC NL

NEW ZEALAND
S.D. Mandeno Electronic Equipment Co.
10 Woodhall Road
Auckland 3, New Zealand
Telephone: 600-008
Cables: NUCLEONIC

NORWAY
Metric A.S.
P.O. Box 85, Bekkelagshogha
Oslo 11, Norway
Telephone: 02-282-624
Telex: 18461 METRC N

PAKISTAN
Bibojee Services Ltd.
P.O. Box 632
Karachi, Pakistan
Telephone: 21 45 45
Telex: 3600 GN BIBO KR

PERU
Sitel, S.A.
Av. Hipolito Unanue 479
Lima 14, Peru
Telephone: 224869
Telex: 25613

PORTUGAL
Magnetrom, SARL
Rua Fialho de Almeida 5-2 Dto.
Lisbon 1, Portugal
Telephone: 57-19-16
Cables: MAGNETROM

SINGAPORE
O'Connor's (Pte) Limited
O'Connor House
98, Pasir Panjang Road
Singapore 5
Telephone: 637944
Telex: 21023 OCONSIN RS21023

SOUTH AFRICA
Associated Electronics, Ltd.
P.O. Box 31094, Braamfontein
Johannesburg, South Africa
Telephone: 724-5395
Telex: 88432 SA

SPAIN
Anadig Ingenieros
Amado Nervo, 3
Madrid 7, Spain
Telephone: 433-24-12
Telex: 43104 ADIG E

SWEDEN
Saven AB
Strandgatan 3
18500 Vaxholm, Sweden
Telephone: 764-31580
Telex: 11309 SAVENIC S

SWITZERLAND
Stolz AG
Junkholz 333
8968 Mutschellen, Switzerland
Telephone: 41/57-54655
Telex: 54070 STLZ CH

TAIWAN
Penz Trading Company
P.O. Box 7-240
Taipei, Taiwan
Telephone: (02) 3911452
Telex: 22143 SUCHIANG

TURKEY
Turkelek Elektronik Ltd.
Ataturk Blvd., 169
Ankara, Turkey
Telephone: 189483
Telex: 42120 GRKL TR

UNITED KINGDOM
Dana Electronics, Limited
112 Collingdon Street
Luton, Bedfordshire, England
Telephone: 0582-24236
Telex: 82430 DANA LABS LUTON

YUGOSLAVIA
Belram Electronics S.A.
Avenue des Mimosas 83
1150 Brussels, Belgium
Telephone: 02-734.26.19
Telex: 21790 BELRAM B

www.manualsplus.com
1014040